



B.R.S.I.S. V

SERVICE MANUAL



CREDITS/COPYRIGHT

©2001-2002 Best Lock Corporation dba Best Access Systems. All rights reserved. Printed in the United States of America.

Information in this document is subject to change without notice and does not represent a commitment on the part of Best Access Systems. The software described in this document are furnished under a license agreement or nondisclosure agreement.

This publication is intended to be an accurate description and set of instructions pertaining to its subject matter. However, as with any publication of this complexity, errors or omissions are possible. Please call your BEST distributor or Best Access Systems at (317) 849-2250 if you see any errors or have any questions. No part of this manual and/or databases may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose, without the express written permission of Best Access Systems.

This document is distributed as is, without warranty of any kind, either express or implied, respecting the contents of this book, including but not limited to implied warranties for the publication's quality, performance, merchantability, or fitness for any particular purpose. Neither Best Access Systems, nor its dealers or distributors shall be liable to the user or any other person or entity with respect to any liability, loss, or damage caused or alleged to be caused directly or indirectly by this publication.

The Best Access Systems logo and B.A.S.I.S. are registered trademarks of Best Lock Corporation.

The Life Safety Code is a registered trademark of the National Fire Protection Association.

Von Duprin is a registered trademark of Von Duprin, Inc.

Lubriplate is a registered trademark of Fiske Brothers Refining Company.

Written and designed by Best Access Systems and Avalon Group, Inc., Indianapolis, Indiana.

T61805 Rev A 1838789 ER-7991-6 July 2002

CONTENTS

FIGURES IX

GETTING STARTED 1-1

- Introduction 1-1
- B.A.S.I.S. V product overview 1-2
 - System overview 1-2
 - Mortise lock overview 1-4
 - Cylindrical lock overview 1-4
- Certifications and standards 1-5
 - B.A.S.I.S. V Locks 1-5
 - Mortise locks 1-5
 - Cylindrical locks 1-5
 - Exit hardware trim 1-5
- Documentation package 1-6
- Technical support 1-8
 - Support services 1-8
 - Telephone technical support 1-8

STANDARD FUNCTIONS AND PARTS 2-1

- Function descriptions 2-2
 - Mortise functions 2-2
 - Cylindrical function 2-4
- Trim components 2-5
 - Magnetic stripe reader and trim 2-5
 - Smart card reader and trim 2-8
 - Dual validation reader and trim 2-11
 - Proximity reader and trim 2-14

Mortise components	2-17
Mortise case	2-17
Other mortise components	2-19
Cylindrical components	2-21
Cylindrical chassis	2-22
Other cylindrical lock components	2-23

EXIT HARDWARE TRIM FUNCTIONS AND PARTS 3-1

Function descriptions	3-2
Trim components	3-3
Magnetic stripe reader and trim	3-3
Smart card reader and trim	3-6
Dual validation reader and trim	3-9
Proximity reader and trim	3-12
Cylinders and related components	3-15
Mortise cylinder and related components	3-15
Rim cylinder and related components	3-16
Levers	3-17

SHARED STANDARD AND EXIT HARDWARE TRIM PARTS 4-1

Reader conversion	4-2
Converting to a magnetic stripe reader	4-2
Converting to a smart card reader	4-2
Converting to a dual validation reader	4-2
Converting to an HID or a Motorola proximity reader	4-2
Tasks to perform for converting	4-2
Field replacement kits	4-4
Reader kits	4-4
Control electronics kits	4-5
Battery kits	4-5
Lens cover kit	4-6
Cable and harness kits for standard B.A.S.I.S. Locks	4-6
Screw kits	4-7
Shared internal screw kits	4-7
Upper escutcheon screw kits for all standard B.A.S.I.S. Locks	4-7
Lower escutcheon screw kits for standard B.A.S.I.S. Locks with brass escutcheons	4-8
Lower escutcheon screw kits for standard B.A.S.I.S. Locks with zinc escutcheons	4-8
Battery door screw kits for standard B.A.S.I.S. Locks	4-9
Screw and spring kits for EX Series Exit Hardware Trim	4-9
Internal part kits for EX Series Exit Hardware Trim	4-10
Sensor module kits for standard B.A.S.I.S. Locks	4-10
Other system components	4-11

SERVICING STANDARD MORTISE TRIM PARTS 5-1

- Servicing the levers 5-2
 - Removing the levers 5-2
 - Reinstalling the levers 5-2
- Servicing the inside and outside escutcheons 5-3
 - Removing the inside and outside escutcheons 5-3
 - Reinstalling the inside and outside escutcheons 5-6
- Servicing the mounting plates 5-13
 - Removing the mounting plates 5-13
 - Reinstalling the mounting plates 5-13
- Servicing the core 5-14
 - Removing the core 5-14
 - Reinstalling the core 5-14
- Servicing the mortise case faceplate 5-15
 - Removing the mortise case faceplate 5-15
 - Reinstalling the mortise case faceplate 5-15
- Servicing the cylinder 5-16
 - Removing the cylinder 5-16
 - Reinstalling the cylinder 5-16

SERVICING STANDARD MORTISE CASE PARTS 6-1

- Servicing the mortise case 6-2
 - Removing and opening the mortise case 6-2
 - Closing and reinstalling the mortise case 6-2
- Changing the hand and bevel 6-3
 - Changing hand and bevel quick reference 6-3
 - Changing the hand only 6-5
 - Changing the bevel only 6-5
 - Changing the hand and bevel 6-5
 - Tasks for changing the hand and bevel 6-6
 - Turning over the hubs 6-6
 - Turning over the cylinder clamp plate 6-7
 - Turning over the auxiliary bolt 6-8
 - Turning over the latchbolt 6-9
- Function conversion 6-10
 - Removing key override 6-10
 - Adding key override 6-11
 - Adding a deadbolt 6-12
 - Removing a deadbolt 6-12
- Servicing parts in the mortise case 6-14
 - Servicing the motor module 6-14
 - Removing the motor module 6-14
 - Reinstalling the motor module 6-15

Servicing the sensor module	6-16
Removing the sensor module	6-16
Reinstalling the sensor module	6-16
Servicing the deadbolt, turn knob hub, and spacer	6-17
Removing the deadbolt, turn knob hub, and spacer	6-17
Reinstalling the deadbolt, turn knob hub, and spacer	6-18
Servicing the cylinder clamp plate	6-19
Removing the cylinder clamp plate	6-19
Reinstalling the cylinder clamp plate	6-19

SERVICING CYLINDRICAL PARTS 7-1

Servicing the core and throw member	7-2
Removing the core and throw member	7-2
Reinstalling the core and throw member	7-2
Servicing the levers	7-3
Removing the levers	7-3
Removing the keyed lever	7-3
Removing the plain lever	7-3
Reinstalling the levers	7-4
Servicing the inside and outside escutcheons	7-5
Removing the inside and outside escutcheons	7-5
Reinstalling the inside and outside escutcheons	7-8
Servicing the rose liners	7-15
Removing the rose liners	7-15
Reinstalling the rose liners	7-16
Servicing the cylindrical chassis	7-18
Removing the cylindrical chassis	7-18
Reinstalling the cylindrical chassis	7-18

SERVICING EXIT HARDWARE TRIM PARTS 8-1

Servicing the battery cover	8-2
Removing the battery cover	8-2
Reinstalling the battery cover	8-3
Servicing the battery pack	8-4
Removing the battery pack	8-4
Reinstalling the battery pack	8-5
Servicing the battery bracket	8-6
Removing the battery bracket	8-6
Reinstalling the battery bracket	8-7
Servicing the exit hardware	8-8
Removing the exit hardware	8-8
Reinstalling the exit hardware	8-8
Servicing the core	8-9
Removing the core	8-9
Reinstalling the core	8-9

Servicing the cylinder	8-10
Removing the mortise cylinder	8-10
Reinstalling the mortise cylinder	8-10
Removing the rim cylinder for Precision Hardware installations	8-11
Reinstalling the rim cylinder for Precision Hardware installations	8-11
Removing the rim cylinder for Von Duprin installations	8-12
Reinstalling the rim cylinder for Von Duprin installations	8-12
Servicing the B.A.S.I.S. escutcheon	8-13
Removing the escutcheon	8-13
Reinstalling the escutcheon	8-14

SERVICING STANDARD OUTSIDE ESCUTCHEON PARTS 9-1

Servicing the escutcheon gasket	9-2
Removing the escutcheon gasket	9-2
Reinstalling the escutcheon gasket	9-2
Servicing the lens covers	9-3
Removing the lens covers	9-3
Reinstalling the lens covers	9-3
Servicing the harness clamp	9-4
Removing the harness clamp	9-4
Reinstalling the harness clamp	9-4
Servicing the upgrade cable	9-5
Removing the upgrade cable	9-5
Reinstalling the upgrade cable	9-5
Servicing the sensor harness	9-6
Removing the sensor harness	9-6
Reinstalling the sensor harness	9-6
Servicing the primary harness	9-7
Removing the primary harness	9-7
Reinstalling the primary harness	9-8
Servicing the control electronics boards	9-10
Removing the magnetic stripe control electronics board	9-10
Reinstalling the magnetic stripe control electronics board	9-11
Removing the smart card control electronics board	9-12
Reinstalling the smart card control electronics board	9-13
Removing the dual validation control electronics board	9-15
Reinstalling the dual validation control electronics board	9-15
Removing the proximity control electronics board	9-16
Reinstalling the proximity control electronics board	9-17
Servicing the reader assemblies	9-19
Removing the magnetic stripe reader assembly	9-19
Reinstalling the magnetic stripe reader assembly	9-21
Removing the smart card reader assembly	9-22
Reinstalling the smart card reader assembly	9-24

Removing the dual validation reader assembly	9-25
Reinstalling the dual validation reader assembly	9-27
Removing the proximity reader assembly	9-28
Reinstalling the proximity reader assembly	9-29

SERVICING EXIT HARDWARE TRIM ESCUTCHEON PARTS 10-1

Servicing the mounting standoffs	10-2
Removing the mounting standoffs	10-2
Reinstalling the mounting standoffs	10-2
Servicing the escutcheon gasket	10-3
Removing the escutcheon gasket	10-3
Reinstalling the escutcheon gasket	10-3
Servicing the lift finger	10-4
Removing the lift finger	10-4
Reinstalling the lift finger	10-5
Servicing the mounting plate	10-6
Removing the mounting plate	10-6
Reinstalling the mounting plate	10-7
Servicing the lever return springs	10-8
Removing the lever return springs	10-8
Reinstalling the lever return springs	10-8
Servicing the lens covers	10-9
Removing the lens covers	10-9
Reinstalling the lens covers	10-9
Servicing the primary harness	10-9
Removing the primary harness	10-10
Reinstalling the primary harness	10-10
Servicing the control electronics boards	10-10
Removing the magnetic stripe control electronics board	10-10
Reinstalling the magnetic stripe control electronics board	10-11
Removing the smart card control electronics board	10-11
Reinstalling the smart card control electronics board	10-11
Removing the dual validation control electronics board	10-11
Reinstalling the dual validation control electronics board	10-12
Removing the proximity control electronics board	10-13
Reinstalling the proximity control electronics board	10-13
Servicing the reader assemblies	10-13
Removing the magnetic stripe reader assembly	10-13
Reinstalling the magnetic stripe reader assembly	10-14
Removing the smart card reader assembly	10-14
Reinstalling the smart card reader assembly	10-14
Removing the dual validation reader assembly	10-14
Reinstalling the dual validation reader assembly	10-15
Removing the proximity reader assembly	10-15
Reinstalling the proximity reader assembly	10-15

Servicing the motor assembly	10-16
Removing the motor assembly	10-16
Reinstalling the motor assembly	10-17
Servicing the locking plate	10-20
Removing the locking plate	10-20
Reinstalling the locking plate	10-21
Servicing the yoke	10-22
Removing the yoke	10-22
Reinstalling the yoke	10-23
Servicing the beam and beam roller	10-24
Removing the beam and beam roller	10-24
Reinstalling the beam and beam roller	10-25
Servicing the lever assembly	10-26
Removing the lever assembly	10-26
Reinstalling the lever assembly	10-27
Servicing the shear pin	10-28
Removing the shear pin	10-28
Reinstalling the shear pin	10-29
Changing the handing	10-30

MAINTENANCE 11-1

Replacing the backup battery	11-2
Removing the backup battery	11-2
Reinstalling the backup battery	11-3
Replacing or upgrading the battery pack	11-4
Removing the battery pack for a standard lock	11-4
Reinstalling the battery pack for a standard lock	11-6
Removing the battery pack for exit hardware trim	11-8
Reinstalling the battery pack for exit hardware trim	11-9
Adding key override sensing to Standard B.A.S.I.S. Mortise Locks	11-10
Performing diagnostics using a PDA	11-13
Diagnostics overview	11-13
Viewing diagnostics information	11-14
Changing a lock's online mode	11-18
Unlocking a door temporarily	11-19
Resetting the use count	11-19
Clearing the diagnostics code	11-20

TROUBLESHOOTING 12-1

Visual and audible response quick reference	12-2
Enabling communications without a card or password	12-3
Opening a standard B.A.S.I.S. Lock with dead batteries	12-6
Responding to problems	12-7

LOCK HISTORY EVENT TYPES A-1

INSTALLATION INSTRUCTIONS B-1

INDEX C-1

FIGURES

GETTING STARTED

- System overview diagram 1-3
- Mortise lock overview diagram 1-4
- Cylindrical lock overview diagram 1-4

STANDARD FUNCTIONS AND PARTS

- Understanding mortise function drawings 2-2
- Understanding the cylindrical function drawing 2-4
- Cylindrical chassis diagram 2-21
- Other cylindrical lock components 2-23

EXIT HARDWARE TRIM FUNCTIONS AND PARTS

- Mortise cylinder and related components diagram 3-15
- Rim cylinder and related components diagram 3-16
- Levers diagram 3-17

SHARED STANDARD AND EXIT HARDWARE TRIM PARTS

- Other system components diagram 4-11

SERVICING STANDARD MORTISE TRIM PARTS

- Removing and reinstalling the levers 5-2
- Removing the battery door (four-cell door shown) 5-3
- Removing the battery pack (four-cell pack shown) 5-4
- Removing the inside escutcheon 5-4
- Disconnecting the motor connector and sensor connector 5-5
- Removing the bushings and trim hole inserts 5-5

Locating the backup battery tab	5-6
Reinstalling the trim hole inserts and bushings	5-7
Feeding the wire harness connectors through the harness hole	5-8
Making the motor connection and sensor connections	5-9
Securing the escutcheons	5-10
Reinstalling the battery pack (four-cell pack shown)	5-11
Reinstalling the battery door (four-cell door shown)	5-12
Removing and reinstalling the mounting plates	5-13
Removing and reinstalling the core	5-14
Removing and reinstalling the mortise case faceplate	5-15
Removing and reinstalling the cylinder	5-16

SERVICING STANDARD MORTISE CASE PARTS

Removing and reinstalling the mortise case	6-2
Explanation of the hand and bevel of the door	6-3
Motor module and locking bar in place	6-7
Turning over the auxiliary bolt	6-8
Latchbolt with anti-friction latch lever in position	6-9
Removing and reinstalling the motor module	6-14
Positioning the turn knob hub and deadbolt spring	6-18
Removing and reinstalling the cylinder clamp plate	6-19

SERVICING CYLINDRICAL PARTS

Removing the core and throw member	7-2
Reinstalling the core and throw member	7-2
Removing the keyed lever	7-3
Removing the plain lever	7-3
Reinstalling the levers	7-4
Removing the battery door (four-cell door shown)	7-5
Removing the battery pack (four-cell pack shown)	7-6
Removing the escutcheon	7-6
Disconnecting the motor connector	7-7
Removing the bushings, trim hole inserts, and hub washers	7-7
Locating the backup battery tab	7-8
Reinstalling the bushings, trim hole inserts, and hub washers	7-9
Feeding the wire harness connectors through the harness hole	7-10
Connecting the motor connector	7-11
Securing the escutcheons	7-12
Reinstalling the battery pack (four-cell pack shown)	7-13
Reinstalling the battery door (four-cell door shown)	7-14

Removing the inside rose liner	7-15
Removing the outside rose liner	7-15
Reinstalling the outside rose liner	7-16
Reinstalling the inside rose liner	7-17

SERVICING EXIT HARDWARE TRIM PARTS

Removing and reinstalling the battery cover on the battery bracket	8-2
Removing and reinstalling the battery pack	8-4
Removing and reinstalling the battery bracket on the door	8-6
Removing and reinstalling the com port in the battery bracket	8-6
Removing and reinstalling the core	8-9
Mortise cylinder components	8-10
Rim cylinder components	8-11
Removing and reinstalling the rim cylinder for Precision Hardware installations	8-11
Removing and reinstalling the rim cylinder for Von Duprin installations	8-12
Removing and reinstalling the escutcheon	8-13

SERVICING STANDARD OUTSIDE ESCUTCHEON PARTS

Removing and reinstalling the escutcheon gasket	9-2
Removing and reinstalling the lens covers (smart card reader shown)	9-3
Removing and reinstalling the harness clamp (smart card reader shown)	9-4
Removing and reinstalling the upgrade cable (smart card reader shown)	9-5
Removing and reinstalling the sensor harness (smart card reader shown)	9-6
Removing and reinstalling the primary harness from the electronics board (smart card reader shown)	9-7
Disconnecting the sounder and com port from the outside escutcheon	9-8
Connecting the sounder and com port to the outside escutcheon	9-9
Removing and reinstalling the magnetic stripe control electronics board	9-10
Removing and reinstalling the smart card control electronics board	9-12
Disconnecting the flex cable from the smart card control electronics board	9-13
Connecting the flex cable to the smart card control electronics board	9-14
Removing and reinstalling the dual validation control electronics board	9-15
Removing and reinstalling the proximity control electronics board	9-17
Removing and reinstalling the screws for the magnetic stripe reader assembly	9-19
Removing the magnetic stripe reader assembly from the outside escutcheon	9-20
Positioning the magnetic stripe reader assembly	9-21
Removing and reinstalling the screws for the smart card reader assembly	9-22

Removing the smart card reader assembly from the outside escutcheon	9-23
Positioning the smart card reader assembly	9-24
Removing and reinstalling the screws for the dual validation reader assembly	9-25
Removing the dual validation reader assembly from the outside escutcheon	9-26
Positioning the dual validation reader assembly	9-27
Removing the proximity reader assembly from the outside escutcheon	9-28
Positioning the proximity reader assembly	9-29

SERVICING EXIT HARDWARE TRIM ESCUTCHEON PARTS

Removing and reinstalling the mounting standoffs	10-2
Removing and reinstalling the escutcheon gasket	10-3
Removing and reinstalling the lift finger (Precision Hardware rim configuration shown)	10-4
Removing and reinstalling the mounting plate	10-6
Removing and reinstalling the lever return springs	10-8
Removing the motor assembly	10-16
Rotating the motor assembly gear	10-17
Routing the motor harness	10-18
Reinstalling the motor assembly	10-19
Removing and reinstalling the locking plate	10-20
Reinstalling the locking plate	10-21
Removing and reinstalling the yoke	10-22
Removing and reinstalling the c-clip	10-24
Removing and reinstalling the beam and beam roller	10-25
Removing and reinstalling the lever assembly	10-26
Removing and reinstalling the shear pin	10-28
Changing the handing	10-31

MAINTENANCE

Removing the backup battery (escutcheon for standard mortise lock shown)	11-2
Reinstalling the backup battery (escutcheon for standard mortise lock shown)	11-3
Removing the battery door (four-cell door shown)	11-4
Removing the battery pack (four-cell pack shown)	11-5
Reinstalling the battery pack (eight-cell pack shown)	11-6
Reinstalling the battery door (eight-cell door shown)	11-7
Removing and reinstalling the battery cover on the battery bracket	11-8
Removing and reinstalling the battery pack	11-8

Connecting the sensor harness to the electronics board	11-10
Removing the V Series sensor switch assembly	11-11
B.A.S.I.S. Transport Diagnostics window and Diagnostics Codes window	11-13
Connecting the PDA to a standard lock	11-15
Locating the communication port for exit hardware trim	11-15
Starting B.A.S.I.S. Transport	11-16
Disconnecting the programming cable from the lock	11-17

TROUBLESHOOTING

Enabling communications with the password override button (escutcheon for standard mortise lock shown)	12-4
Connecting the programming cable to the lock	12-6

1

GETTING STARTED

INTRODUCTION

The *B.A.S.I.S. V Service Manual* contains essential information to help you maintain your B.A.S.I.S. V Locks and EX Series Exit Hardware Trim.

Throughout this manual, the term standard B.A.S.I.S. V Locks is used to refer to 35HBV Mortise Locks and 93KBV-95KBV Cylindrical Locks.

The term EX Series Exit Hardware Trim refers to EXBV Exit Hardware Trim. B.A.S.I.S. EX Series Exit Hardware Trim is available for use with the following types of exit devices manufactured by Precision Hardware (1000 Series and 2000 Series) and Von Duprin (98/99 Series):

- rim
- mortise
- surface vertical rod
- concealed vertical rod.

Standard B.A.S.I.S. V Locks and EX Series Exit Hardware Trim are available with the following types of readers:

- magnetic stripe card readers
- smart card readers
- dual validation (magnetic stripe card/keypad) readers
- Motorola and HID proximity card readers.

B.A.S.I.S. V PRODUCT OVERVIEW

System overview **Figure 1.1** shows the components of the B.A.S.I.S. V system. The table below defines each of the components in the system.

Components	Definition
Magnetic stripe card encoder	Device that reads, encodes, and erases information on a magnetic stripe card.
Smart card encoder (not shown)	Device that reads, encodes, and erases information on a smart card.
Magnetic stripe electronic lock	A battery-powered, self-contained, programmable lock that uses standard magnetic stripe cards and controls access to a door.
Smart card electronic lock (not shown)	A battery-powered, self-contained, programmable lock that uses smart cards and controls access to a door.
Dual validation electronic lock (not shown)	A battery-powered, self-contained, programmable lock that uses standard magnetic stripe cards and PINs, and controls access to a door.
Proximity card electronic lock (not shown)	A battery-powered, self-contained, programmable lock that uses proximity cards and controls access to a door.
Exit hardware trim (not shown)	B.A.S.I.S. escutcheon assembly (including B.A.S.I.S. reader and control electronics) and external battery compartment used with mortise, rim, concealed vertical rod, and surface vertical rod exit hardware (panic) devices.
PDA running B.A.S.I.S. Transport software	Device that lets you transfer reader configurations from B.A.S.I.S. 2002 System Administration to the locks, transfer history records from B.A.S.I.S. Locks and EX Series Exit Hardware Trim to System Administration, and view diagnostics information for B.A.S.I.S. Locks and EX Series Exit Hardware Trim.
B.A.S.I.S. 2002 software	Software that lets you define programming settings and the user database for groups of locks, as well as individual locks. The software lets you view and print information about locks at any time.
Access card	A card containing identification information. A card is given to a user and is similar to a key, letting the user gain access to a controlled area.
Programming cable	A cable for connecting B.A.S.I.S. Locks and Exit Hardware Trim to the serial cable.
Serial cable	A cable for connecting the programming cable to the PDA.

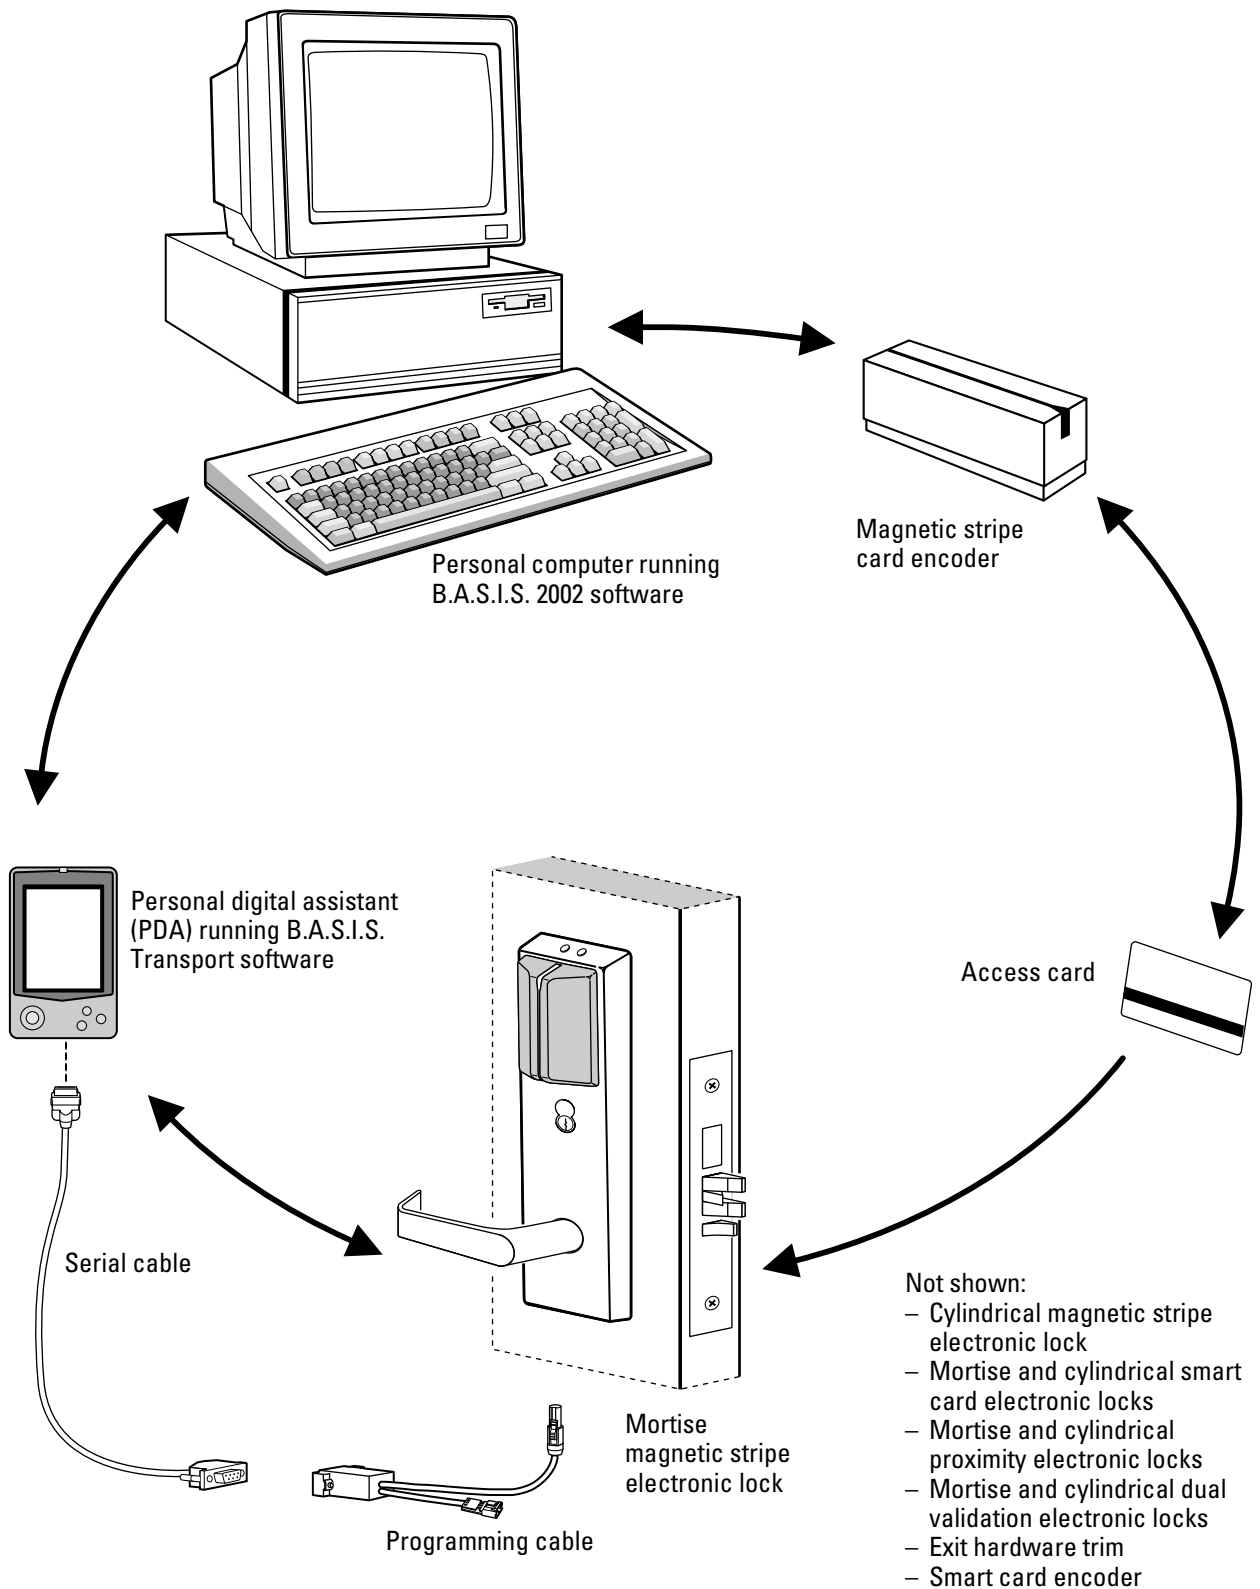


Figure 1.1 System overview diagram

Mortise lock overview

The diagram below shows an exploded view of the components of the B.A.S.I.S. V Mortise Lock, indicating their orientation to the door.

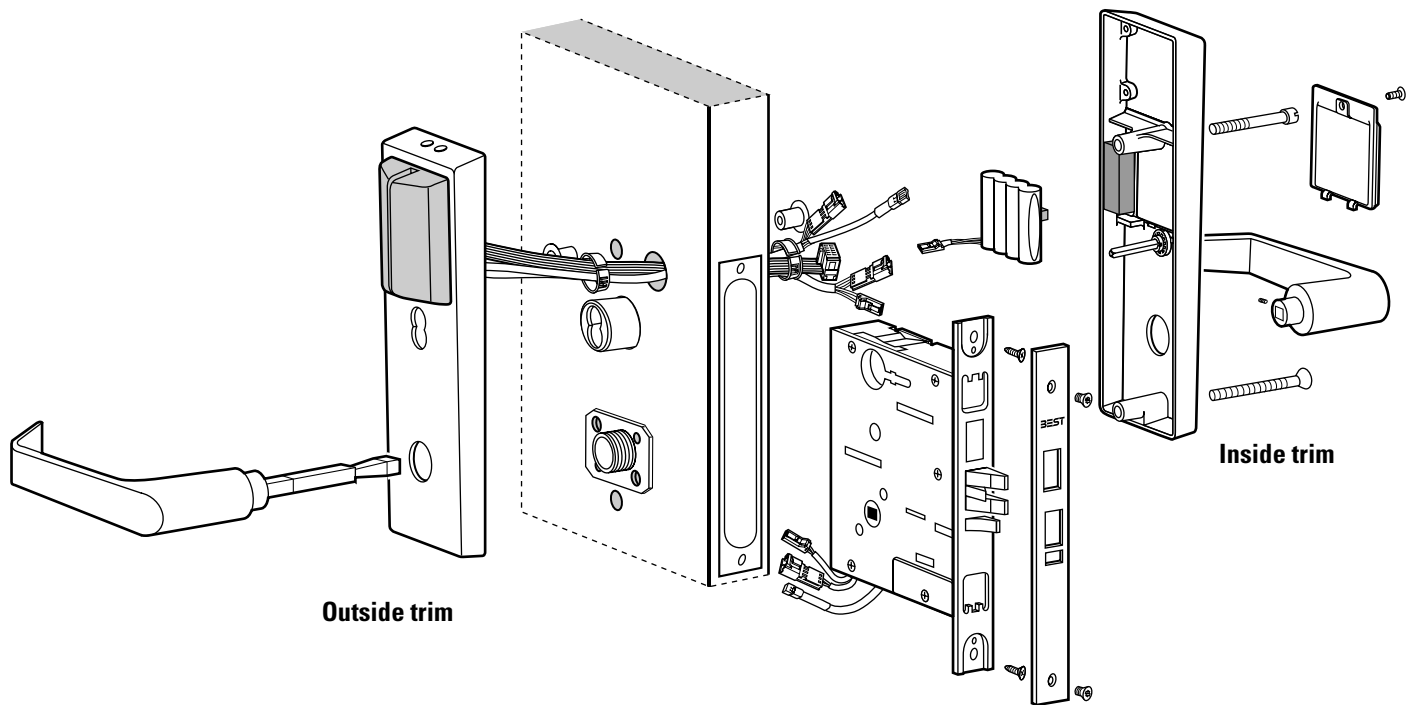


Figure 1.2 Mortise lock overview diagram

Cylindrical lock overview

The diagram below shows an exploded view of the components of the B.A.S.I.S. V Cylindrical Lock, indicating their orientation to the door.

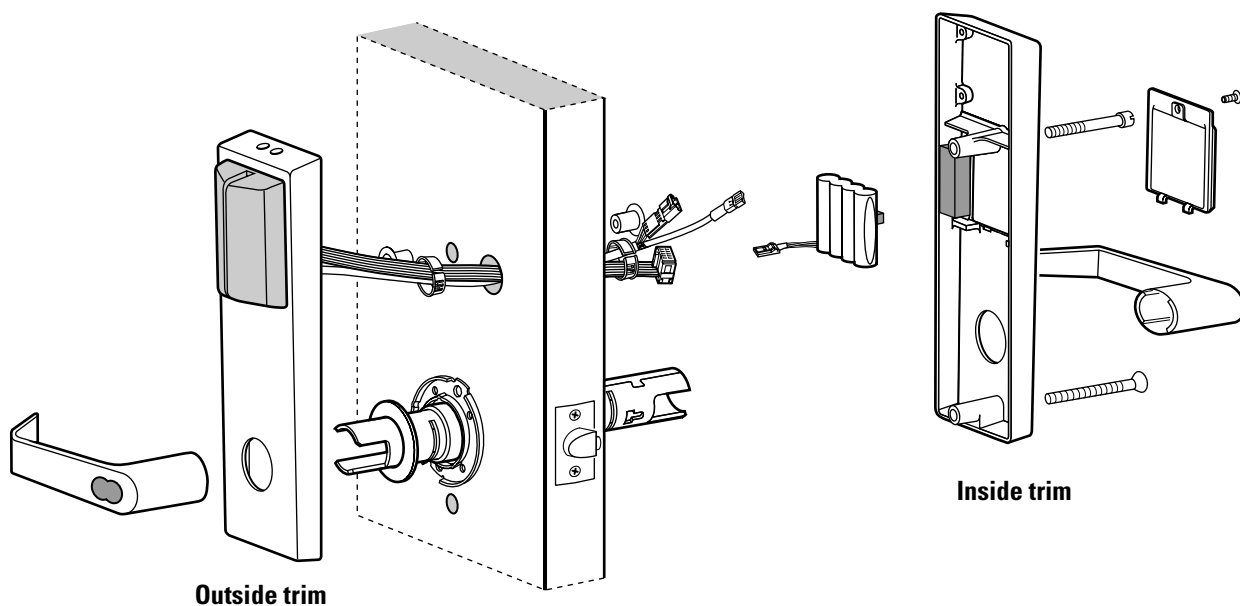


Figure 1.3 Cylindrical lock overview diagram

CERTIFICATIONS AND STANDARDS

- B.A.S.I.S. V Locks** ■ The B.A.S.I.S. 9KBV and 35HBV Locks comply with FCC and Canadian EMC requirements.

- Mortise locks** ■ The strike fits the standard door frame cutout as specified in ANSI A115.1.
- The 35H locks meet or exceed ANSI A156.13, Series 1000, Grade 1 Operational, and Grade 2 Security standards.
- The 35H locks are certified in the Builders Hardware Manufacturers Association Directory.
- The #14 and #15 lever handles conform to California Administrative Code Title 19 and Title 24.

- Cylindrical locks** ■ The 9K locks comply with ANSI A156.2, Series 4000 Grade 1 standards.
- The chassis conforms to ANSI A115.2.
- The strike fits the standard door frame cutout as specified in ANSI A115.2.
- The #14 and #15 lever handles conform to California Administrative Code Title 19 and Title 24.

- Exit hardware trim** ■ The B.A.S.I.S. EX Series Exit Hardware Trim complies with FCC and Canadian EMC requirements.
- The B.A.S.I.S. EX Series Exit Hardware Trim meets ANSI/BHMA A156.3 for panic devices.

DOCUMENTATION PACKAGE

The following documentation is available to help you with the installation, start-up, and maintenance of your B.A.S.I.S. V Locks and EX Series Exit Hardware Trim.

The installation and upgrade instructions also can be ordered separately:

Document Title	Doc. No.
<i>Installation Instructions for B.A.S.I.S. Cylindrical Locks (with brass escutcheons)</i>	T61835
<i>Installation Instructions for B.A.S.I.S. Mortise Locks (with brass escutcheons)</i>	T61836
<i>Installation Instructions for B.A.S.I.S. Cylindrical Locks (with zinc escutcheons)</i>	T63301
<i>Installation Instructions for B.A.S.I.S. Mortise Locks (with zinc escutcheons)</i>	T63302
<i>Installation Instructions for B.A.S.I.S. EX Series Exit Hardware Trim</i>	T61828
<i>Instructions for Upgrading B.A.S.I.S. Locks with Zinc Escutcheons to Brass Escutcheons</i>	T61854
<i>Instructions for Upgrading V Series Locks to B.A.S.I.S. Locks</i>	T61837

The templates and specifications required for lock and exit hardware trim installations also can be ordered separately:

Document Title	Doc. No.
<i>G01 Template; Installation Specifications for 93KG & 93KBV Cylindrical Locks with Small Strike</i>	T63305
<i>G02 Template; Installation Specifications for 93KG & 93KBV Cylindrical Locks with Large Strike</i>	T63310
<i>G03 Template; Installation Specifications for 35HG & 35HBV Mortise Locks</i>	T63306
<i>G04 Template; Hole Pattern Chart for 35HG & 35HBV Mortise Locks</i>	T63311
<i>G05 Template; Installation Template for 93KG & 93KBV Cylindrical Locks</i>	T63303
<i>G06 Template; Installation Template for 35HG & 35HBV Mortise Locks</i>	T63304
<i>G07 Installation Template for EXG & EXBV Exit Hardware Trim for Use with Von Duprin 98/99 Series Devices</i>	T61824
<i>G08 Installation Template for EXG & EXBV Exit Hardware Trim for Use with Precision Hardware 1000/2000 Series Devices</i>	T61825

Document Title	Doc. No.
<i>G09 Installation Specification for EXG & EXBV Exit Hardware Trim for Use with Von Duprin 98/99 Series Devices</i>	T61826
<i>G10 Installation Specification for EXG & EXBV Exit Hardware Trim for Use with Precision Hardware 1000/2000 Series Devices</i>	T61827

The service manuals referred to in this manual can also be ordered separately:

Document Title	Doc. No.
<i>H Series Service Manual</i>	T61964
<i>9K Series Service Manual</i>	T56082
<i>8K Series Service Manual</i>	T56081
<i>B.A.S.I.S. G Service Manual</i>	T63300

The BEST documents for the B.A.S.I.S. software can also be ordered separately:

Document Title	Doc. No.
<i>B.A.S.I.S. Transport User's Guide</i>	T63307

TECHNICAL SUPPORT

Support services

When you have a problem with a B.A.S.I.S. V Lock or EX Series Exit Hardware Trim, your first resource for help is the *B.A.S.I.S. V Service Manual*. If you cannot find a satisfactory answer, contact your local BEST representative.

Telephone technical support

A factory-trained Certified Product Specialist (CPS) is available in your area whenever you need help. Before you call, however, please make sure that the product is in your immediate vicinity, and that you are prepared to give the following information:

- what happened and what you were doing when the problem arose
- what you have done so far to correct the problem.

Best Access Systems Representatives provide telephone technical support for all B.A.S.I.S. V products. You may locate the representative nearest you by calling (317) 849-2250 Monday through Friday, between 7:00 a.m. and 4:00 p.m. eastern standard time; or visit the web page www.BestAccess.com.

2

STANDARD FUNCTIONS AND PARTS

The following pages contain function descriptions for all standard B.A.S.I.S. V Locks. This chapter also includes exploded diagrams that show all field-serviceable mechanical parts, diagrams of trim and other miscellaneous parts, as well as trim and reader conversion information.

FUNCTION DESCRIPTIONS

This section includes function descriptions grouped by the following function types:

- mortise
- cylindrical.

Mortise functions

The following lists describe how the latchbolt, deadbolt, outside lever, and inside lever operate for each standard B.A.S.I.S. mortise function.


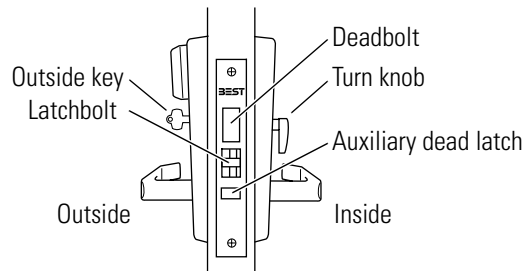



Figure 2.1 Understanding mortise function drawings

EV–Latchbolt with key override

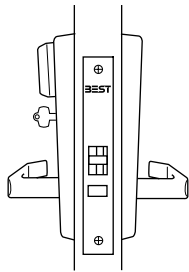


- Latchbolt operated by:
- outside key
 - outside lever—unless locked by internal motor drive mechanism
 - inside lever
- Outside lever locked by:
- internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN
- Outside lever unlocked by:
- internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN
- Inside lever is always unlocked

FV–Deadbolt with key override

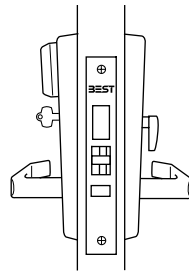

- Latchbolt operated by:
- outside key
 - outside lever—unless locked by internal motor drive mechanism
 - inside lever
- Latchbolt deadlocked by auxiliary latch
- Deadbolt operated by:
- outside key
 - inside turn-knob
 - outside lever when lever is unlocked by internal motor drive mechanism (retracts only)
 - inside lever (retracts only)
- Outside lever locked and unlocked by:
- internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN (if deadbolt is thrown, deadbolt override privilege is required)
- Inside lever is always unlocked

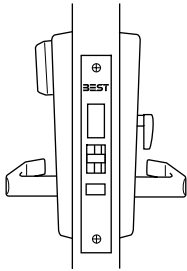LV—Deadbolt without key override

Latchbolt operated by:

- outside lever—unless locked by internal motor drive mechanism
- inside lever (deadlocked by auxiliary latch)

Latchbolt deadlocked by auxiliary latch


Deadbolt operated by:

- inside turn-knob
- outside lever when lever is unlocked by internal motor drive mechanism (retracts only)
- inside lever (retracts only)

Outside lever locked and unlocked by:

- internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN (if deadbolt is thrown, deadbolt override privilege is required)

Inside lever is always unlocked

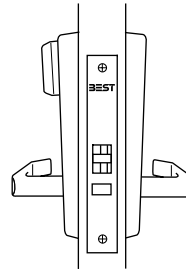NV—Latchbolt without key override

Latchbolt operated by:

- outside lever—unless locked by internal motor drive mechanism
- inside lever

Outside lever locked by:

- internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN

Outside lever unlocked by:

- internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN

Inside lever is always unlocked

Cylindrical function The following list describes how the latchbolt, outside lever, and inside lever operate for the standard B.A.S.I.S. cylindrical function.


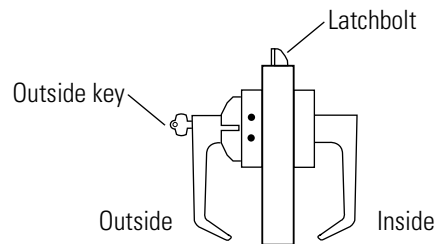


Figure 2.2 Understanding the cylindrical function drawing

DV–Latchbolt with key override

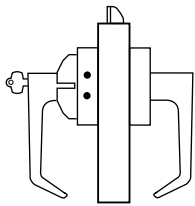

Latchbolt operated by:

- outside key
- outside lever—unless locked by internal motor drive mechanism
- inside lever

Outside lever locked by:

- internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN

Outside lever unlocked by:

- internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN

Inside lever is always unlocked

TRIM COMPONENTS

MAGNETIC STRIPE READER AND TRIM EXPLODED DIAGRAM

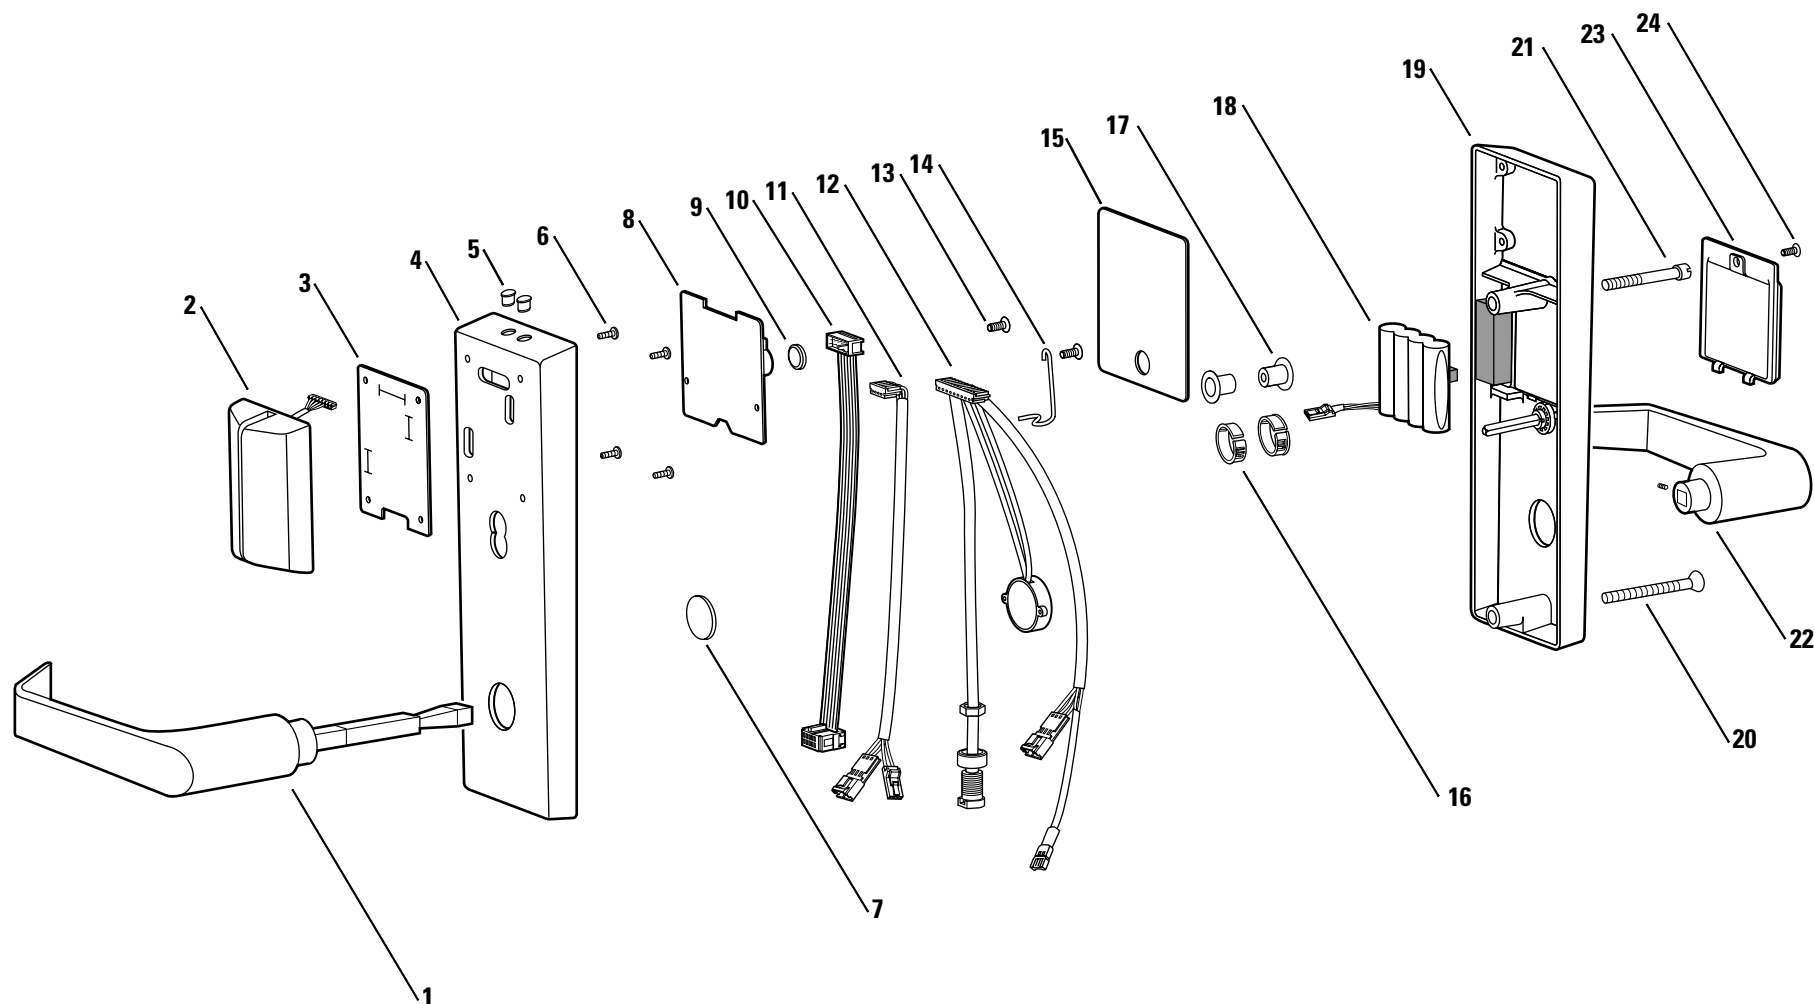


Figure 2.3 Magnetic stripe reader and trim exploded diagram (mortise shown)

**Magnetic stripe
reader and trim
parts list**

Refer to [Figure 2.3](#) and the table below to find the part that you need.

Item	Part No.	Qty.	Part
1	A35455	1	#15 outside lever assembly ^a (mortise locks) <i>or</i>
not shown	B55168	1	#15 keyed lever handle ^b (cylindrical locks)
2	See magnetic stripe reader kits (page 4-4)	1	Magnetic stripe reader
3	B60321	1	Reader gasket
4	D62506	1	35HBV brass outside escutcheon with key (EV and FV functions) <i>or</i>
not shown	D62508	1	35HBV brass outside escutcheon for use with non-BEST cores (EV and FV functions) <i>or</i>
not shown	D62505	1	35HBV brass outside escutcheon without key (LV and NV functions) <i>or</i>
not shown	D62507	1	9KBV brass outside escutcheon assembly (DV function) <i>or</i>
not shown	C60445	1	35HBV zinc outside escutcheon with key (EV and FV functions) <i>or</i>
not shown	C60406	1	35HBV zinc outside escutcheon for use with non-BEST cores (EV and FV functions) <i>or</i>
not shown	C60446	1	35HBV zinc outside escutcheon without key (LV and NV functions) <i>or</i>
not shown	C60449	1	9KBV zinc outside escutcheon assembly (DV function)
5	See lens cover kit (page 4-6)	2	Lens cover
6	See screw kits (page 4-7)	4	Reader assembly mounting screw
7	See primary harness kit (page 4-6)	1	Tape for mounting the sounder
8	See magnetic stripe control electronics kit (page 4-5)	1	Magnetic stripe control electronics board assembly (with backup battery)
9	See backup battery kit (page 4-5)	1	Backup battery
10	See upgrade cable kit (page 4-6)	1	Upgrade cable ^c
11	See sensor harness kit (page 4-6)	1	Sensor harness
12	See primary harness kit (page 4-6)	1	Primary harness
13	See screw kits (page 4-7)	2	Electronics board mounting screw
14	B63294	1	Harness clamp
15	A60725	1	Outside escutcheon gasket
16	1818846	2	Bushing

Item	Part No.	Qty.	Part
17	B61439	2	Trim hole insert
18	B60726	1	Battery pack <i>or</i>
not shown	B62101	1	Eight-cell battery pack ^d
19	C80894	1	35HBV brass inside escutcheon with turn knob ^e (FV and LV functions) <i>or</i>
not shown	D62104	1	35HBV brass inside escutcheon without turn knob for (EV and NV functions) <i>or</i>
not shown	D62102	1	9KBV brass inside escutcheon (DV function) <i>or</i>
not shown	B60768	1	35HBV zinc inside escutcheon with turn knob ^e (FV and LV functions) <i>or</i>
not shown	B60778	1	35HBV zinc inside escutcheon without turn knob for (EV and NV functions) <i>or</i>
not shown	B60749	1	9KBV zinc inside escutcheon (DV function)
20	See screw kits (page 4-7)	1	Lower escutcheon screw
21	See screw kits (page 4-7)	1	Upper escutcheon screw
22	A35454	1	#15 inside lever assembly ^a (mortise locks) <i>or</i>
not shown	B55169	1	#15 plain lever handle ^b (cylindrical locks)
23	B62128	1	Battery door for brass escutcheons <i>or</i>
not shown	C61410	1	Battery door for zinc escutcheons <i>or</i>
not shown	B62101	1	Eight-cell battery door for brass escutcheons ^d <i>or</i>
not shown	C62100	1	Eight-cell battery door for zinc escutcheons
24	See screw kits (page 4-7)	1	Battery door screw (TORX with post head) <i>or</i>
not shown	See screw kits (page 4-7)	1	Battery door screw (McGard head)

a. See the *H Series Service Manual* for other lever styles.

b. See the *9K Series Service Manual* for other lever styles.

c. The upgrade cable is for future use.

d. If you need to upgrade to the eight-cell battery pack and door, see the Eight-Cell Battery Upgrade kit on page 4-5.

e. This item includes the battery door.

SMART CARD READER AND TRIM EXPLODED DIAGRAM

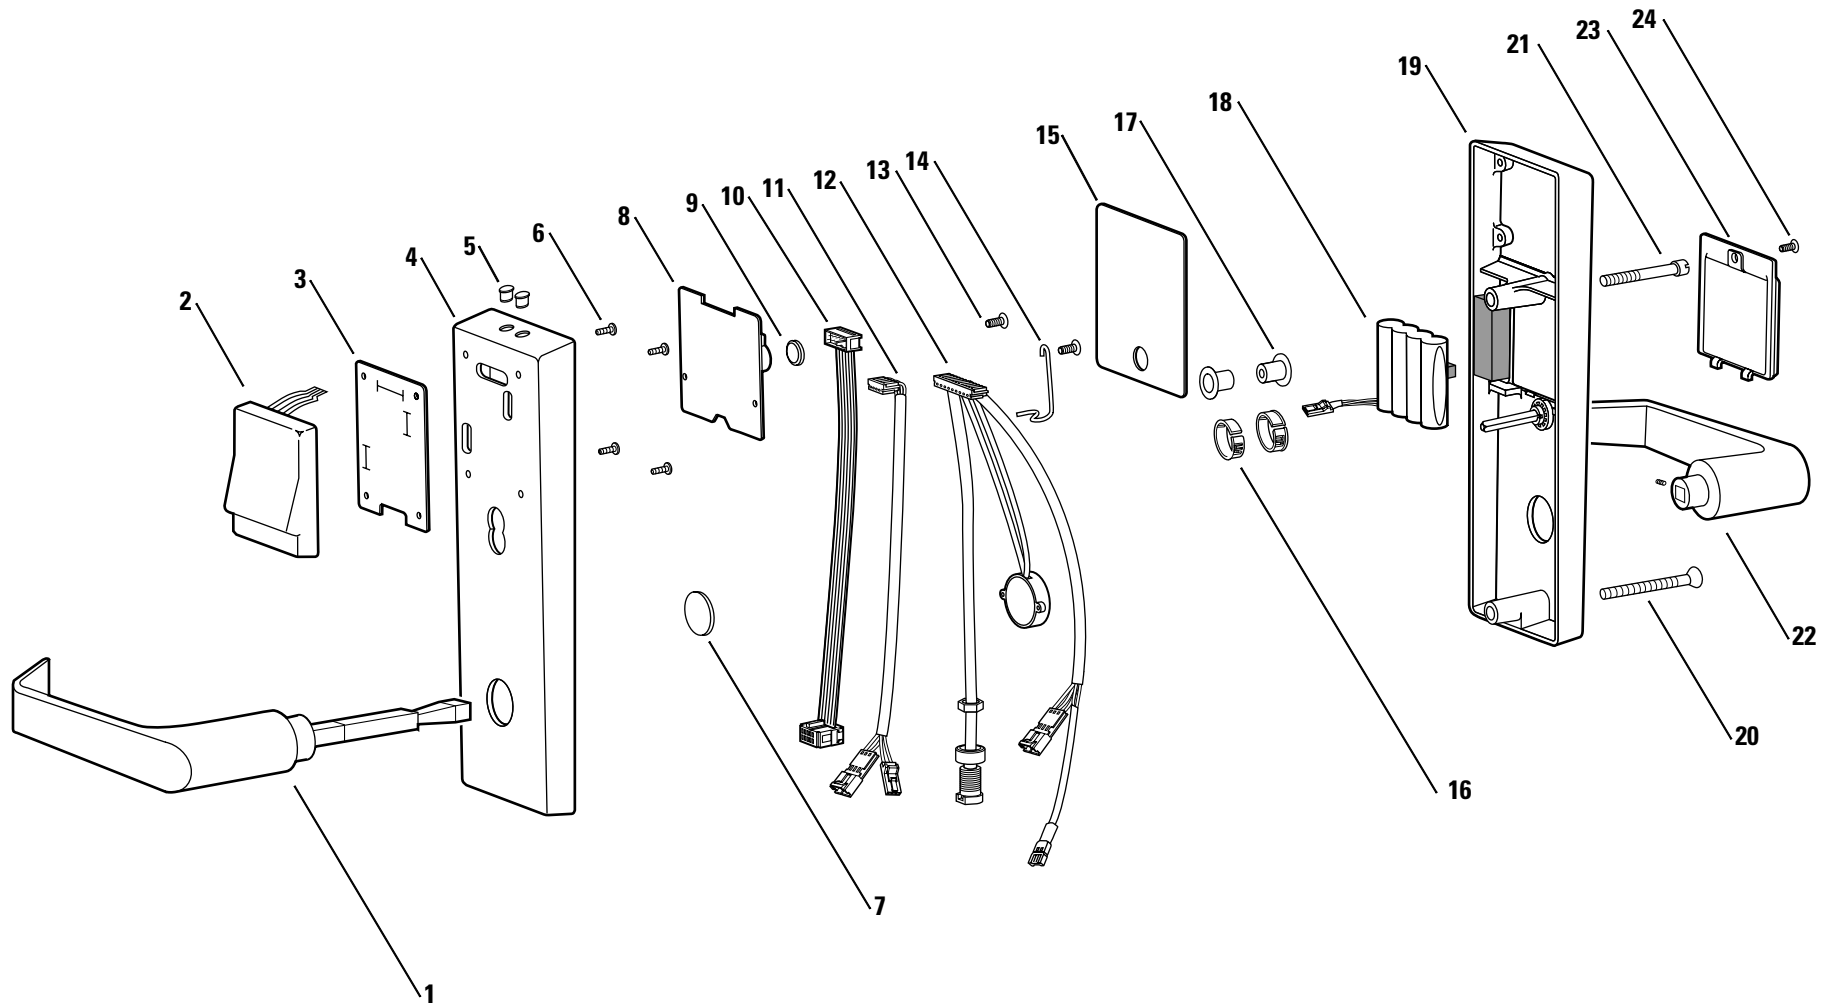


Figure 2.4 Smart card reader and trim exploded diagram (mortise shown)

**Smart card reader
and trim parts list**

Refer to [Figure 2.4](#) and the table below to find the part that you need.

Item	Part No.	Qty.	Part
1	A35455	1	#15 outside lever assembly ^a (mortise locks) <i>or</i>
not shown	B55168	1	#15 keyed lever handle ^b (cylindrical locks)
2	See smart card reader kit (page 4-4)	1	Smart card reader
3	B60321	1	Reader gasket
4	D62506	1	35HBV brass outside escutcheon with key (EV and FV functions) <i>or</i>
not shown	D62508	1	35HBV brass outside escutcheon for use with non-BEST cores (EV and FV functions) <i>or</i>
not shown	D62505	1	35HBV brass outside escutcheon without key (LV and NV functions) <i>or</i>
not shown	D62507	1	9KBV brass outside escutcheon assembly (DV function) <i>or</i>
not shown	C60445	1	35HBV zinc outside escutcheon with key (EV and FV functions) <i>or</i>
not shown	C60406	1	35HBV zinc outside escutcheon for use with non-BEST cores (EV and FV functions) <i>or</i>
not shown	C60446	1	35HBV zinc outside escutcheon without key (LV and NV functions) <i>or</i>
not shown	C60449	1	9KBV zinc outside escutcheon assembly (DV function)
5	See lens cover kit (page 4-6)	2	Lens cover
6	See screw kits (page 4-7)	4	Reader assembly mounting screw
7	See primary harness kit (page 4-6)	1	Tape for mounting the sounder
8	See smart card control electronics kit (page 4-5)	1	Smart card control electronics board assembly (with backup battery)
9	See backup battery kit (page 4-5)	1	Backup battery
10	See upgrade cable kit (page 4-6)	1	Upgrade cable ^c
11	See sensor harness kit (page 4-6)	1	Sensor harness
12	See primary harness kit (page 4-6)	1	Primary harness
13	See screw kits (page 4-7)	2	Electronics board mounting screw
14	B63294	1	Harness clamp
15	A60725	1	Outside escutcheon gasket
16	1818846	2	Bushing

Item	Part No.	Qty.	Part
17	B61439	2	Trim hole insert
18	B60726	1	Battery pack <i>or</i>
not shown	B62101	1	Eight-cell battery pack ^d
19	C80894	1	35HBV brass inside escutcheon with turn knob ^e (FV and LV functions) <i>or</i>
not shown	D62104	1	35HBV brass inside escutcheon without turn knob for (EV and NV functions) <i>or</i>
not shown	D62102	1	9KBV brass inside escutcheon (DV function) <i>or</i>
not shown	B60768	1	35HBV zinc inside escutcheon with turn knob ^e (FV and LV functions) <i>or</i>
not shown	B60778	1	35HBV zinc inside escutcheon without turn knob for (EV and NV functions) <i>or</i>
not shown	B60749	1	9KBV zinc inside escutcheon (DV function)
20	See screw kits (page 4-7)	1	Lower escutcheon screw
21	See screw kits (page 4-7)	1	Upper escutcheon screw
22	A35454	1	#15 inside lever assembly ^a (mortise locks) <i>or</i>
not shown	B55169	1	#15 plain lever handle ^b (cylindrical locks)
23	B62128	1	Battery door for brass escutcheons <i>or</i>
not shown	C61410	1	Battery door for zinc escutcheons <i>or</i>
not shown	B62101	1	Eight-cell battery door for brass escutcheons ^d <i>or</i>
not shown	C62100	1	Eight-cell battery door for zinc escutcheons
24	See screw kits (page 4-7)	1	Battery door screw (TORX with post head) <i>or</i>
not shown	See screw kits (page 4-7)	1	Battery door screw (McGard head)

a. See the *H Series Service Manual* for other lever styles.

b. See the *9K Series Service Manual* for other lever styles.

c. The upgrade cable is for future use.

d. If you need to upgrade to the eight-cell battery pack and door, see the Eight-Cell Battery Upgrade kit on page 4-5.

e. This item includes the battery door.

DUAL VALIDATION READER AND TRIM EXPLODED DIAGRAM

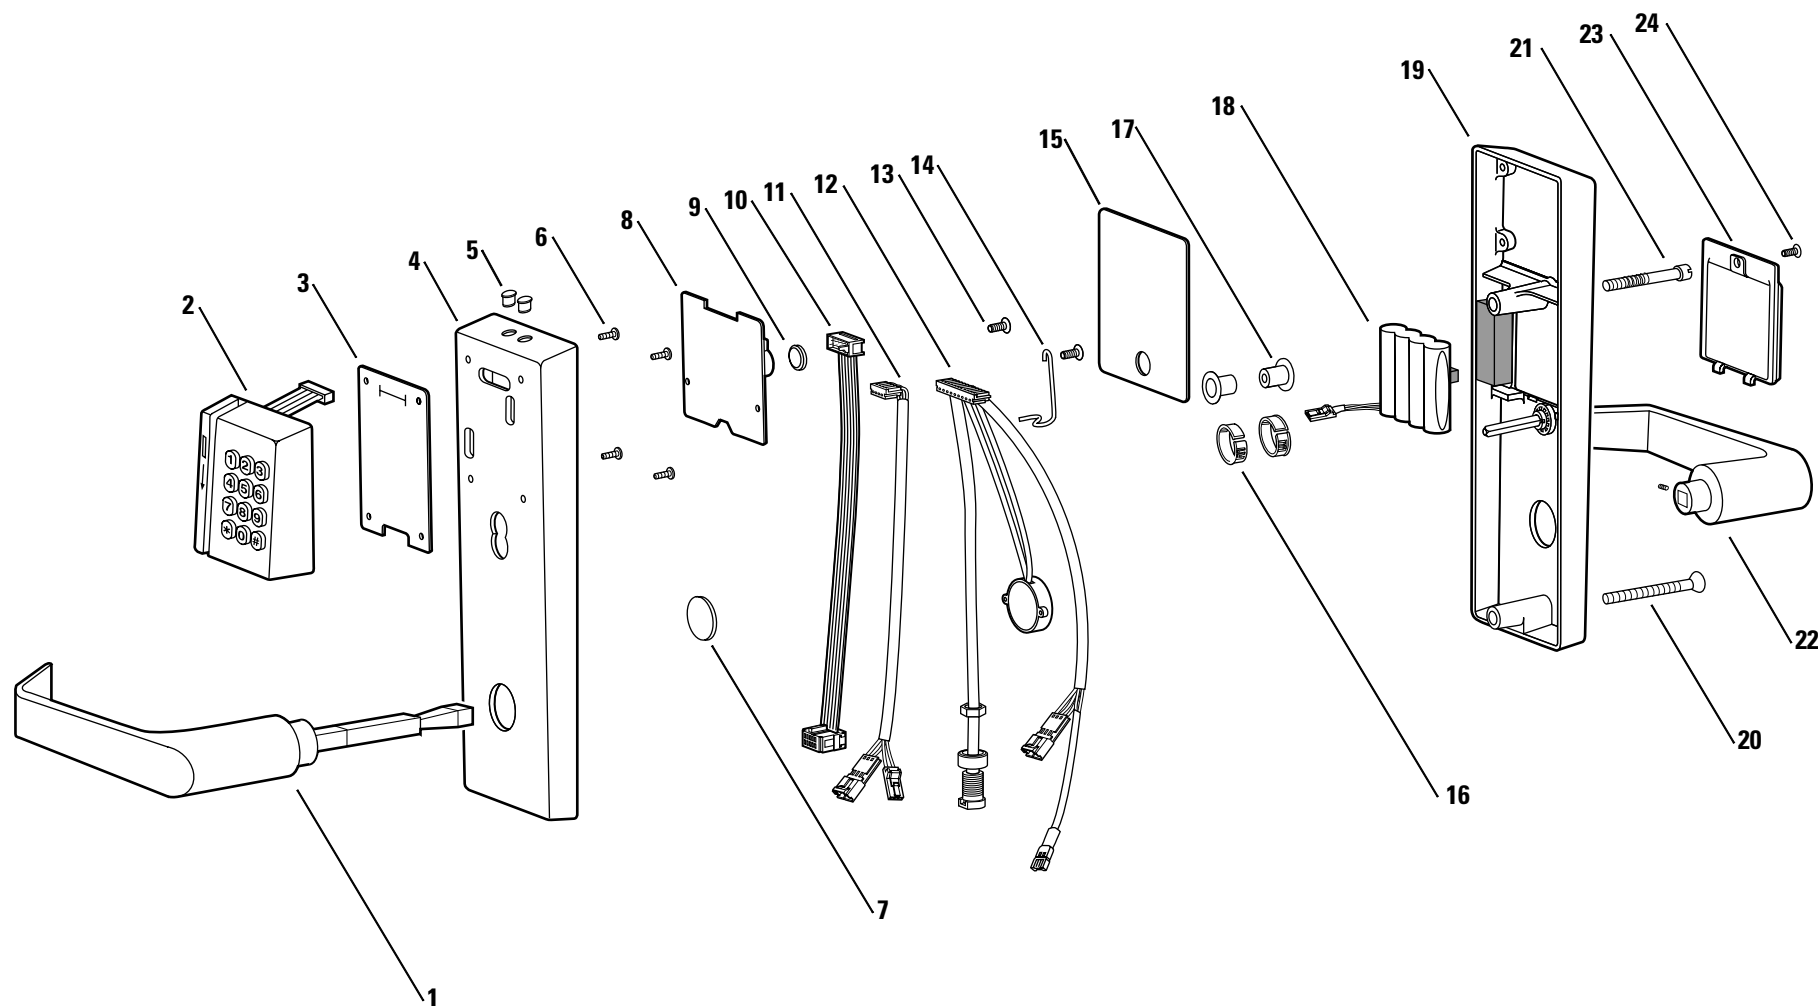


Figure 2.5 Dual validation reader and trim exploded diagram (mortise shown)

**Dual validation
reader and trim
parts list**

Refer to [Figure 2.5](#) and the table below to find the part that you need.

Item	Part No.	Qty.	Part
1	A35455	1	#15 outside lever assembly ^a (mortise locks) <i>or</i>
not shown	B55168	1	#15 keyed lever handle ^b (cylindrical locks)
2	See dual validation reader kits (page 4-4)	1	Dual validation reader
3	A60725	1	Reader gasket
4	D62506	1	35HBV brass outside escutcheon with key (EV and FV functions) <i>or</i>
not shown	D62508	1	35HBV brass outside escutcheon for use with non-BEST cores (EV and FV functions) <i>or</i>
not shown	D62505	1	35HBV brass outside escutcheon without key (LV and NV functions) <i>or</i>
not shown	D62507	1	9KBV brass outside escutcheon assembly (DV function) <i>or</i>
not shown	C60445	1	35HBV zinc outside escutcheon with key (EV and FV functions) <i>or</i>
not shown	C60406	1	35HBV zinc outside escutcheon for use with non-BEST cores (EV and FV functions) <i>or</i>
not shown	C60446	1	35HBV zinc outside escutcheon without key (LV and NV functions) <i>or</i>
not shown	C60449	1	9KBV zinc outside escutcheon assembly (DV function)
5	See lens cover kit (page 4-6)	2	Lens cover
6	See screw kits (page 4-7)	4	Reader assembly mounting screw
7	See primary harness kit (page 4-6)	1	Tape for mounting the sounder
8	See dual validation control electronics kit (page 4-5)	1	Dual validation control electronics board assembly (with backup battery)
9	See backup battery kit (page 4-5)	1	Backup battery
10	See upgrade cable kit (page 4-6)	1	Upgrade cable ^c
11	See sensor harness kit (page 4-6)	1	Sensor harness
12	See primary harness kit (page 4-6)	1	Primary harness
13	See screw kits (page 4-7)	2	Electronics board mounting screw
14	B63294	1	Harness clamp

Item	Part No.	Qty.	Part
15	A60725	1	Outside escutcheon gasket
16	1818846	2	Bushing
17	B61439	2	Trim hole insert
18	B60726	1	Battery pack <i>or</i>
not shown	B62101	1	Eight-cell battery pack ^d
19	C80894	1	35HBV brass inside escutcheon with turn knob ^c (FV and LV functions) <i>or</i>
not shown	D62104	1	35HBV brass inside escutcheon without turn knob for (EV and NV functions) <i>or</i>
not shown	D62102	1	9KBV brass inside escutcheon (DV function) <i>or</i>
not shown	B60768	1	35HBV zinc inside escutcheon with turn knob ^c (FV and LV functions) <i>or</i>
not shown	B60778	1	35HBV zinc inside escutcheon without turn knob for (EV and NV functions) <i>or</i>
not shown	B60749	1	9KBV zinc inside escutcheon (DV function)
20	See screw kits (page 4-7)	1	Lower escutcheon screw
21	See screw kits (page 4-7)	1	Upper escutcheon screw
22	A35454	1	#15 inside lever assembly ^a (mortise locks) <i>or</i>
not shown	B55169	1	#15 plain lever handle ^b (cylindrical locks)
23	B62128	1	Battery door for brass escutcheons <i>or</i>
not shown	C61410	1	Battery door for zinc escutcheons <i>or</i>
not shown	B62101	1	Eight-cell battery door for brass escutcheons ^d <i>or</i>
not shown	C62100	1	Eight-cell battery door for zinc escutcheons
24	See screw kits (page 4-7)	1	Battery door screw (TORX with post head) <i>or</i>
not shown	See screw kits (page 4-7)	1	Battery door screw (McGard head)

a. See the *H Series Service Manual* for other lever styles.

b. See the *9K Series Service Manual* for other lever styles.

c. The upgrade cable is for future use.

d. If you need to upgrade to the eight-cell battery pack and door, see the Eight-Cell Battery Upgrade kit on page 4-5.

e. This item includes the battery door.

PROXIMITY READER AND TRIM EXPLODED DIAGRAM

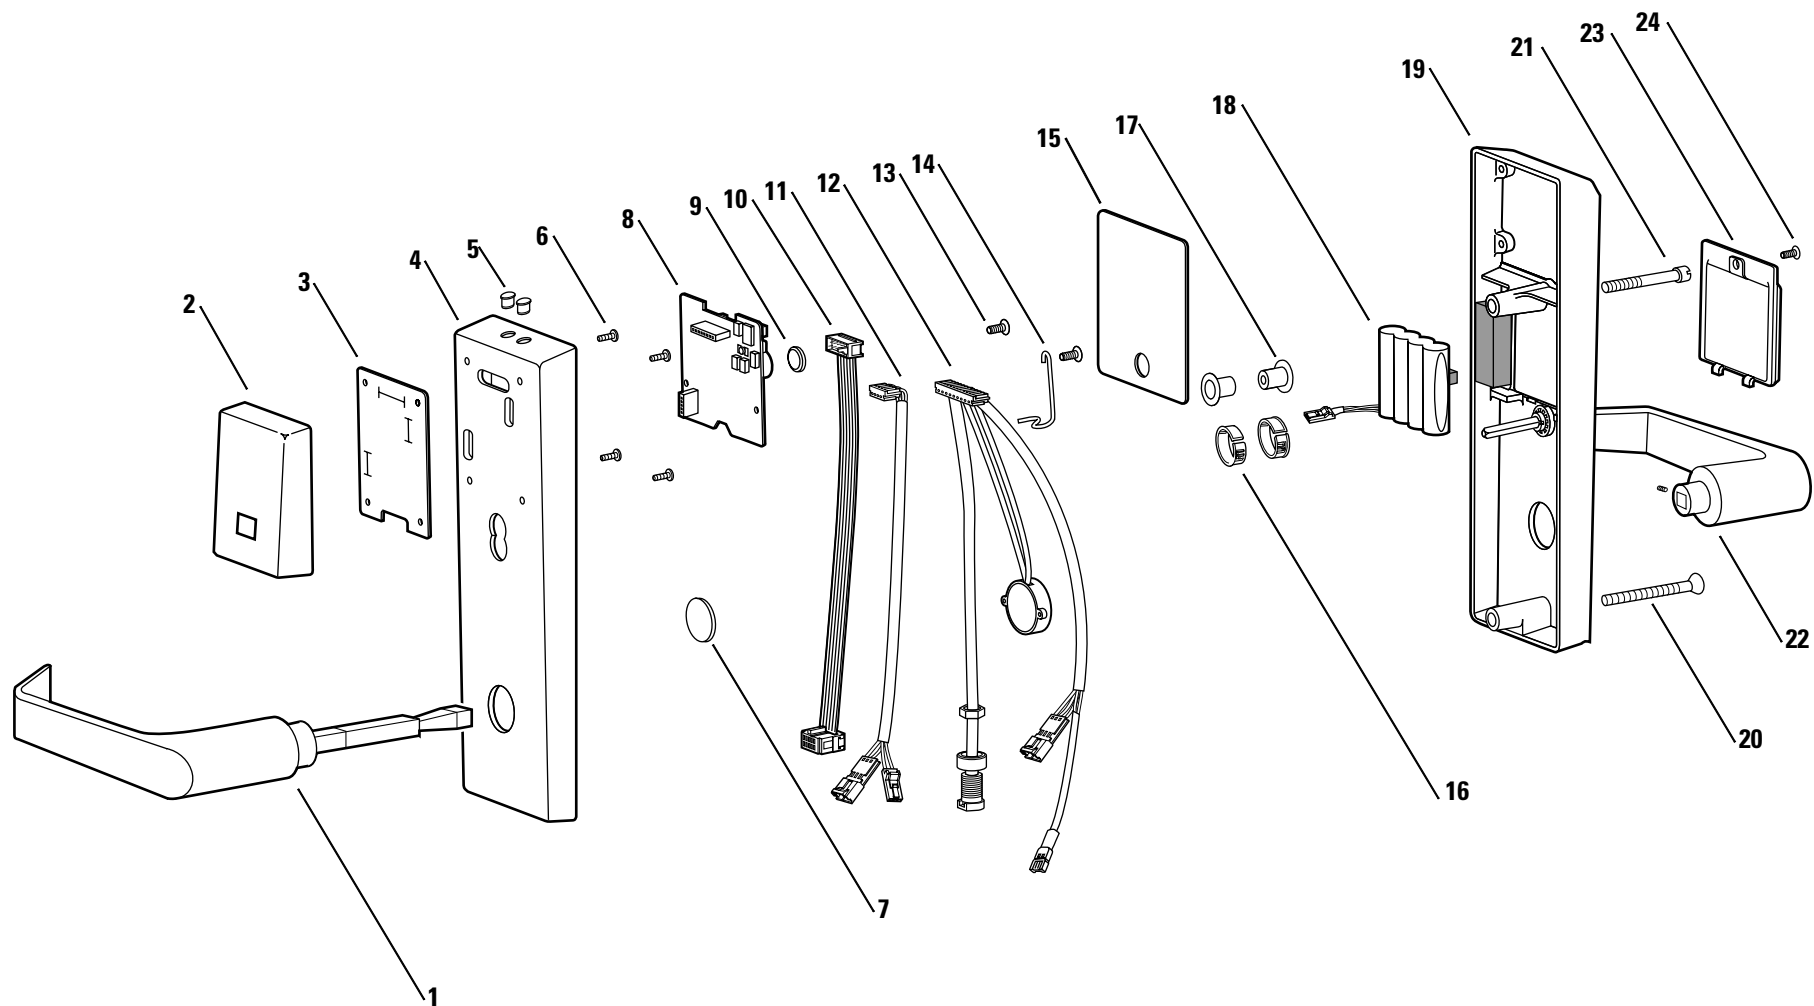


Figure 2.6 Proximity reader and trim exploded diagram (Precision Hardware—rim type shown)

Proximity reader and trim parts list

Refer to [Figure 2.5](#) and the table below to find the part that you need.

Item	Part No.	Qty.	Part
1	A35455	1	#15 outside lever assembly ^a (mortise locks) <i>or</i>
not shown	B55168	1	#15 keyed lever handle ^b (cylindrical locks)
2	See HID proximity reader kit (page 4-4)	1	HID proximity reader <i>or</i>
not shown	See Motorola proximity reader kit (page 4-4)	1	Motorola proximity reader
3	B60321	1	Reader gasket
4	D62506	1	35HBV brass outside escutcheon with key (EV and FV functions) <i>or</i>
not shown	D62508	1	35HBV brass outside escutcheon for use with non-BEST cores (EV and FV functions) <i>or</i>
not shown	D62505	1	35HBV brass outside escutcheon without key (LV and NV functions) <i>or</i>
not shown	D62507	1	9KBV brass outside escutcheon assembly (DV function) <i>or</i>
not shown	C60445	1	35HBV zinc outside escutcheon with key (EV and FV functions) <i>or</i>
not shown	C60406	1	35HBV zinc outside escutcheon for use with non-BEST cores (EV and FV functions) <i>or</i>
not shown	C60446	1	35HBV zinc outside escutcheon without key (LV and NV functions) <i>or</i>
not shown	C60449	1	9KBV zinc outside escutcheon assembly (DV function)
5	See lens cover kit (page 4-6)	2	Lens cover
6	See screw kits (page 4-7)	4	Reader assembly mounting screw
7	See primary harness kit (page 4-6)	1	Tape for mounting the sounder
8	See HID proximity control electronics kit (page 4-5)	1	HID proximity control electronics board assembly (with backup battery) <i>or</i>
not shown	See Motorola proximity control electronics kit (page 4-5)	1	Motorola proximity control electronics board assembly (with backup battery)
not shown	1837827	1	Jumper (ABA card format only)
9	See backup battery kit (page 4-5)	1	Backup battery
10	See upgrade cable kit (page 4-6)	1	Upgrade cable ^c
11	See sensor harness kit (page 4-6)	1	Sensor harness

Item	Part No.	Qty.	Part
12	See primary harness kit (page 4-6)	1	Primary harness
13	See screw kits (page 4-7)	2	Electronics board mounting screw
14	B63294	1	Harness clamp
15	A60725	1	Outside escutcheon gasket
16	1818846	2	Bushing
17	B61439	2	Trim hole insert
18	B60726	1	Battery pack <i>or</i>
not shown	B62101	1	Eight-cell battery pack ^d
19	C80894	1	35HBV brass inside escutcheon with turn knob ^c (FV and LV functions) <i>or</i>
not shown	D62104	1	35HBV brass inside escutcheon without turn knob for (EV and NV functions) <i>or</i>
not shown	D62102	1	9KBV brass inside escutcheon (DV function) <i>or</i>
not shown	B60768	1	35HBV zinc inside escutcheon with turn knob ^c (FV and LV functions) <i>or</i>
not shown	B60778	1	35HBV zinc inside escutcheon without turn knob for (EV and NV functions) <i>or</i>
not shown	B60749	1	9KBV zinc inside escutcheon (DV function)
20	See screw kits (page 4-7)	1	Lower escutcheon screw
21	See screw kits (page 4-7)	1	Upper escutcheon screw
22	A35454	1	#15 inside lever assembly ^a (mortise locks) <i>or</i>
not shown	B55169	1	#15 plain lever handle ^b (cylindrical locks)
23	B62128	1	Battery door for brass escutcheons <i>or</i>
not shown	C61410	1	Battery door for zinc escutcheons <i>or</i>
not shown	B62101	1	Eight-cell battery door for brass escutcheons ^d <i>or</i>
not shown	C62100	1	Eight-cell battery door for zinc escutcheons
24	See screw kits (page 4-7)	1	Battery door screw (TORX with post head) <i>or</i>
not shown	See screw kits (page 4-7)	1	Battery door screw (McGard head)

a. See the *H Series Service Manual* for other lever styles.

b. See the *9K Series Service Manual* for other lever styles.

c. The upgrade cable is for future use.

d. If you need to upgrade to the eight-cell battery pack and door, see the Eight-Cell Battery Upgrade kit on [page 4-5](#).

e. This item includes the battery door.

MORTISE COMPONENTS

Mortise case exploded diagram

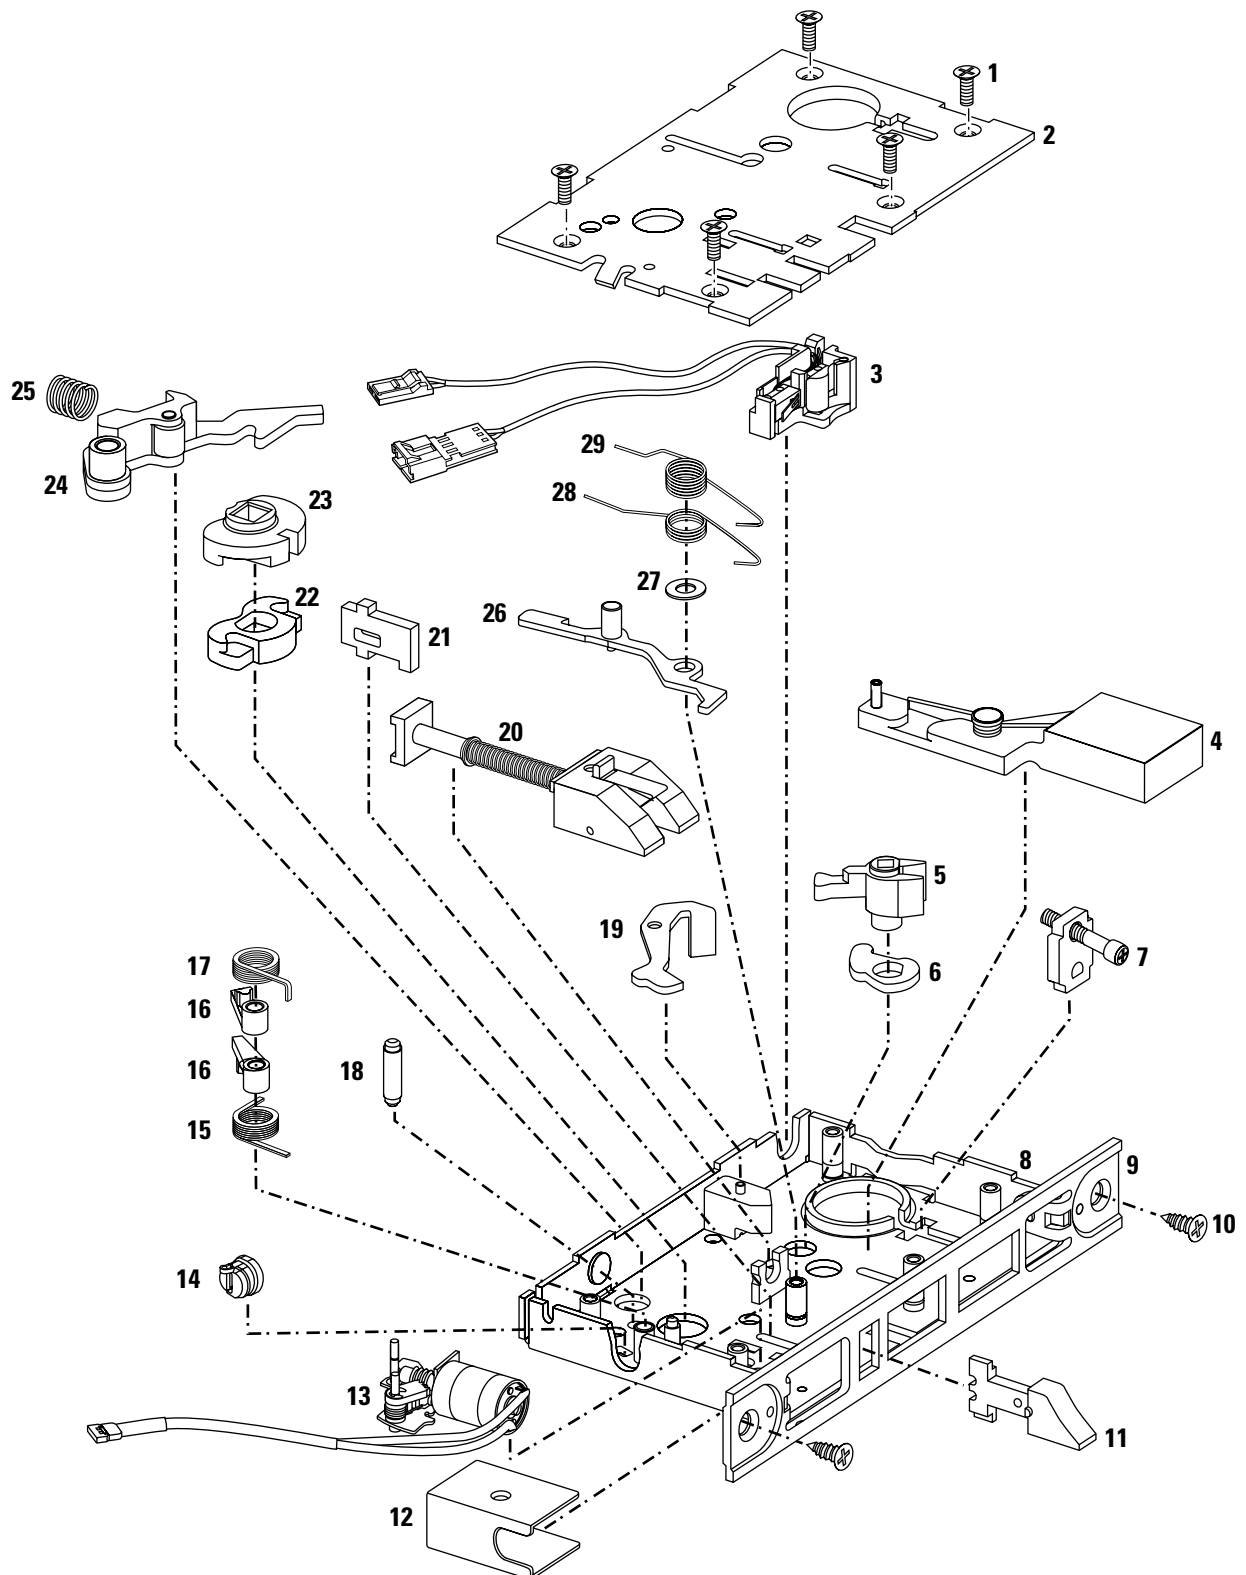


Figure 2.7 FV function mortise case exploded diagram (LH case shown)

Mortise case parts list

Refer to [Figure 2.7](#) and the table below to find the part you need.

Item	Part No.	Qty.	Description
1	A34087	5	Case cover mounting screws
2	B60481	1	Case cover
3	1833885	1	Sensor module with deadbolt and key override kit (FV function)
not shown	1838747	1	Sensor module with deadbolt kit (LV function)
not shown	1833927	1	Sensor module with key override kit (EV function)
4	B35035	1	Deadbolt (FV and LV functions)
5	C34011	1	Turn knob hub (FV and LV functions)
6	B34032	1	Turn knob hub spacer (FV and LV functions)
7	A35257	1	Cylinder clamp plate (EV and FV functions)
8	B61302	1	Case assembly
9	C34053	1	Armored front
10	A34450	1	Case mounting screw
11	B34092	1	Auxiliary bolt
12	A60346	1	Mortise case spacer
13	B60493	1	Motor module
14	A34236	1	Wire strain relief
15	A34065	1	Lower auxiliary spring
16	B34020	2	Auxiliary return levers
17	A34066	1	Upper auxiliary spring
18	A34048	1	Stop pin
19	A35004	1	Latch lever
20	B35019	1	Latchbolt
21	B60467	1	Locking bar
22	B34043	1	Inside hub
23	B34003	1	Outside hub
24	B35490	1	Long hub lever
25	A34081	1	Hub lever spring
26	A35002	1	Deadlocking lever
27	A34315	1	Retaining ring
28	A61210	1	Auxiliary bolt spring
29	A34018	1	Deadlocking spring

Other mortise components diagram

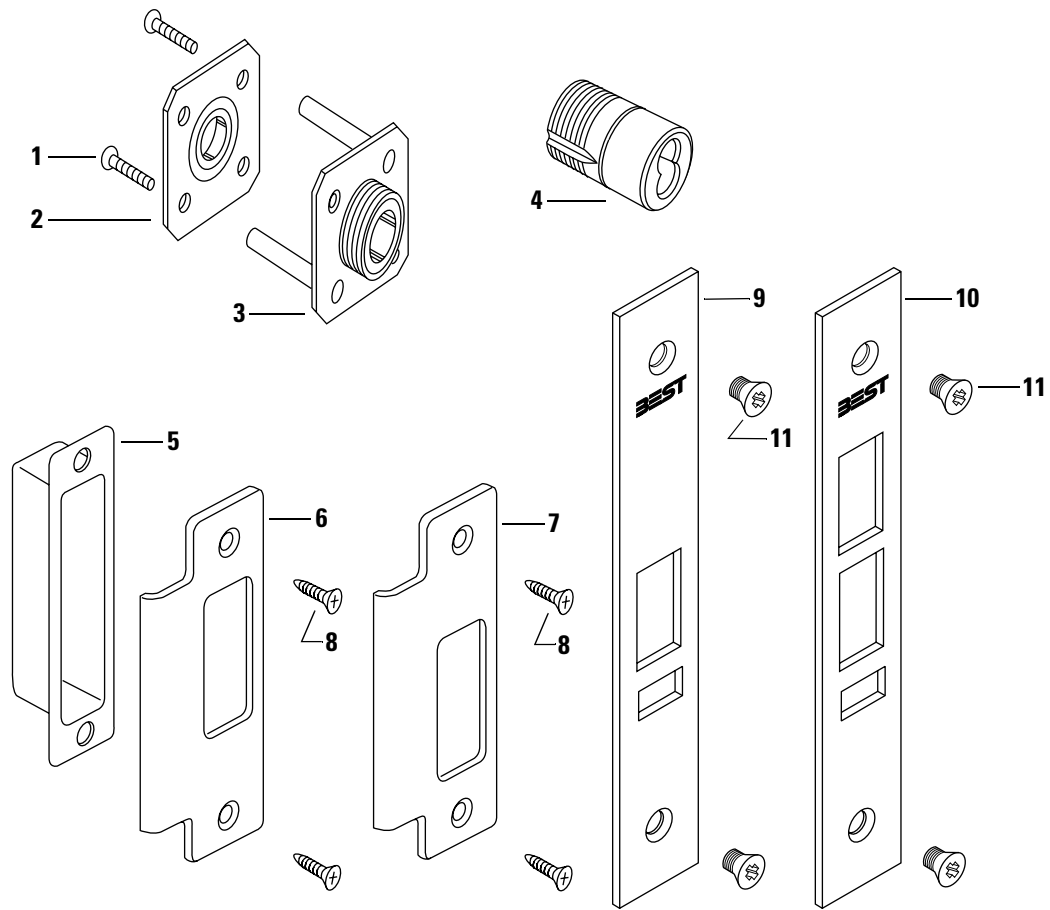


Figure 2.8 Other mortise components

Other mortise components parts list

Refer to [Figure 2.8](#) and the table below to find the part you need.

Item	Part no.	Qty.	Description
1	A18991	2	Mounting plate screw
2	B35030	1	Inside mounting plate
3	B35247	1	Outside mounting plate
4	B61231	1	Cylinder for 1 3/4"-2" thick doors for brass escutcheons (EV or FV functions)
not shown	B61232	1	Cylinder for 2 1/4"-2 1/2" thick doors for brass escutcheons (EV or FV functions)
not shown	B61233	1	Cylinder for 2 3/4"-3" thick doors for brass escutcheons (EV or FV functions)
not shown	B61307	1	Cylinder for 1 3/4"-2" thick doors for zinc escutcheons (EV or FV functions)
not shown	B61308	1	Cylinder for 2 1/4"-2 1/2" thick doors for zinc escutcheons (EV or FV functions)
not shown	B61309	1	Cylinder for 2 3/4"-3" thick doors for zinc escutcheons (EV or FV functions)
5	B34380	1	Strike box
6	C29517	1	Strike plate for LH/RHRB <i>or</i>
7	C29516	1	Strike plate for RH/LHRB
8	A18724	2	Standard strike screw
not shown	A34450	2	Security strike screw
9	B34515	1	Faceplate for EV and NV functions
10	D34095	1	Faceplate for FV and LV functions (deadbolt)
11	A18722	2	Standard faceplate screw <i>or</i>
not shown	A34454	2	Security faceplate screw

CYLINDRICAL COMPONENTS

CYLINDRICAL CHASSIS DIAGRAM

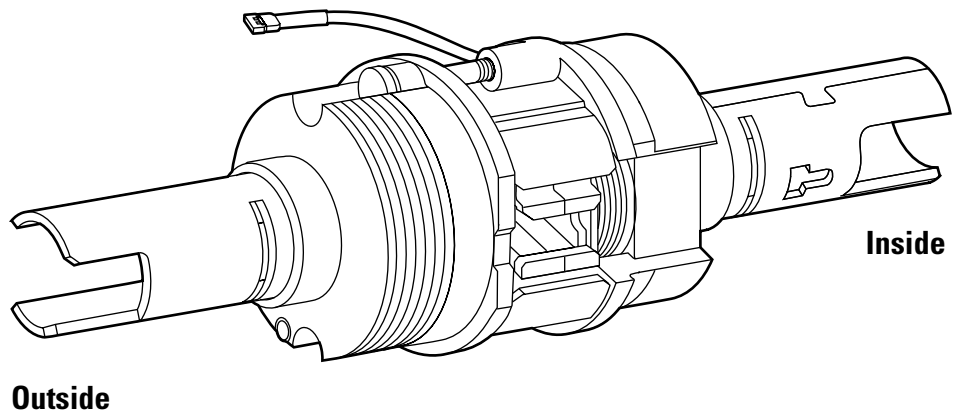


Figure 2.9 Cylindrical chassis diagram

Cylindrical chassis parts list

Refer to [Figure 2.9](#) and the table below to find the part you need.

Chassis type	Part no.
Standard chassis	D60464
Chassis for non-BEST cores	D60332
Free motion chassis	D56025

Other cylindrical
lock components
diagram

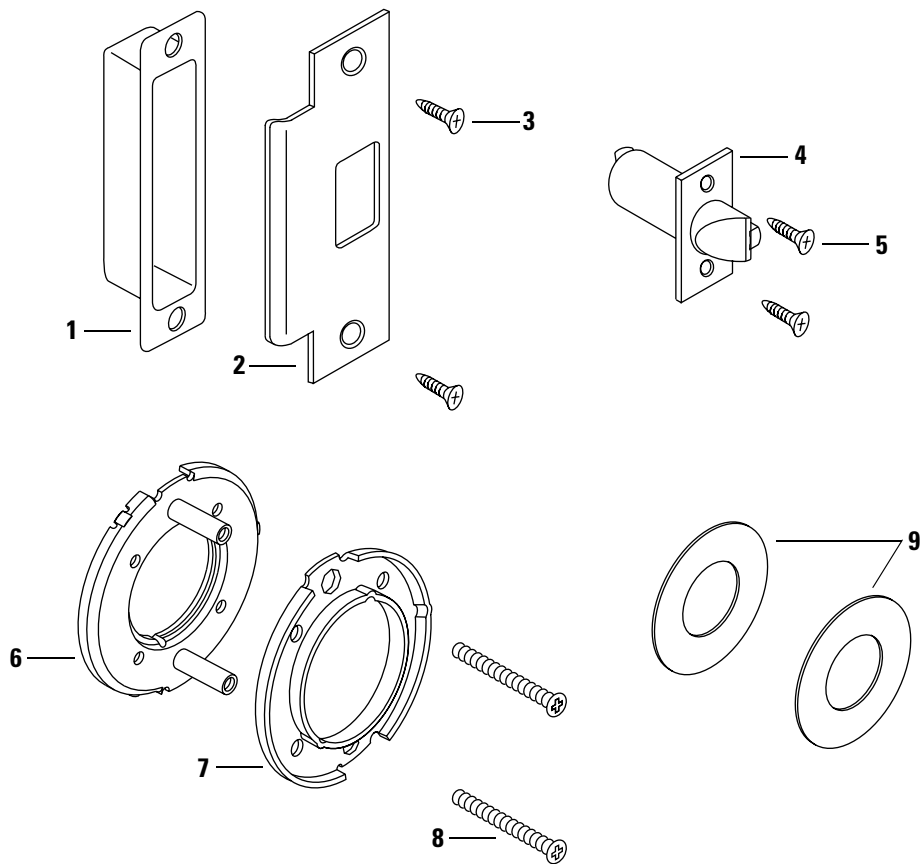


Figure 2.10 Other cylindrical lock components

Other cylindrical
lock components
parts list

Refer to [Figure 2.10](#) and the table below to find the part you need.

Item	Part no.	Qty.	Description
1	B34380	1	Strike box
2	B25641	1	Strike plate
3	A18724	2	Strike screw
4	C54680	1	Latch for 2 3/4" backset
not shown	C51682	1	Latch for 3 3/4" backset
not shown	C54684	1	Latch for 5" backset
5	A25359	2	Latch screw
6	B55603	1	Small outside rose liner
7	C55556	1	Small inside rose liner
8	B55557	2	Through-bolt screw
9	A80775	2	Hub washer

3

EXIT HARDWARE TRIM FUNCTIONS AND PARTS

The following pages contain function descriptions for B.A.S.I.S. V EX Series Exit Hardware Trim. This chapter also includes exploded diagrams showing all field-serviceable exit hardware trim parts.

FUNCTION DESCRIPTIONS

The following lists describe how the latchbolt, outside lever, and inside trim operate for each EX Series Exit Hardware Trim function.

EV–With key override	NV–Without key override
<div>Latchbolt operated by:<ul style="list-style-type: none">■ outside key■ outside lever—unless locked by internal motor drive mechanism■ inside lever</div> <div>Outside lever locked by:<ul style="list-style-type: none">■ internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN</div> <div>Outside lever unlocked by:<ul style="list-style-type: none">■ internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN</div> <div>Inside trim is always unlocked</div>	<div>Latchbolt operated by:<ul style="list-style-type: none">■ outside lever—unless locked by internal motor drive mechanism■ inside lever</div> <div>Outside lever locked by:<ul style="list-style-type: none">■ internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN</div> <div>Outside lever unlocked by:<ul style="list-style-type: none">■ internal motor drive mechanism operated by time-activated electronic signal or by valid card/PIN</div> <div>Inside trim is always unlocked</div>

TRIM COMPONENTS MAGNETIC STRIPE READER AND TRIM EXPLODED DIAGRAM

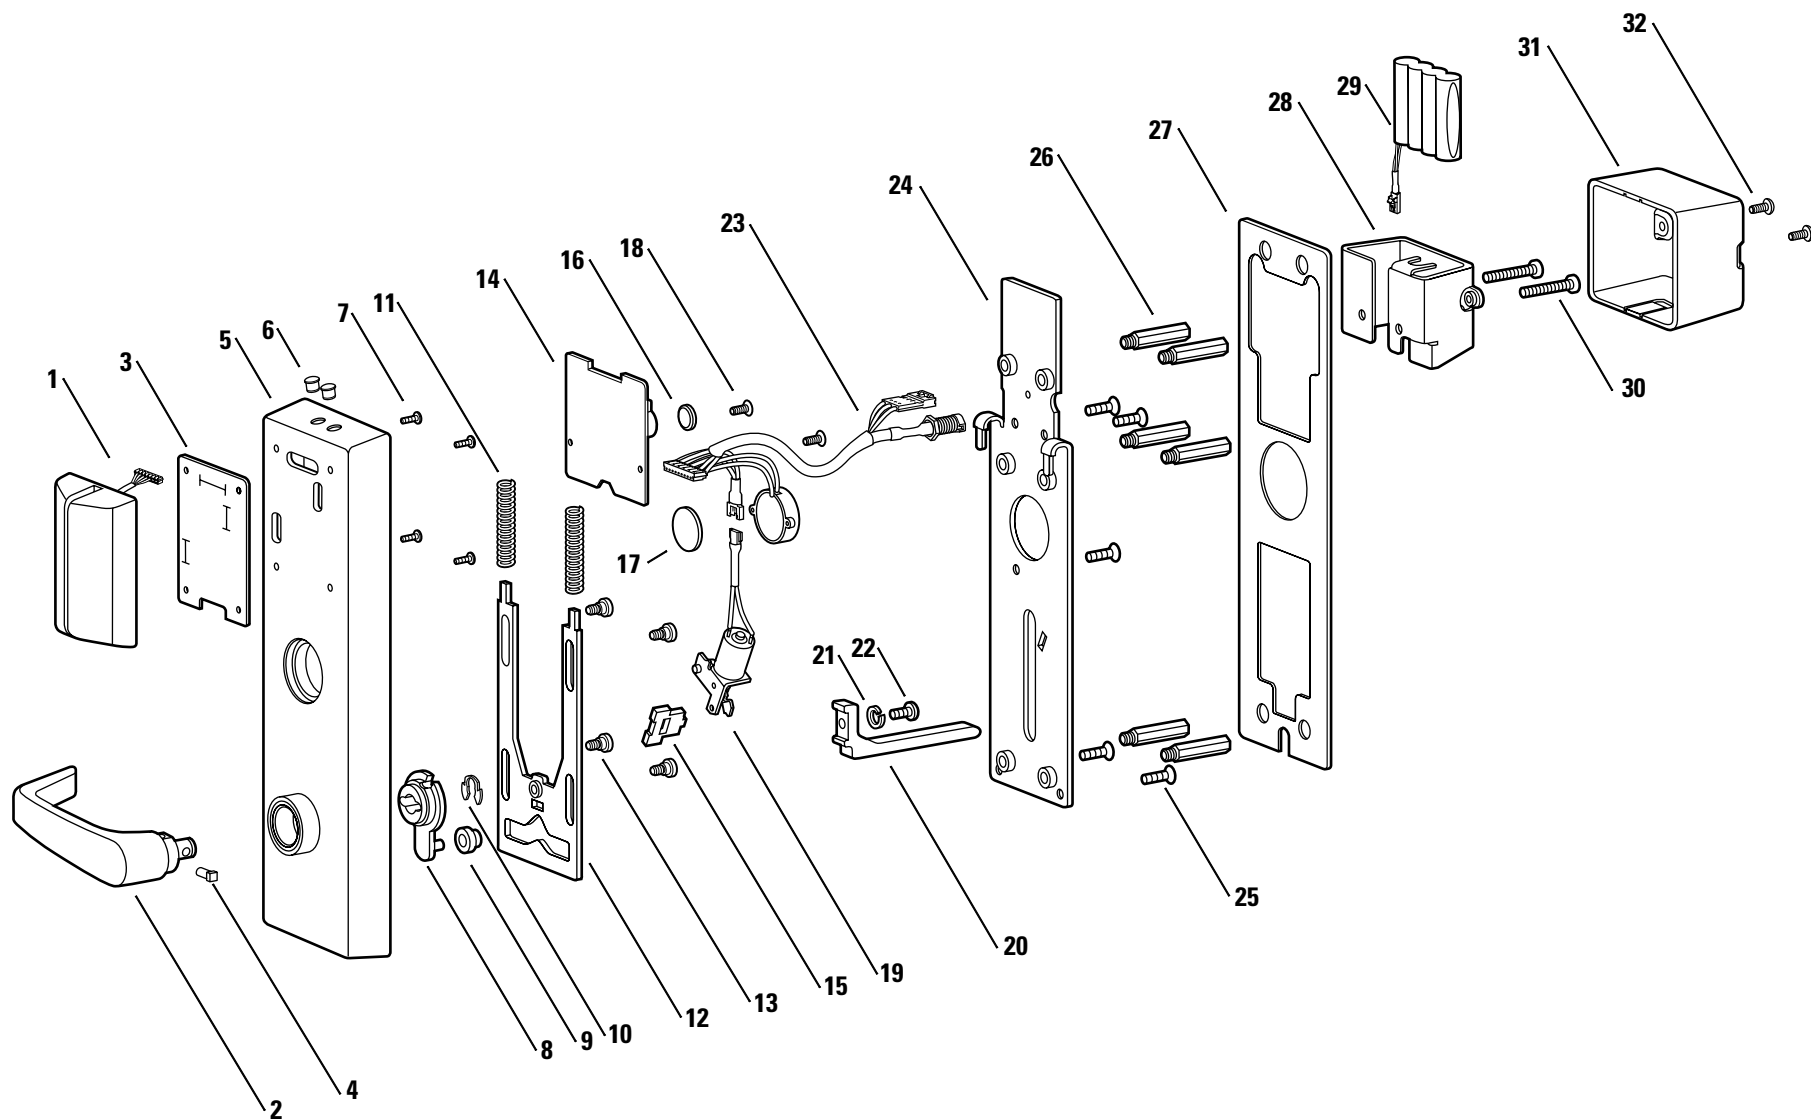


Figure 3.1 Magnetic stripe reader and trim exploded diagram (Precision Hardware—rim type shown)

Magnetic stripe reader and trim parts list

Refer to [Figure 3.1](#) and the table below to find the part that you need.

Item	Part No.	Qty.	Part
1	See magnetic stripe reader kits (page 4-4)	1	Magnetic stripe reader
2	See levers (page 3-17)	1	Lever assembly (#15 lever shown)
3	B60321	1	Reader gasket
4	See shear pin kit (page 4-10)	1	Shear pin
5	C64565	1	Escutcheon with key (EV function)
not shown	C64550	1	Escutcheon without key (NV function)
6	See lens cover kit (page 4-6)	2	Lens cover with retaining ring
7	See screw kits (page 4-7)	4	Reader assembly mounting screw
8	B64557	1	Beam
9	A64571	1	Beam roller
10	A64609	1	C-clip
11	A64610	2	Lever return spring
12	C64552	1	Yoke
13	See screw kits (page 4-7)	4	Shoulder screw
14	See magnetic stripe control electronics kit (page 4-5)	1	Magnetic stripe control electronics board assembly (with backup battery)
15	B64562	1	Locking plate
16	See backup battery kit (page 4-5)	1	Backup battery
17	See primary harness kit (page 4-10)	1	Tape for mounting the sounder
18	See screw kits (page 4-7)	2	Electronics board mounting screw
19	See motor assembly kit (page 4-10)	1	Motor assembly (with socket head screw and spacer)
20	C64558	1	Lift finger for Precision Hardware rim and rod installations
not shown	C64633	1	Lift finger for Von Duprin rim and rod installations
not shown	C64576	1	Lift finger (left hand) for Precision Hardware mortise installations
not shown	C64568	1	Lift finger (right hand) for Precision Hardware mortise installations
not shown	C64566	1	Lift finger for Von Duprin mortise installations

Item	Part No.	Qty.	Part
21	A64607	1	Washer
22	See screw kits (page 4-7)	1	Lift finger screw
23	See primary harness kit (page 4-10)	1	Primary harness
24	D64551	1	Mounting plate for Precision Hardware installations
not shown	D64634	1	Mounting plate for Von Duprin installations
25	See screw kits (page 4-7)	5	Mounting plate screw
26	See screw kits (page 4-7)	6	Mounting standoff
27	C64564	1	Escutcheon gasket
28	C64560	1	Battery bracket
29	B60726	1	Battery pack
30	See screw kits (page 4-7)	2	Battery bracket screw
31	C64559	1	Battery cover
32	See screw kits (page 4-7)	1	Battery cover screw (TORX with post head)

SMART CARD READER AND TRIM EXPLODED DIAGRAM

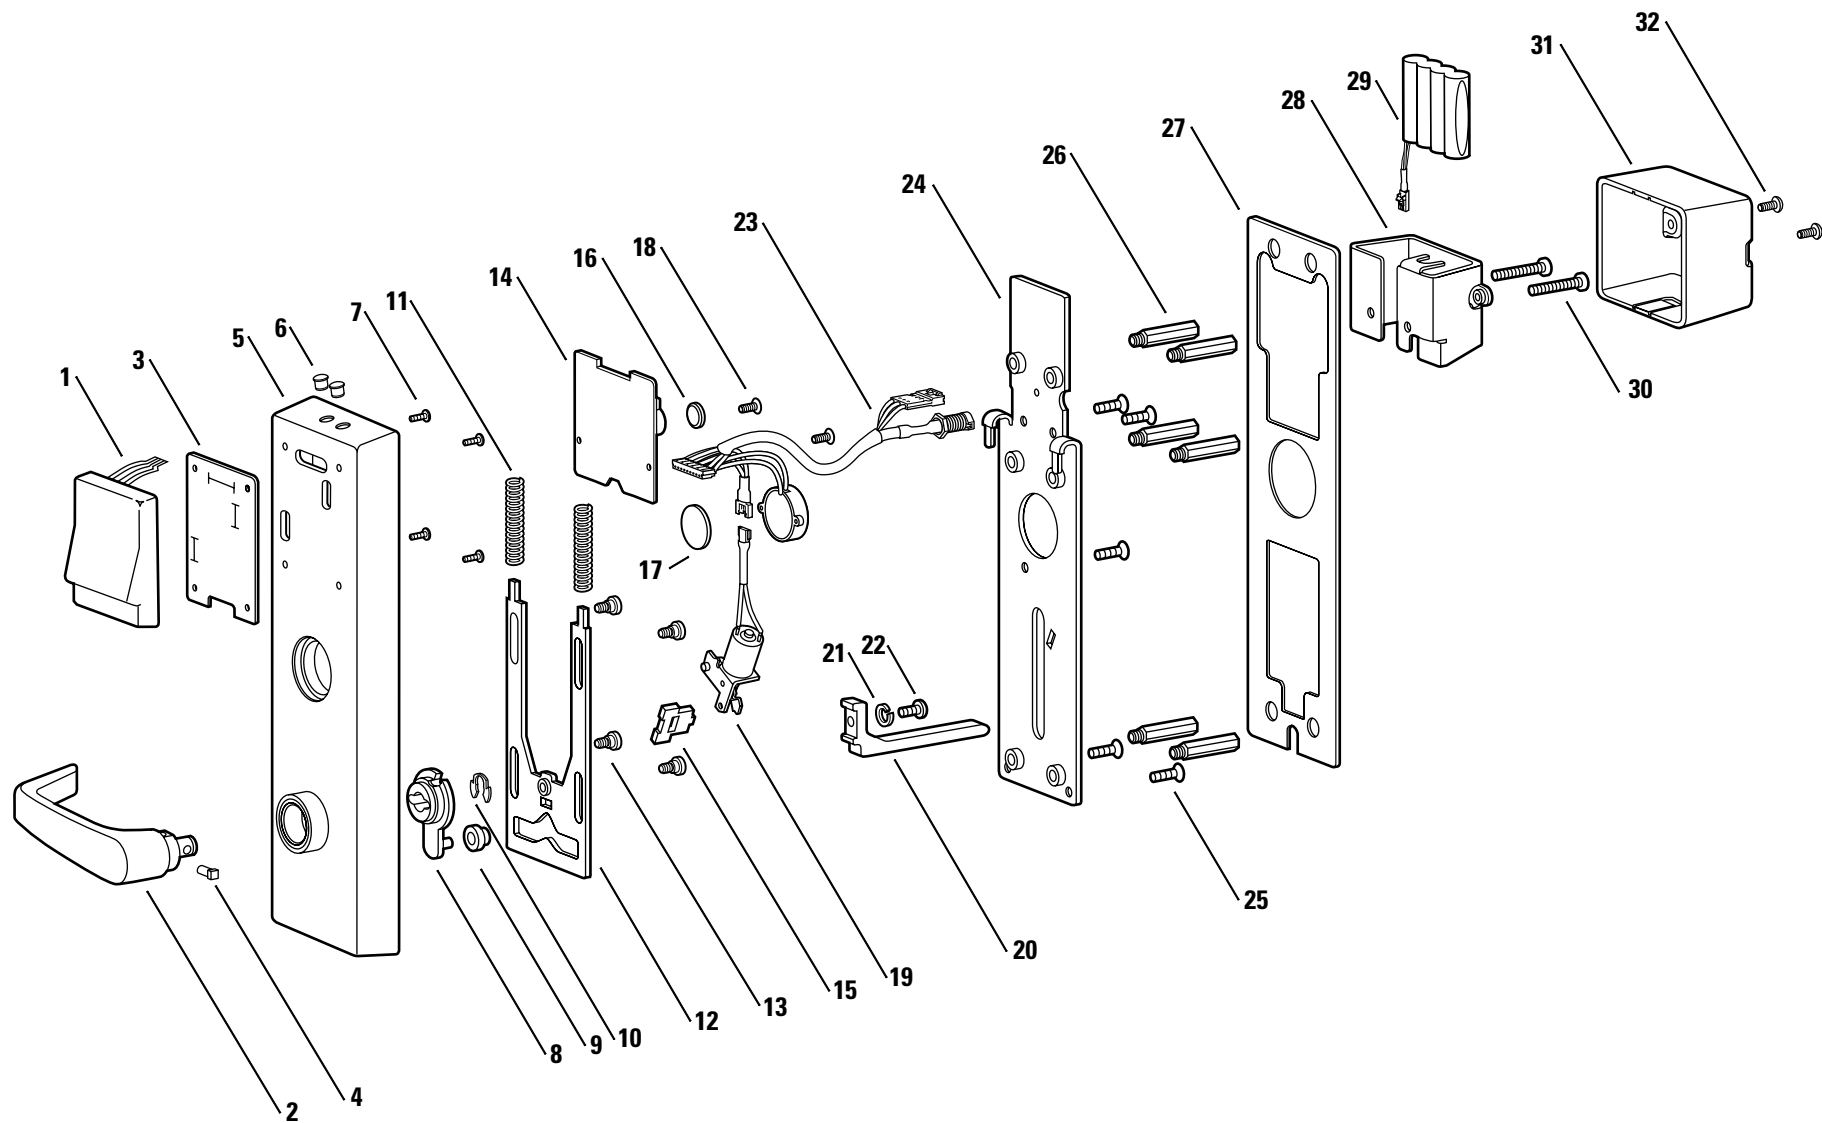


Figure 3.2 Smart card reader and trim exploded diagram (Precision Hardware–rim type shown)

Smart card reader
and trim parts listRefer to [Figure 3.2](#) and the table below to find the part that you need.

Item	Part No.	Qty.	Part
1	See smart card reader kit (page 4-4)	1	Smart card reader
2	See levers (page 3-17)	1	Lever assembly (#15 lever shown)
3	B60321	1	Reader gasket
4	See shear pin kit (page 4-10)	1	Shear pin
5	C64565	1	Escutcheon with key (EV function)
not shown	C64550	1	Escutcheon without key (NV function)
6	See lens cover kit (page 4-6)	2	Lens cover with retaining ring
7	See screw kits (page 4-7)	4	Reader assembly mounting screw
8	B64557	1	Beam
9	A64571	1	Beam roller
10	A64609	1	C-clip
11	A64610	2	Lever return spring
12	C64552	1	Yoke
13	See screw kits (page 4-7)	4	Shoulder screw
14	See smart card control electronics kit (page 4-5)	1	Smart card control electronics board assembly (with backup battery)
15	B64562	1	Locking plate
16	See backup battery kit (page 4-5)	1	Backup battery
17	See primary harness kit (page 4-10)	1	Tape for mounting the sounder
18	See screw kits (page 4-7)	2	Electronics board mounting screw
19	See motor assembly kit (page 4-10)	1	Motor assembly (with socket head screw and spacer)
20	C64558	1	Lift finger for Precision Hardware rim and rod installations
not shown	C64633	1	Lift finger for Von Duprin rim and rod installations
not shown	C64576	1	Lift finger (left hand) for Precision Hardware mortise installations
not shown	C64568	1	Lift finger (right hand) for Precision Hardware mortise installations
not shown	C64566	1	Lift finger for Von Duprin mortise installations

Item	Part No.	Qty.	Part
21	A64607	1	Washer
22	See screw kits (page 4-7)	1	Lift finger screw
23	See primary harness kit (page 4-10)	1	Primary harness
24	D64551	1	Mounting plate for Precision Hardware installations
not shown	D64634	1	Mounting plate for Von Duprin installations
25	See screw kits (page 4-7)	5	Mounting plate screw
26	See screw kits (page 4-7)	6	Mounting standoff
27	C64564	1	Escutcheon gasket
28	C64560	1	Battery bracket
29	B60726	1	Battery pack
30	See screw kits (page 4-7)	2	Battery bracket screw
31	C64559	1	Battery cover
32	See screw kits (page 4-7)	1	Battery cover screw (TORX with post head)

DUAL VALIDATION READER AND TRIM EXPLODED DIAGRAM

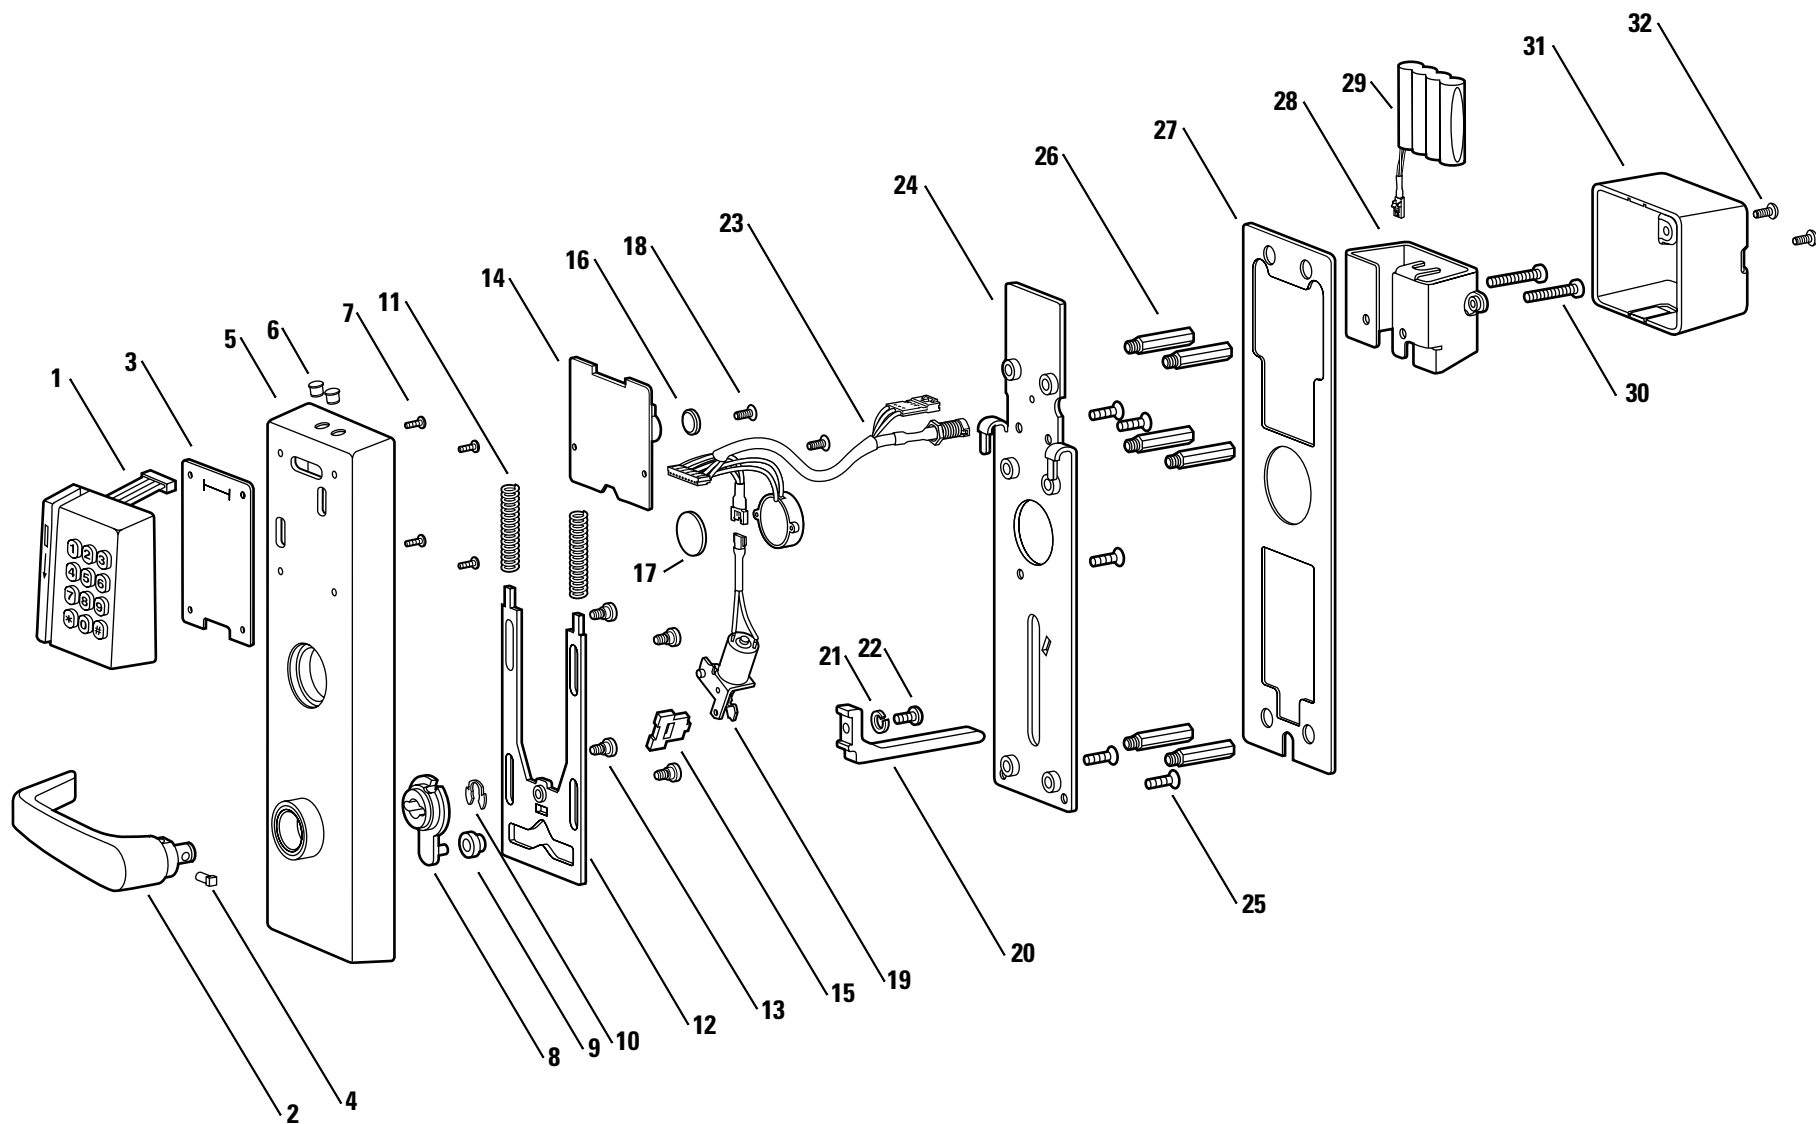


Figure 3.3 Dual validation reader and trim exploded diagram (Precision Hardware—rim type shown)

Dual validation reader and trim parts list

Refer to [Figure 3.3](#) and the table below to find the part that you need.

Item	Part No.	Qty.	Part
1	See dual validation reader kits (page 4-4)	1	Dual validation reader
2	See levers (page 3-17)	1	Lever assembly (#15 lever shown)
3	A60725	1	Reader gasket
4	See shear pin kit (page 4-10)	1	Shear pin
5	C64565	1	Escutcheon with key (EV function)
not shown	C64550	1	Escutcheon without key (NV function)
6	See lens cover kit (page 4-6)	2	Lens cover with retaining ring
7	See screw kits (page 4-7)	4	Reader assembly mounting screw
8	B64557	1	Beam
9	A64571	1	Beam roller
10	A64609	1	C-clip
11	A64610	2	Lever return spring
12	C64552	1	Yoke
13	See screw kits (page 4-7)	4	Shoulder screw
14	See dual validation control electronics kit (page 4-5)	1	Dual validation control electronics board assembly (with backup battery)
15	B64562	1	Locking plate
16	See backup battery kit (page 4-5)	1	Backup battery
17	See primary harness kit (page 4-10)	1	Tape for mounting the sounder
18	See screw kits (page 4-7)	2	Electronics board mounting screw
19	See motor assembly kit (page 4-10)	1	Motor assembly (with socket head screw and spacer)
20	C64558	1	Lift finger for Precision Hardware rim and rod installations
not shown	C64633	1	Lift finger for Von Duprin rim and rod installations
not shown	C64576	1	Lift finger (left hand) for Precision Hardware mortise installations
not shown	C64568	1	Lift finger (right hand) for Precision Hardware mortise installations
not shown	C64566	1	Lift finger for Von Duprin mortise installations

Item	Part No.	Qty.	Part
21	A64607	1	Washer
22	See screw kits (page 4-7)	1	Lift finger screw
23	See primary harness kit (page 4-10)	1	Primary harness
24	D64551	1	Mounting plate for Precision Hardware installations
not shown	D64634	1	Mounting plate for Von Duprin installations
25	See screw kits (page 4-7)	5	Mounting plate screw
26	See screw kits (page 4-7)	6	Mounting standoff
27	C64564	1	Escutcheon gasket
28	C64560	1	Battery bracket
29	B60726	1	Battery pack
30	See screw kits (page 4-7)	2	Battery bracket screw
31	C64559	1	Battery cover
32	See screw kits (page 4-7)	1	Battery cover screw (TORX with post head)

PROXIMITY READER AND TRIM EXPLODED DIAGRAM

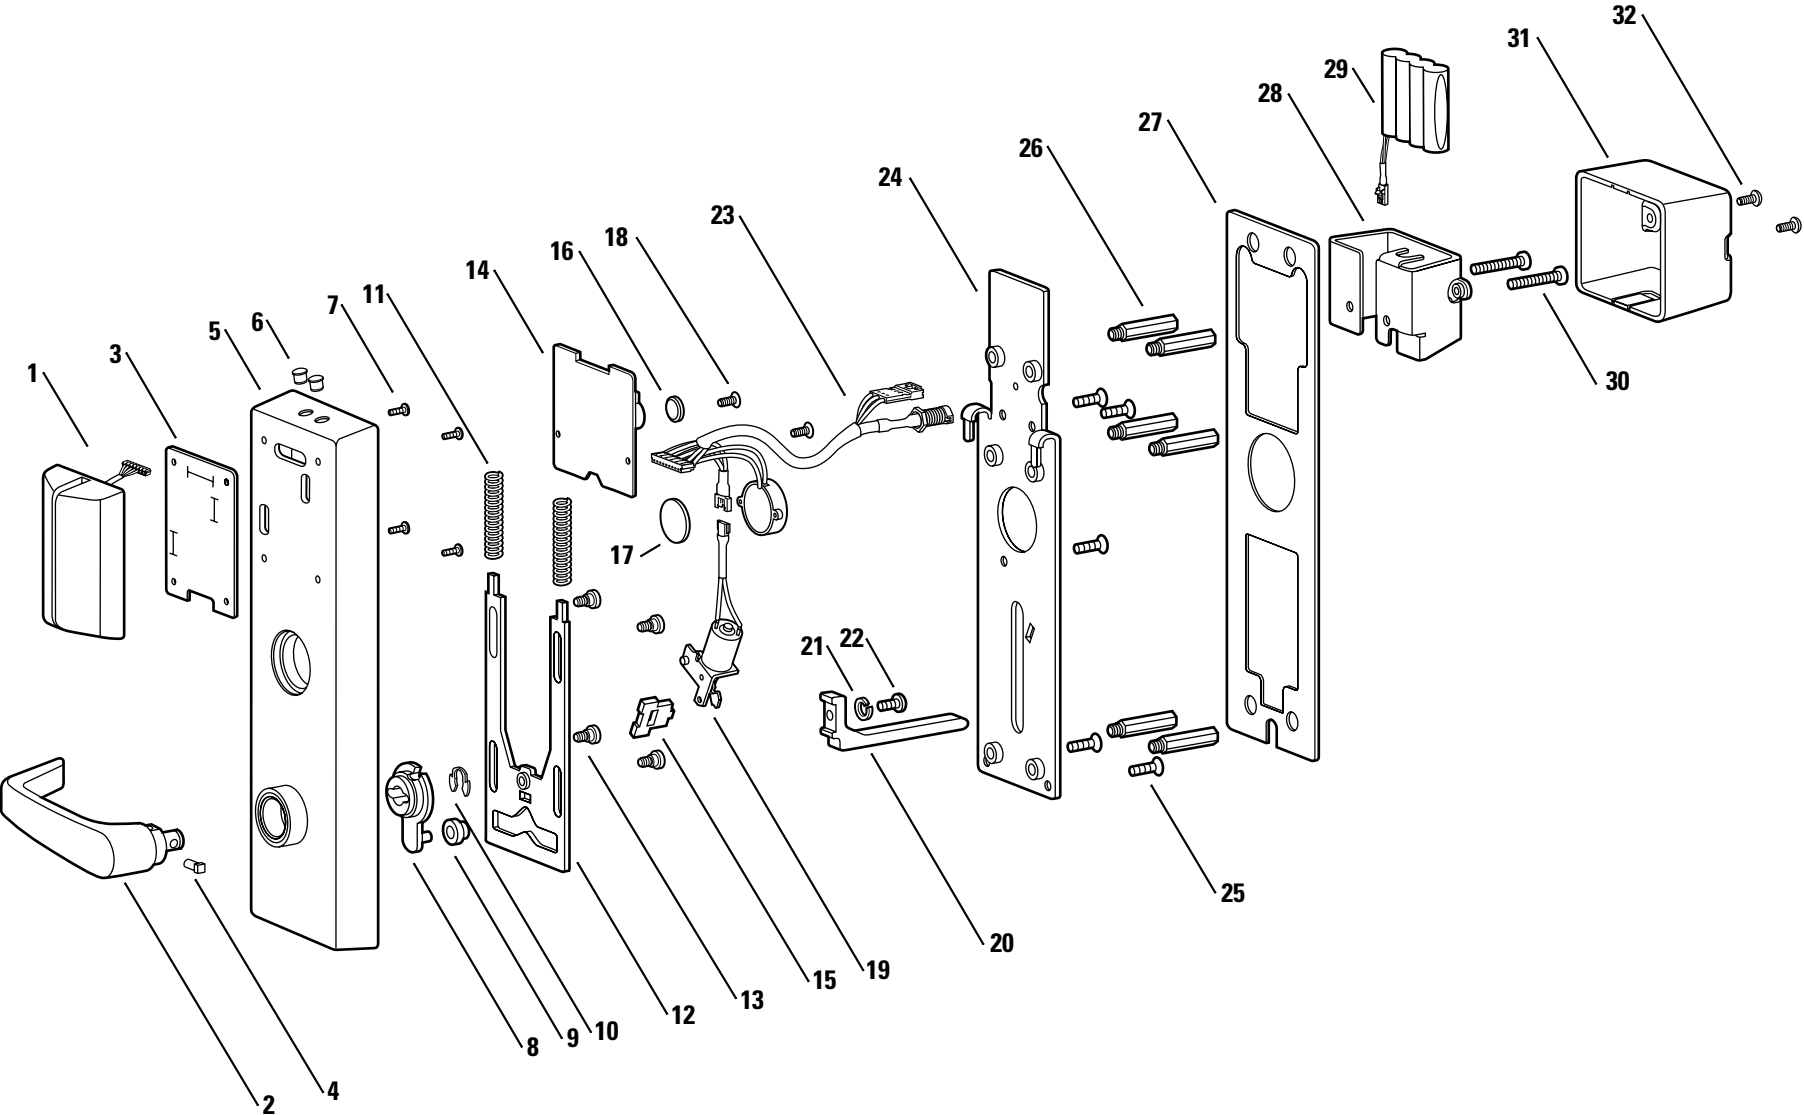


Figure 3.4 Proximity reader and trim exploded diagram (Precision Hardware—rim type shown)

**Proximity reader
and trim parts list**Refer to [Figure 3.3](#) and the table below to find the part that you need.

Item	Part No.	Qty.	Part
1	See HID proximity reader kit (page 4-4)	1	HID proximity reader <i>or</i>
not shown	See Motorola proximity reader kit (page 4-4)	1	Motorola proximity reader
2	See levers (page 3-17)	1	Lever assembly (#15 lever shown)
3	B60321	1	Reader gasket
4	See shear pin kit (page 4-10)	1	Shear pin
5	C64565	1	Escutcheon with key (EV function)
not shown	C64550	1	Escutcheon without key (NV function)
6	See lens cover kit (page 4-6)	2	Lens cover with retaining ring
7	See screw kits (page 4-7)	4	Reader assembly mounting screw
8	B64557	1	Beam
9	A64571	1	Beam roller
10	A64609	1	C-clip
11	A64610	2	Lever return spring
12	C64552	1	Yoke
13	See screw kits (page 4-7)	4	Shoulder screw
14	See HID proximity control electronics kit (page 4-5)	1	HID proximity control electronics board assembly (with backup battery)
not shown	See Motorola proximity control electronics kit (page 4-5)	1	Motorola proximity control electronics board assembly (with backup battery)
not shown	1837827	1	Jumper (ABA card format only)
15	B64562	1	Locking plate
16	See backup battery kit (page 4-5)	1	Backup battery
17	See primary harness kit (page 4-10)	1	Tape for mounting the sounder
18	See screw kits (page 4-7)	2	Electronics board mounting screw
19	See motor assembly kit (page 4-10)	1	Motor assembly (with socket head screw and spacer)
20	C64558	1	Lift finger for Precision Hardware rim and rod installations

Item	Part No.	Qty.	Part
not shown	C64633	1	Lift finger for Von Duprin rim and rod installations
not shown	C64576	1	Lift finger (left hand) for Precision Hardware mortise installations
not shown	C64568	1	Lift finger (right hand) for Precision Hardware mortise installations
not shown	C64566	1	Lift finger for Von Duprin mortise installations
21	A64607	1	Washer
22	See screw kits (page 4-7)	1	Lift finger screw
23	See primary harness kit (page 4-10)	1	Primary harness
24	D64551	1	Mounting plate for Precision Hardware installations
not shown	D64634	1	Mounting plate for Von Duprin installations
25	See screw kits (page 4-7)	5	Mounting plate screw
26	See screw kits (page 4-7)	6	Mounting standoff
27	C64564	1	Escutcheon gasket
28	C64560	1	Battery bracket
29	B61917	1	Battery pack
30	See screw kits (page 4-7)	2	Battery bracket screw
31	C64559	1	Battery cover
32	See screw kits (page 4-7)	1	Battery cover screw (TORX with post head)

CYLINDERS AND RELATED COMPONENTS

Mortise cylinder
and related
components
diagram

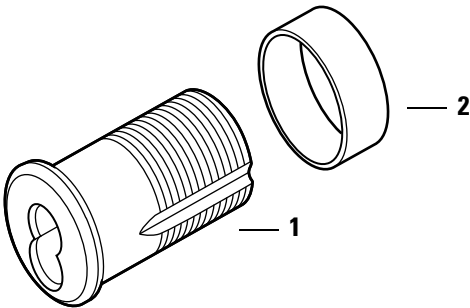


Figure 3.5 Mortise cylinder and related components diagram

Mortise cylinder
and related
components parts
list

Refer to [Figure 3.5](#) and the table below to find the part you need.

Item	Part no.	Qty.	Description
1	B35173	1	7-pin cylinder assembly
2	A06280	1	Cylinder ring

Rim cylinder and related components diagram

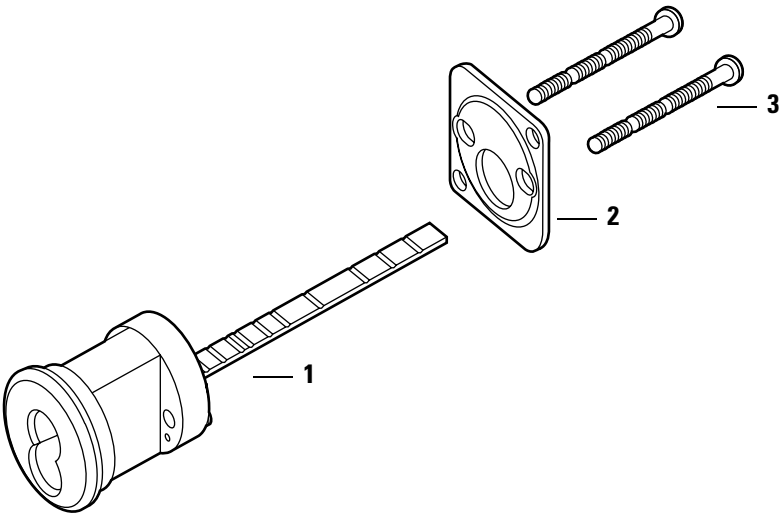


Figure 3.6 Rim cylinder and related components diagram

Rim cylinder and related components parts list

Refer to [Figure 3.6](#) and the table below to find the part you need.

Item	Part no.	Qty.	Description
1	B00689	1	7-pin cylinder assembly
2	C13910	1	Clamp plate
3	A14533	2	Mounting screws
not shown	A64635	1	Mounting sleeve ^a

a. For Von Duprin rim and rod applications only.

LEVERS

Levers diagram

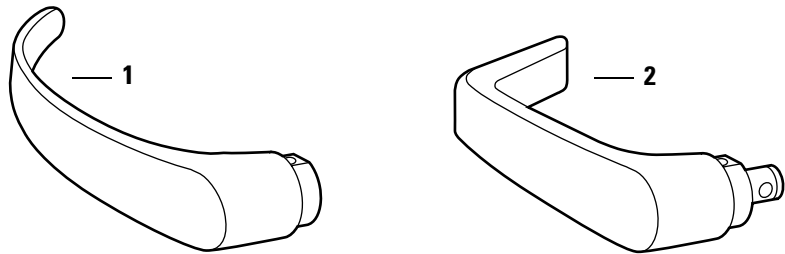


Figure 3.7 Levers diagram

Levers parts list Refer to [Figure 3.7](#) and the table below to find the part you need.

Item	Part no.	Qty.	Description
1	B64572	1	#14 round lever
2	B64577	1	#15 contoured lever

4

SHARED STANDARD AND EXIT HARDWARE TRIM PARTS

This chapter includes reader conversion information for standard B.A.S.I.S. V Locks and EX Series Exit Hardware Trim. It also includes parts lists for shared kits and system components.

READER CONVERSION

The reader conversion information provided in this section applies to both standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim. To determine whether a lock has B.A.S.I.S. G or B.A.S.I.S. V electronics, see [page 9–10](#).

Converting to a magnetic stripe reader

To change the reader for a standard B.A.S.I.S. Lock or EX Series Exit Hardware Trim to a magnetic stripe reader, order:

- B.A.S.I.S. Magnetic Stripe Reader Kit:
 - Magnetic Stripe Reader (Track 1) Kit (1837869) *or*
 - Magnetic Stripe Reader (Track 2) Kit (1833445) *or*
 - Magnetic Stripe Reader (Track 3) Kit (1837900)
- B.A.S.I.S. V Magnetic Stripe Control Electronics Kit (1833487).

Converting to a smart card reader

To change the reader for a standard B.A.S.I.S. Lock or EX Series Exit Hardware Trim to a smart card reader, order:

- B.A.S.I.S. Smart Card Reader Kit (1833560)
- B.A.S.I.S. V Smart Card Control Electronics Kit (1833602).

Converting to a dual validation reader

Since the reader gasket is extremely difficult to remove from the escutcheon in the field, BEST does not recommend conversion to or from a dual validation reader by replacing the reader. Contact your BEST Representative to obtain a complete outside escutcheon assembly.

Converting to an HID or a Motorola proximity reader

To change the reader for a standard B.A.S.I.S. Lock or EX Series Exit Hardware Trim to a proximity reader, order:

- B.A.S.I.S. V Proximity Reader Kit:
 - HID Proximity Reader Kit (1838307) *or*
 - Motorola Proximity Reader Kit (1838464)
- B.A.S.I.S. V Proximity Control Electronics Kit
 - B.A.S.I.S. V HID Proximity Control Electronics Kit (1838422) *or*
 - B.A.S.I.S. V Motorola Proximity Control Electronics Kit (1838464).

Tasks to perform for converting

Perform these tasks:

1. *For standard locks*, remove the inside and outside escutcheons from the door. For mortise lock instructions, see [page 5–3](#). For cylindrical lock instructions, see [page 7–5](#).

For exit hardware trim, remove the B.A.S.I.S. escutcheon from the door. See [page 8–13](#).

2. Replace the reader:
 - To replace the magnetic stripe reader, see [page 9-19](#) (for standard B.A.S.I.S. Locks) or [page 10-13](#) (for EX Series Exit Hardware Trim).
 - To replace the smart card reader, see [page 9-22](#) (for standard B.A.S.I.S. Locks) or [page 10-14](#) (for EX Series Exit Hardware Trim).
 - To replace the proximity reader, see [page 9-28](#) (for standard B.A.S.I.S. Locks) or [page 10-15](#) (for EX Series Exit Hardware Trim).
3. Replace the control electronics board:
 - To replace the magnetic stripe control electronics board, see [page 9-10](#) (for standard B.A.S.I.S. Locks) or [page 10-10](#) (for EX Series Exit Hardware Trim).
 - To replace the smart card control electronics board, see [page 9-12](#) (for standard B.A.S.I.S. Locks) or [page 10-11](#) (for EX Series Exit Hardware Trim).
 - To replace the proximity control electronics board, see [page 9-16](#) (for standard B.A.S.I.S. Locks) or [page 10-13](#) (for EX Series Exit Hardware Trim).
4. *For standard locks*, reinstall the inside and outside escutcheons on the door. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

For exit hardware trim, reinstall the escutcheon on the door. See [page 8-14](#).

FIELD REPLACEMENT KITS

Unless otherwise noted, each kit contains a quantity of one for each component indicated.

Reader kits

The reader kits described in the table below are used for both standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim. To determine the read head track position for magnetic stripe readers, see [page 9-19](#). To determine the read head track position for dual validation readers, see [page 9-15](#).

Kit name	Part number	Components											
		Magnetic stripe reader assembly (track 1)	Magnetic stripe reader assembly (track 2)	Magnetic stripe reader assembly (track 3)	Smart card reader assembly	Dual validation reader assembly (track 1)	Dual validation reader assembly (track 2)	Dual validation reader assembly (track 3)	HID proximity reader assembly	Motorola proximity reader assembly	Escutcheon gaskets	Mounting plate screw	Lift finger screw
Magnetic Stripe Reader (Track 1) Kit	1837869	■									†	5	■
Magnetic Stripe Reader (Track 2) Kit	1833445		■								†	5	■
Magnetic Stripe Reader (Track 3) Kit	1837900			■							†	5	■
Smart Card Reader Kit	1833560				■						†	5	■
Dual Validation Reader (Track 1) Kit	1837984					■					†	5	■
Dual Validation Reader (Track 2) Kit	1838024						■				†	5	■
Dual Validation Reader (Track 3) Kit	1838066							■			†	5	■
HID Proximity Reader Kit	1838307								■		†	5	■
Motorola Proximity Reader Kit	1838464									■	†	5	■

†. Kit includes one escutcheon gasket for standard B.A.S.I.S. Locks and one escutcheon gasket for EX Series Exit Hardware Trim.

Control electronics kits

The control electronics kits described in the table below are used for both standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim. To determine whether a lock has B.A.S.I.S. G or B.A.S.I.S. V electronics, see [page 9–10](#).

Kit name	Part number	Components											
		Magnetic stripe control electronics board	Smart card control electronics board	Dual validation control electronics board	HID proximity control electronics board	Motorola proximity control electronics board	ABA Jumper	Backup battery	Pull-tab for backup battery	Temporary operator card	Escutcheon gaskets	Mounting plate screw	Lift finger screw
B.A.S.I.S. V Magnetic Stripe Control Electronics Kit	1833487	■						■	■	■	†	5	■
B.A.S.I.S. V Smart Card Control Electronics Kit	1833602		■					■	■	■	†	5	■
B.A.S.I.S. V Dual Validation Control Electronics Kit	1838108			■				■	■	■	†	5	■
B.A.S.I.S. V HID Proximity Control Electronics Kit	1838422				■		■	■	■	■	†	5	■
B.A.S.I.S. V Motorola Proximity Control Electronics Kit	1838548					■	■	■	■	■	†	5	■

†. Kit includes one escutcheon gasket for standard B.A.S.I.S. Locks and one escutcheon gasket for EX Series Exit Hardware Trim.

Battery kits

The Backup Battery Kit is used for both standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim. The Eight-cell Battery Upgrade Kit is used only for standard B.A.S.I.S. Locks with brass escutcheons.

Kit name	Part number	Components					
		Backup battery	Escutcheon gaskets	Mounting plate screw	Lift finger screw	Eight-cell battery pack	Eight-cell battery door
Backup Battery Kit	1833843	■	†	5	■		
Eight-cell Battery Upgrade Kit (for standard B.A.S.I.S. Locks with brass escutcheons)	1838705					■	■

†. Kit includes one escutcheon gasket for standard B.A.S.I.S. Locks and one escutcheon gasket for EX Series Exit Hardware Trim.

Lens cover kit The Lens Cover Kit described in the table below is used for both standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim.

Kit name	Part number	Component			
		Lens cover with retaining ring	Escutcheon gaskets	Mounting plate screw	Lift finger screw
Lens Cover Kit	1838580	4	†	10	2

†. Kit includes one escutcheon gasket for standard B.A.S.I.S. Locks and one escutcheon gasket for EX Series Exit Hardware Trim.

Cable and harness kits for standard B.A.S.I.S. Locks The cable and harness kits described in the table below are used only for standard B.A.S.I.S. Locks. For the Primary Harness Kit for EX Series Exit Hardware Trim, see [page 4-10](#).

Kit name	Part number	Components					
		Primary harness	Tape for mounting the sounder	Sensor harness	Conversion harness	Upgrade cable	Escutcheon gasket
Primary Harness Kit	1833686	■	■				■
Sensor Harness Kit	1833728			■			■
Conversion Harness Kit	1833760				■		■
Upgrade Cable Kit	1833801					■	■

Screw kits

This section contains the following:

- Screw kits that are shared by standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim
- Screw kits that are used for all standard B.A.S.I.S. Locks
- Screw kits that are used only for standard B.A.S.I.S. Locks with zinc escutcheons
- Screw kits that are used only for standard B.A.S.I.S. Locks with brass escutcheons
- Screw and spring kits for EX Series Exit Hardware Trim.

Shared internal screw kits

The internal screw kits described in the table below are used for both standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim.

Kit name	Part number	Components	
		Reader assembly mounting screw	Electronics board mounting screw
Reader Assembly Mounting Screw Kit	1838621	25	
Electronics Board Mounting Screw Kit	1839300		25

Upper escutcheon screw kits for all standard B.A.S.I.S. Locks

Kit name	Part number	Components					
		Upper escutcheon screw for 1 3/4" thick doors	Upper escutcheon screw for 2" thick doors	Upper escutcheon screw for 2 1/4" thick doors	Upper escutcheon screw for 2 1/2" thick doors	Upper escutcheon screw for 2 3/4" thick doors	Upper escutcheon screw for 3" thick doors
Upper Escutcheon Screw for 1 3/4" Thick Doors Kit	1846978	25					
Upper Escutcheon Screw for 2" Thick Doors Kit	1847018		25				
Upper Escutcheon Screw for 2 1/4" Thick Doors Kit	1847050			25			
Upper Escutcheon Screw for 2 1/2" Thick Doors Kit	1847091				25		
Upper Escutcheon Screw for 2 3/4" Thick Doors Kit	1847133					25	
Upper Escutcheon Screw for 3" Thick Doors Kit	1847175						25

Lower escutcheon screw kits for standard B.A.S.I.S. Locks with brass escutcheons

Kit name	Part number	Components					
		Lower escutcheon screw for 1 3/4" thick doors	Lower escutcheon screw for 2" thick doors	Lower escutcheon screw for 2 1/4" thick doors	Lower escutcheon screw for 2 1/2" thick doors	Lower escutcheon screw for 2 3/4" thick doors	Lower escutcheon screw for 3" thick doors
Lower Escutcheon Screw for 1 3/4" Thick Doors Kit	1877702	10					
Lower Escutcheon Screw for 2" Thick Doors Kit	1877744		10				
Lower Escutcheon Screw for 2 1/4" Thick Doors Kit	1876557			10			
Lower Escutcheon Screw for 2 1/2" Thick Doors Kit	1876599				10		
Lower Escutcheon Screw for 2 3/4" Thick Doors Kit	1876630					10	
Lower Escutcheon Screw for 3" Thick Doors Kit	1876672						10

Lower escutcheon screw kits for standard B.A.S.I.S. Locks with zinc escutcheons

Kit name	Part number	Components					
		Lower escutcheon screw for 1 3/4" thick doors	Lower escutcheon screw for 2" thick doors	Lower escutcheon screw for 2 1/4" thick doors	Lower escutcheon screw for 2 1/2" thick doors	Lower escutcheon screw for 2 3/4" thick doors	Lower escutcheon screw for 3" thick doors
Lower Escutcheon Screw for 1 3/4" Thick Doors Kit	1838663	25					
Lower Escutcheon Screw for 2" Thick Doors Kit	1839342		25				
Lower Escutcheon Screw for 2 1/4" Thick Doors Kit	1839384			25			
Lower Escutcheon Screw for 2 1/2" Thick Doors Kit	1838380				25		
Lower Escutcheon Screw for 2 3/4" Thick Doors Kit	1846894					25	
Lower Escutcheon Screw for 3" Thick Doors Kit	1846936						25

Battery door screw kits for standard B.A.S.I.S. Locks

The battery door screw kits described in the table below are used only for standard B.A.S.I.S. Locks. For the battery cover and battery bracket screw kits for EX Series Exit Hardware Trim, see the table at the bottom of this page.

Kit name	Part number	Components	
		McGard battery door screw	TORX battery door screw
McGard Battery Door Screw Kit	1839489	10	
TORX Battery Door Screw Kit	1839447		25

Screw and spring kits for EX Series Exit Hardware Trim

Kit name	Part number	Components									
		TORX battery cover screw	1 1/4" battery bracket screw	1 3/4" battery bracket screw	Mounting standoff	Mounting plate screw	Lever return spring	Shoulder screw (for yoke)	Lift finger screw	Motor mounting screw	Motor stop spacer
TORX Battery Cover Screw Kit	1879139	10									
Battery Bracket Screw Kit for Doors Less than 2" Thick Kit	1879055		10								
Battery Bracket Screw for Doors 2" Thick or Greater Kit	1879097			10							
Mounting Standoff Kit	1877587				10						
Mounting Plate Screw Kit	1879170					10					
Lever Return Spring Kit	1877545						10				
Shoulder Screw (for Yoke) Kit	1879338							10			
Lift Finger Screw Kit	1879411								10		
Motor Mounting Screw Kit	1879370									10	10

**Internal part kits
for EX Series
Exit Hardware Trim**

Kit name	Part number	Components									
		Primary harness	Tape for mounting the sounder	Motor assembly	Socket head screw	Spacer	Shear pin	Shoulder screw	Mounting plate screw	Lift finger screw	Escutcheon gasket
Primary Harness Kit	1878931	■	■						5	■	■
Motor Assembly Kit	1878973		■	■	■	■			5	■	■
Shear Pin Kit	1879013						■	4	5	■	■

**Sensor module kits
for standard
B.A.S.I.S. Locks**

Kit name	Part number	Components		
		Sensor module with deadbolt & key override	Sensor module with key override	Sensor module with deadbolt
Sensor Module with Deadbolt & Key Override Kit	1833885	■		
Sensor Module with Key Override Kit	1833927		■	
Sensor Module with Deadbolt Kit	1838747			■

OTHER SYSTEM COMPONENTS

The components described in this section are used with both standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim.

Other system components diagram

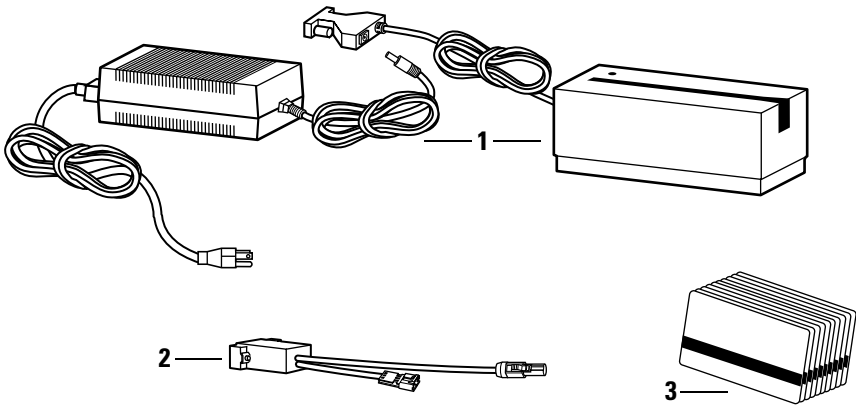


Figure 4.1 Other system components diagram

Other system components parts list

Refer to [Figure 4.1](#) and the table below to find the part you need.

Item	Part no.	Qty.	Description
1	1825277	1	Magnetic stripe card encoder with power supply
not shown	1825235	1	Smart card encoder
2	1820876	2	Programming cable
3	VPA-PVC [†]	1	PVC cards (box of 500)
not shown	VPA-POLY ^a	1	Polyester cards (box of 500)
not shown	VPA-CUST ^a	1	Photo identification/custom cards

[†]. Contact your BEST Representative for more details.

5

SERVICING STANDARD MORTISE TRIM PARTS

This chapter contains instructions for servicing standard B.A.S.I.S. V mortise trim parts.

- To remove all of the trim parts from the door, perform all of the steps for removing parts in each section of this chapter. Begin with the levers ([page 5-2](#)).
- To reinstall all of the trim parts onto the door, perform all of the steps for reinstalling parts in each section of this chapter. Begin with the cylinder ([page 5-16](#)).
- To service an individual part, see the section for that part. The instructions refer to other sections as necessary.

If you need to service...	See...
Levers	page 5-2
Inside and outside escutcheons	page 5-3
Mounting plates	page 5-13
Core	page 5-14
Mortise case faceplate	page 5-15
Cylinder	page 5-16

Note: When servicing parts, always test that the lock works properly when you're finished.

SERVICING THE LEVERS

- Removing the levers**
1. Remove the set screw cap and use a 1/8" Allen wrench to remove the set screw from the inside lever.
 2. Remove the inside lever, then the outside lever and spindle assembly from the door.

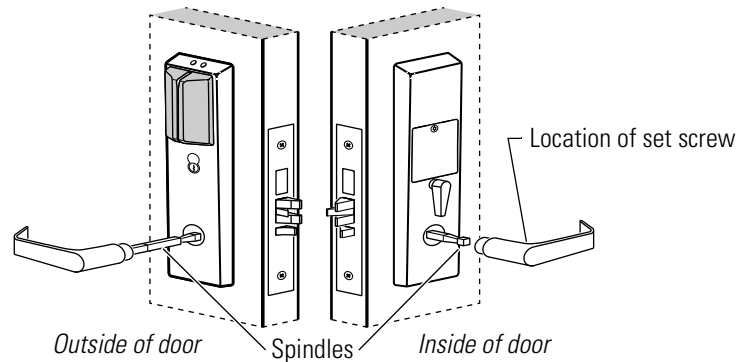


Figure 5.1 Removing and reinstalling the levers

- Reinstalling the levers**
1. Unscrew the inside spindle one full turn to allow the spindles to turn freely.
 2. With the handle pointing toward the door hinges, insert the outside lever and spindles assembly into the lock from the outside of the door.
 3. Slide the inside lever onto the inside spindle and secure it with the set screw.
 4. *If you removed the escutcheons from the door*, make sure that the core is positioned properly in the outside escutcheon (EV and FV only), the escutcheons are aligned properly on the door, and tighten the escutcheon mounting screws.

Note: For a description of lock functions, see [page 2-2](#).

5. Turn the levers to check that they operate smoothly.

SERVICING THE INSIDE AND OUTSIDE ESCUTCHEONS

Removing the inside and outside escutcheons

1. Remove the levers. See [page 5-2](#).
2. Remove the battery door:
 - a. Use a T15 TORX bit driver to remove the security screw from the battery door.
 - b. Open the battery door and remove it from the escutcheon.

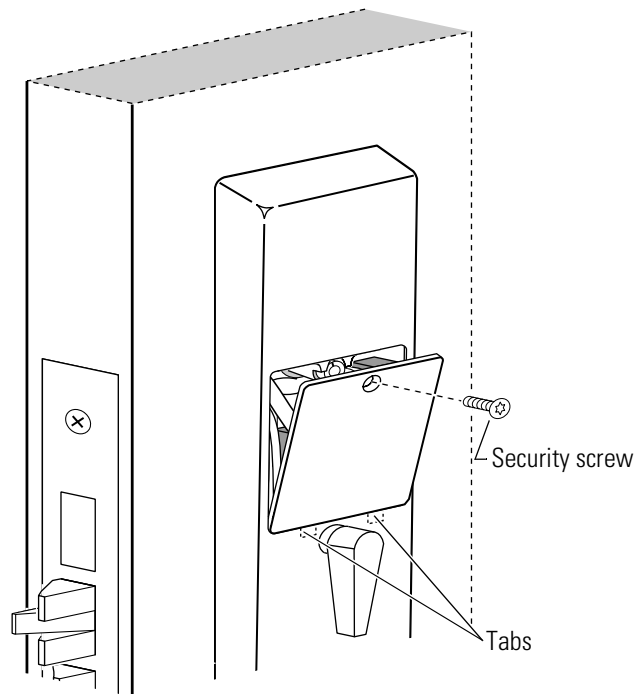


Figure 5.2 Removing the battery door (four-cell door shown)

3. Remove the battery pack:
 - a. Remove the battery pack from the battery compartment.
 - b. Disconnect the battery pack from the battery connector on the wire harness.

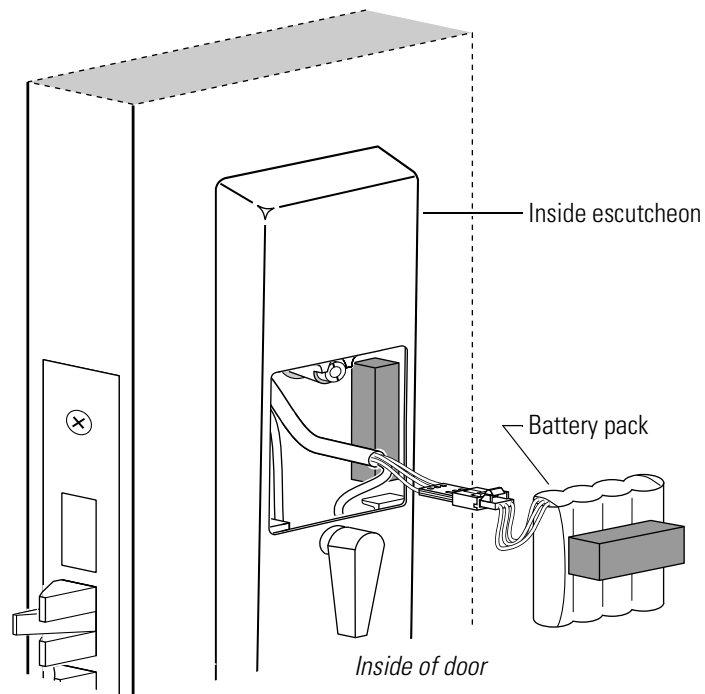


Figure 5.3 Removing the battery pack (four-cell pack shown)

4. Remove the escutcheons:
 - a. From the inside of the door, remove the upper and lower escutcheon screws.

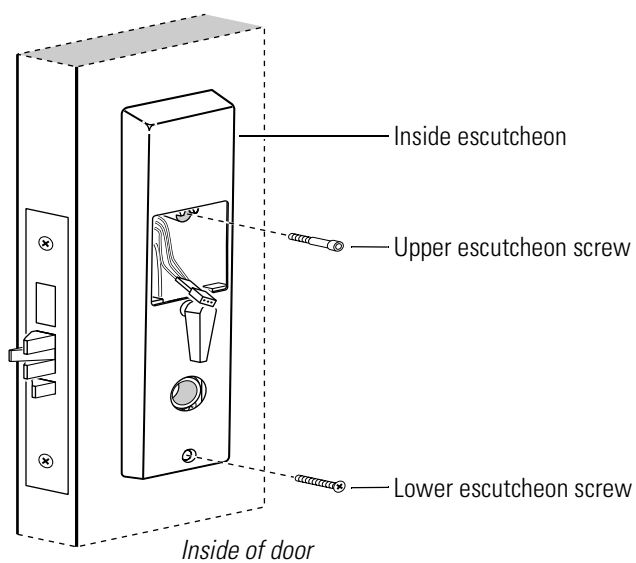


Figure 5.4 Removing the inside escutcheon

- b. Remove the inside escutcheon from the door.
- c. From the inside of the door, disconnect the motor connector, the key override sensor connector (EV and FV functions), and the deadbolt sensor connector (FV and LV functions).

Note: For a description of lock functions, see [page 2-2](#).

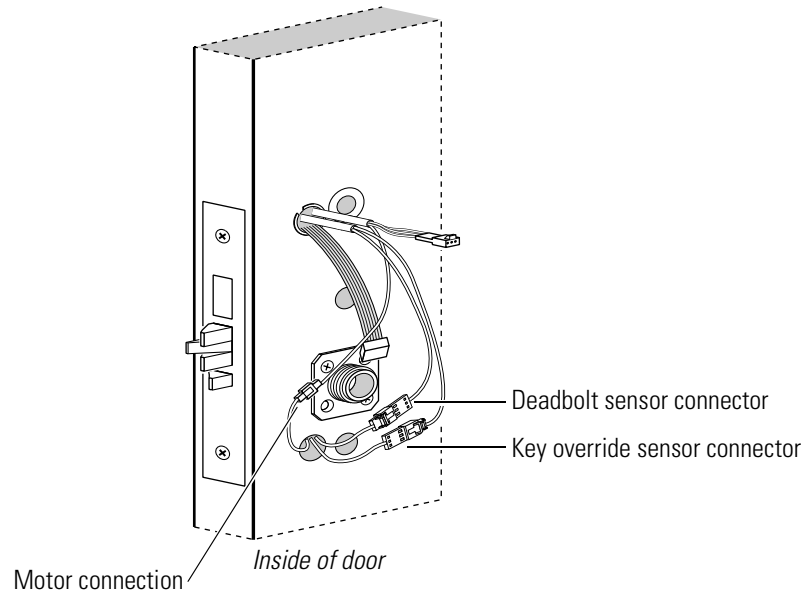


Figure 5.5 Disconnecting the motor connector and sensor connector

- d. Remove the bushings and trim hole inserts (for locks with brass escutcheons) from each side of the door.

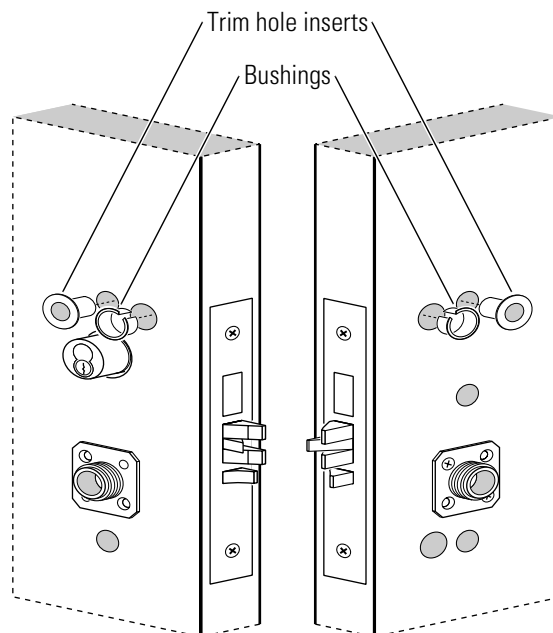


Figure 5.6 Removing the bushings and trim hole inserts

- e. Remove the outside escutcheon from the door, feeding the motor connector and sensor connectors out the harness hole.



When removing the outside escutcheon, make sure that the harnesses are not rubbed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

Reinstalling the inside and outside escutcheons

1. Activate the backup battery:

If you are reinstalling the outside escutcheon, go to Step 2.

If you are installing a new outside escutcheon, perform these steps:

- a. Locate the backup battery tab on the inside of the outside escutcheon.
- b. Pull down on the tab and remove it from the outside escutcheon to turn on the backup battery.



For the lock to operate properly, you must remove the backup battery tab.



Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.

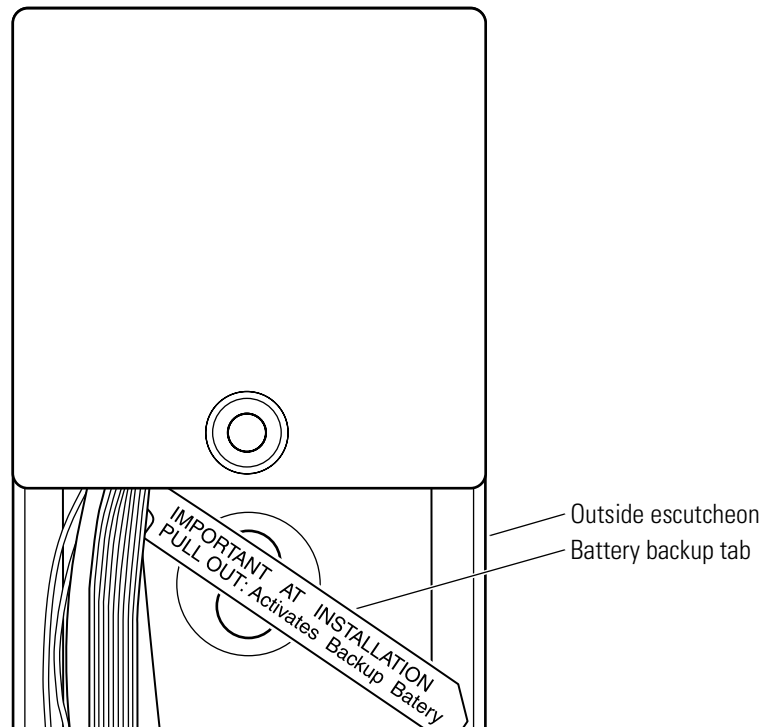


Figure 5.7 Locating the backup battery tab

2. Install the trim hole inserts and bushings:
 - a. *For locks with brass escutcheons*, insert the two trim hole inserts into the upper trim hole on each side of the door.
 - b. Insert the two bushings into the harness hole on each side of the door.

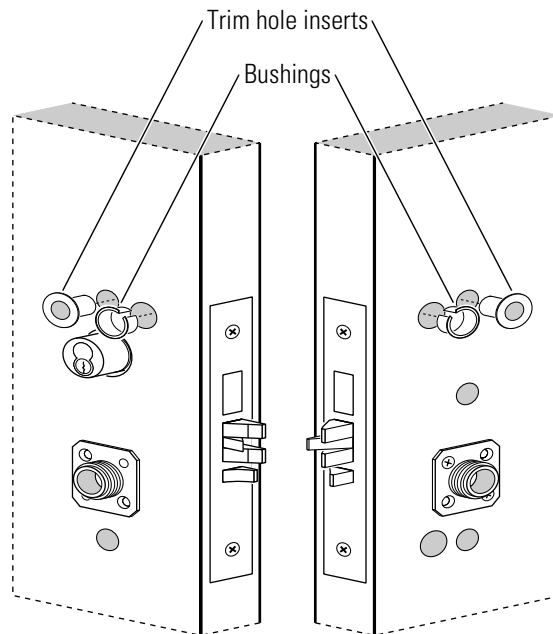


Figure 5.8 Reinstalling the trim hole inserts and bushings

3. Feed the wire harness connectors through the harness hole:
 - a. From the outside of the door, feed the upgrade cable connector through the harness hole.
 - b. From the outside of the door, feed the motor connector, battery connector, and sensor connectors through the harness hole.

Note: NV function locks do not have a sensor harness.



When routing the connectors, make sure the harnesses are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

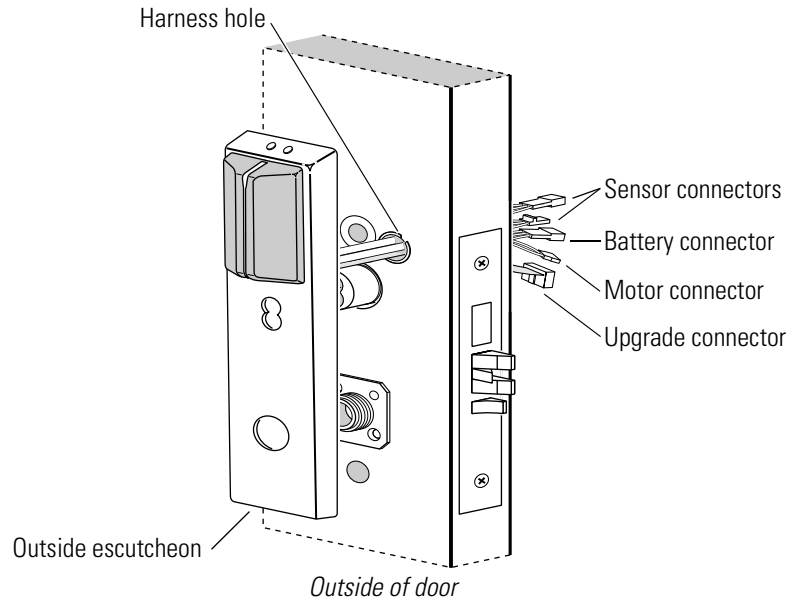


Figure 5.9 Feeding the wire harness connectors through the harness hole

4. Rest the outside escutcheon on the door by inserting the trim studs into the trim holes.

Note: You can temporarily install the outside lever to hold the outside escutcheon in place. See *Reinstalling the levers* (page 5-2).

5. Make motor and sensor connections:
- a. From the inside of the door, make the motor connection, the key override sensor connection (EV and FV functions), and the deadbolt sensor connection (FV and LV functions).

Note 1: It is physically possible to connect the key override sensor connector from the mortise case to the battery connector from the wire harness. To avoid this mistake, connect only the connectors with matching wire colors.

Note 2: The upgrade cable is used for upgrading the lock without removing the lock from the door. This cable does not connect to a mating lock connector.

Note 3: For a description of lock functions, see [page 2-2](#).



Caution

When making the motor connection and sensor connections, make sure:

- *there are no loose wire connections where the wires are inserted into the connectors*
- *the connectors are firmly mated.*

The following table describes the motor and sensor connections.

Wire connection	Colors	No. of wires	No. of pins
Motor	Yellow Gray	2	2
Key override sensor	Gray	2	3
Deadbolt sensor	Blue	2	3

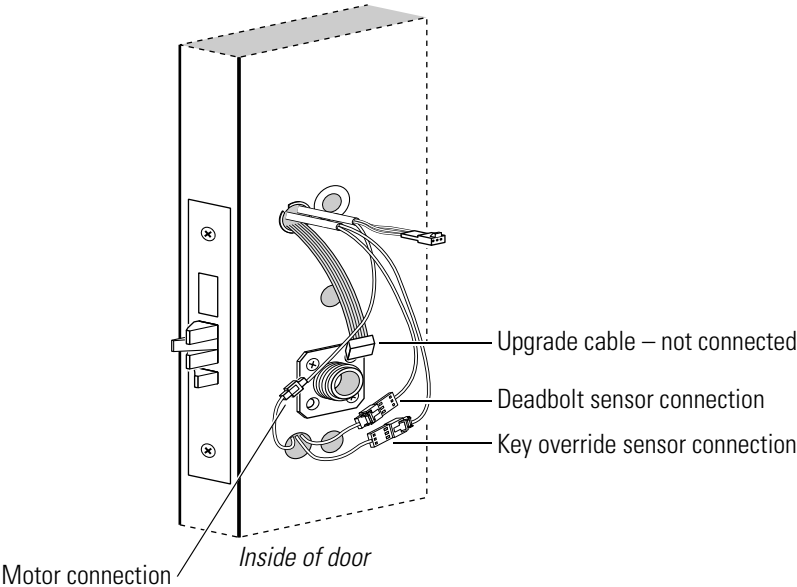


Figure 5.10 Making the motor connection and sensor connections

6. Secure the escutcheons:
 - a. Position the inside and outside escutcheons on the door.
 - b. Making sure that the escutcheons do not pinch the wires, secure the escutcheons to the door. Do not tighten the screws completely. Use the combination mounting screw in the upper trim hole and the standard mounting screw in the lower trim hole.

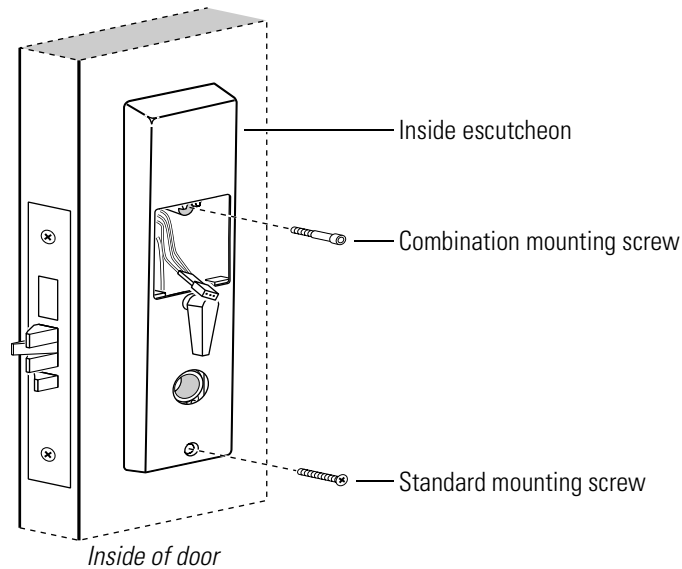


Figure 5.11 Securing the escutcheons

7. Reinstall the levers, and tighten the escutcheon mounting screws.
See [page 5-2](#).

8. Reinstall the battery pack:

- a. Connect the battery pack to the battery connector on the wire harness inside the battery compartment.

Note: The battery connection has 3 wires and 3 pins. The wire colors are:

- red with white stripe
- white
- black with white stripe.



Caution

When connecting the battery pack, make sure:

- *there are no loose wire connections where the wires are inserted into the connectors*
- *the connectors are firmly mated.*

- b. Place the battery pack inside the battery compartment.

Note: For the four-cell battery pack, position the battery so that the foam will face the battery door.



Caution

When routing the battery wires, make sure the wires are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

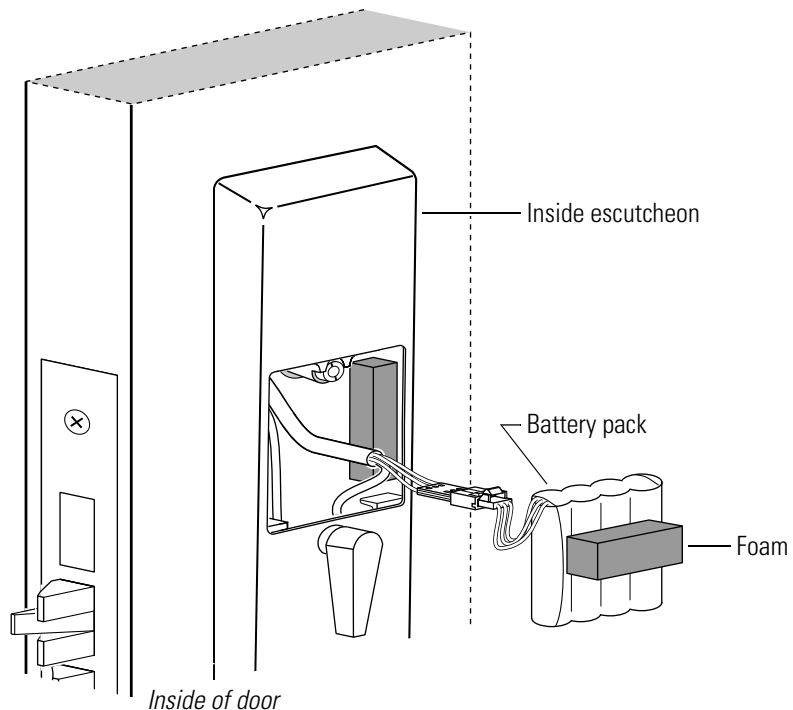


Figure 5.12 Reinstalling the battery pack (four-cell pack shown)

9. Reinstall the battery door:
 - a. *Making sure that the battery door does not pinch any wires,* insert the tabs of the battery door into its mating slots and swing the door closed.
 - b. Use a T15 TORX bit driver to secure the battery door with the security screw. Tighten firmly.

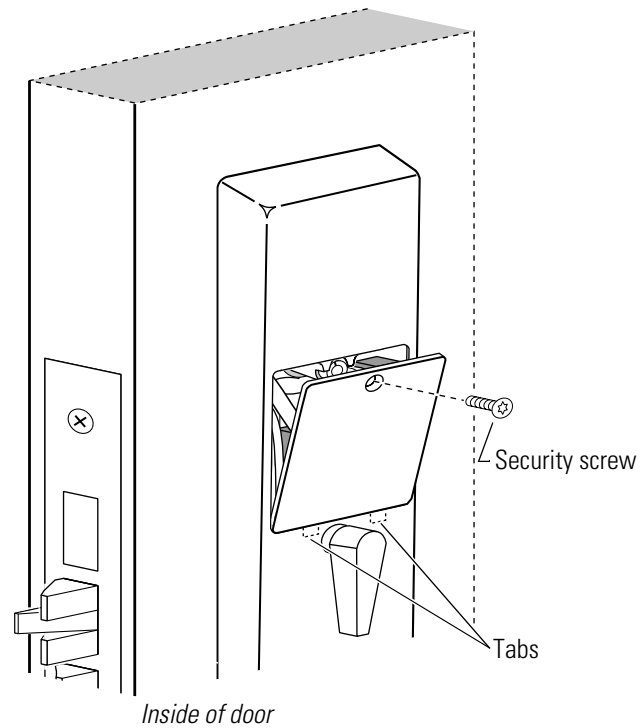


Figure 5.13 Reinstalling the battery door (four-cell door shown)

SERVICING THE MOUNTING PLATES

Removing the mounting plates

1. Remove the following parts:
 - levers ([page 5-2](#))
 - inside and outside escutcheons ([page 5-3](#)).
2. Remove the two mounting plate screws from the inside of the door. Save the screws.
3. Remove the outside and inside mounting plates.

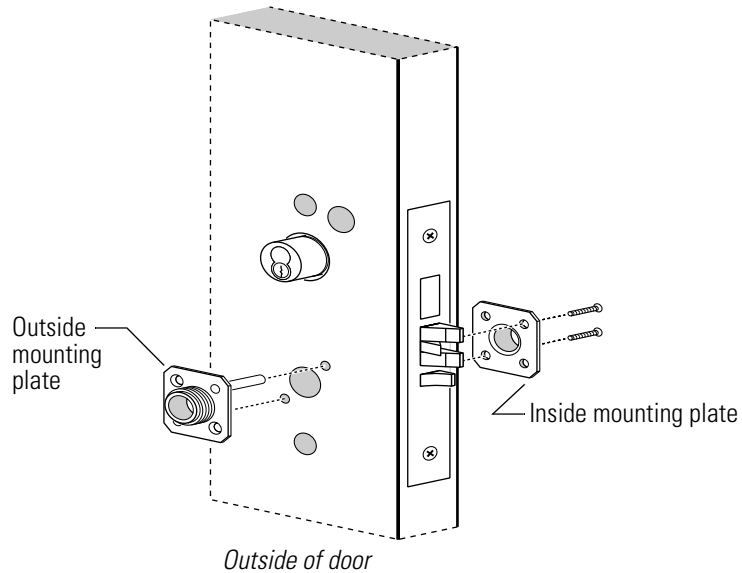


Figure 5.14 Removing and reinstalling the mounting plates

Reinstalling the mounting plates

1. Insert the outside mounting plate through the door and mortise case.
2. Position the inside mounting plate opposite the outside mounting plate and screw them securely in place.



Caution

Do not overtighten the mounting plate screws. Overtightening may compress the mortise cavity and bind the locking mechanism.

3. Reinstall the following parts:
 - inside and outside escutcheons ([page 5-6](#))
 - levers ([page 5-2](#)).

SERVICING THE CORE

Perform these steps for EV and FV function locks only.

Note: For a description of lock functions, see [page 2-2](#).

Removing the core

1. Insert the control key into the core and rotate the key 15 degrees to the right.
2. Remove the core from the cylinder.

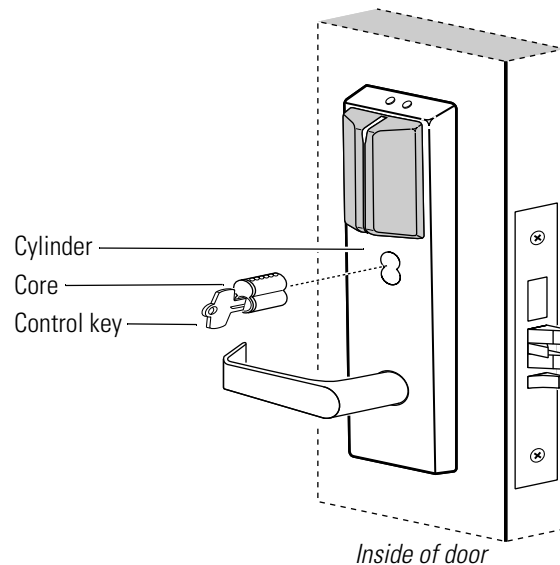


Figure 5.15 Removing and reinstalling the core

Reinstalling the core

1. Insert the control key into the core and rotate the key 15 degrees to the right.
2. With the control key in the core, insert the core into the cylinder.
3. Rotate the control key 15 degrees to the left and withdraw the key.



Caution

The control key can be used to remove cores and to access doors. Provide adequate security for the control key.

4. Reinstall the following parts:
 - escutcheons ([page 5-6](#))
 - levers ([page 5-2](#)).

SERVICING THE MORTISE CASE FACEPLATE

Removing the mortise case faceplate

Unscrew the two faceplate screws and remove the mortise case faceplate from the lock. Save the screws.

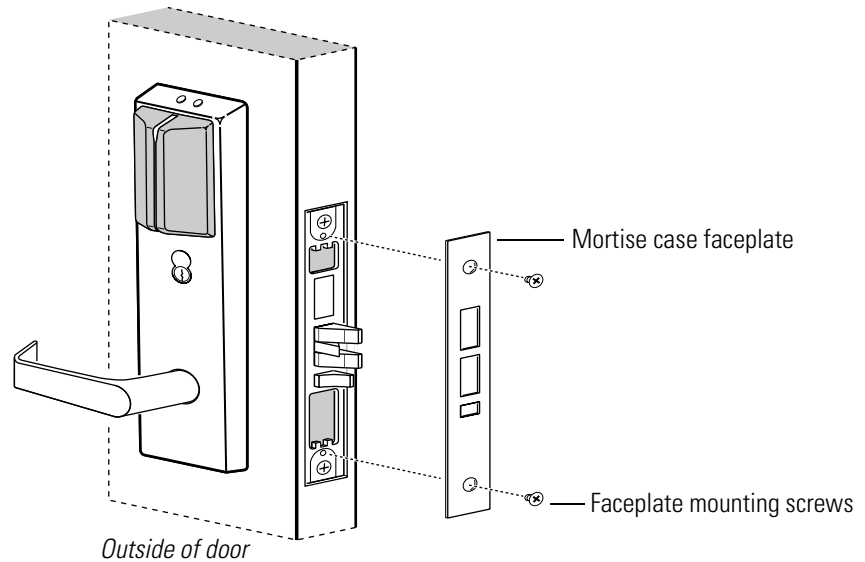


Figure 5.16 Removing and reinstalling the mortise case faceplate

Reinstalling the mortise case faceplate

1. Secure the mortise case faceplate to the mortise case with the faceplate mounting screws.
2. Check the lock for proper operation.

SERVICING THE CYLINDER

Perform these steps for EV and FV function locks only.

Note: For a description of lock functions, see [page 2-2](#).

Removing the cylinder

1. Remove the following parts:
 - levers ([page 5-2](#))
 - inside and outside escutcheons ([page 5-3](#))
 - core ([page 5-14](#))
 - mortise case faceplate ([page 5-15](#)).
2. Loosen the cylinder set screw, found on the inside of the mortise case.
3. Use a cylinder wrench (ED211) to turn the cylinder counterclockwise until you can remove it.

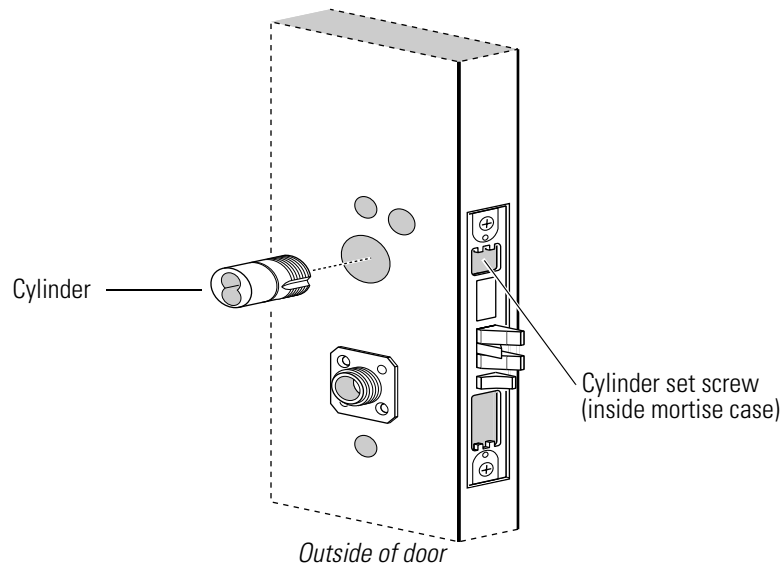


Figure 5.17 Removing and reinstalling the cylinder

Reinstalling the cylinder

1. Use a cylinder wrench to thread the cylinder into the mortise case so that the groove around the cylinder head is even with the door surface.

Note: Do not tighten the cylinder set screw until you reinstall the outside escutcheon.

A malfunction can occur if the cylinder is threaded in too far.



Caution

2. Reinstall the following parts:
 - core ([page 5-14](#))
 - inside and outside escutcheons ([page 5-6](#))
 - mortise case faceplate ([page 5-15](#))
 - levers ([page 5-2](#)).

6

SERVICING STANDARD MORTISE CASE PARTS

This chapter contains instructions for servicing standard B.A.S.I.S. V mortise case parts.

If you need to...	See...
Remove the mortise case from the door and open the case	page 6-2
Change the hand or bevel	page 6-3
Perform function conversion	page 6-10
Service parts inside the mortise case	page 6-14

Note: When replacing parts, always test that the lock works properly when you're finished.

SERVICING THE MORTISE CASE

Removing and opening the mortise case

1. Remove the inside and outside trim from the door. Instructions begin on [page 5-1](#).
2. From the edge of the door, remove the two case mounting screws.
3. Remove the case from the door.

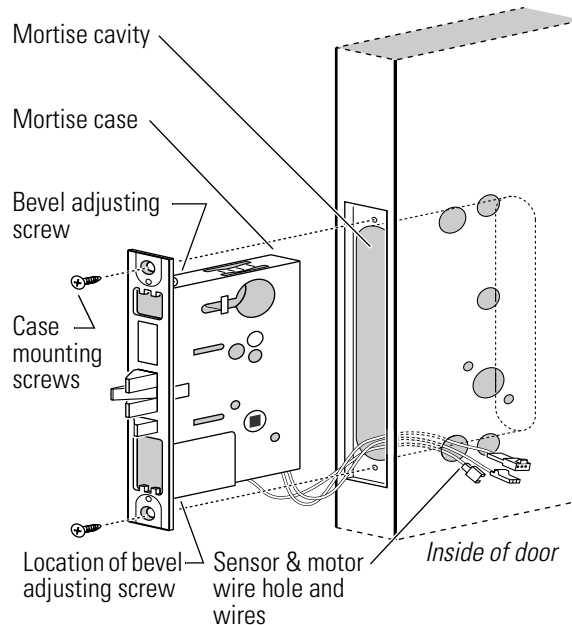


Figure 6.1 Removing and reinstalling the mortise case

4. Set the case on a flat surface.
5. Remove the case cover screw from the mortise case spacer. Remove the case spacer.
6. Remove the remaining four case cover screws. Carefully remove the case cover. Many parts are spring loaded and may shift.

Closing and reinstalling the mortise case

1. Route the motor and sensor wires through the openings in the case.
2. Place the case cover on the case and install the four case cover screws.
3. Install the mortise case spacer and the case cover screw.
4. Insert the mortise case into the mortise cavity, while feeding the sensor and motor wires into the mortise cavity and out the sensor & motor wire hole to the inside of the door.

Note: If the armored front of the mortise case is not flush with the door edge, remove the case and loosen the screws at the top and bottom of the case. Adjust the bevel of the armored front of the mortise case to match the bevel of the door. Tighten the screws and insert the mortise case back into the mortise cavity.

5. Secure the mortise case with the case mounting screws.
6. Reinstall the inside and outside trim on the door. Instructions begin on [page 5-1](#).

CHANGING THE HAND AND BEVEL

This section describes how to change the hand and/or bevel of the lock. The section includes a quick reference, outlines of the tasks required to change the hand and/or bevel, and detailed instructions for each task. Each outline references the detailed instructions for each task found in *Tasks for changing the hand and bevel*, which begins on [page 6-6](#).

Changing hand and bevel quick reference

Review the diagram below to understand the hand and bevel of the door.

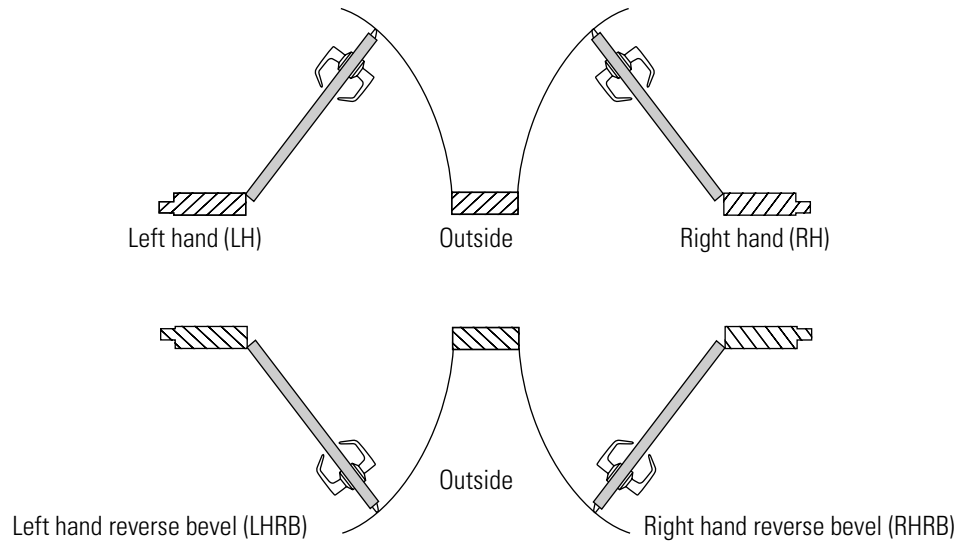


Figure 6.2 Explanation of the hand and bevel of the door

The following diagram and table show which components need to be turned over when changing the hand and bevel. See the section that follows for instructions.

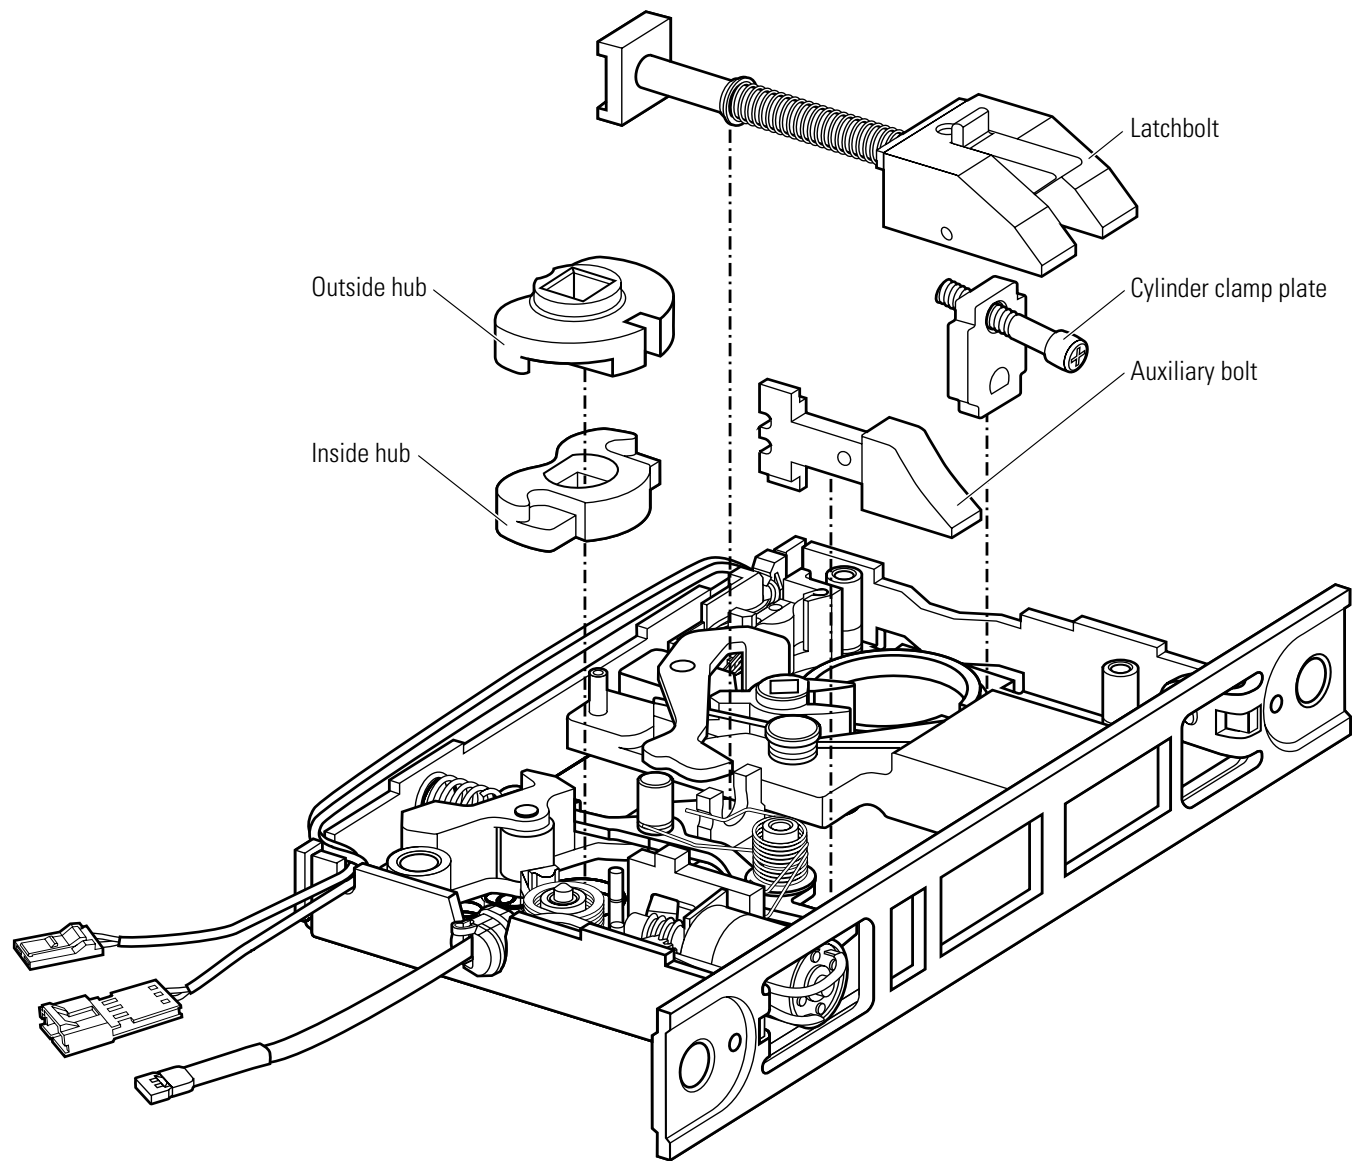


Figure 6.3 Overview of changing the hand and bevel (FV function, LH case shown)

- B represents the latchbolt and auxiliary bolt
- H represents the hubs
- C represents the cylinder clamp plate assembly.

	LH	RH	LHRB	RHRB
LH		B/H/C	B	H/C
RH	B/H/C		H/C	B
LHRB	B	H/C		B/H/C
RHRB	H/C	B	B/H/C	

The following table shows how the bolts, hubs, and cylinder clamp plate should be oriented for the hand and bevel options. The orientation indicated assumes that the case is on a flat surface, the case cover has been removed, and the part is in the case.

	Bolts	Outside hub	Inside hub	Clamp plate
LH	bevel up	top	bottom	screw up
RH	bevel down	bottom	top	screw down
LHRB	bevel down	top	bottom	screw up
RHRB	bevel up	bottom	top	screw down

Changing the hand only

Refer to the detailed instructions for each task that follows.

1. Remove and open the mortise case ([page 6-2](#)).
2. Perform the steps in *Turning over the hubs* ([page 6-6](#)).
3. If the lock has key override, perform the steps in *Turning over the cylinder clamp plate* ([page 6-7](#)).
4. Perform the steps in *Turning over the auxiliary bolt* ([page 6-8](#)).
5. Perform the steps in *Turning over the latchbolt* ([page 6-9](#)).
6. Close and reinstall the mortise case ([page 6-2](#)).

Changing the bevel only

Refer to the detailed instructions for each task that follows.

1. Remove and open the mortise case ([page 6-2](#)).
2. Perform the steps in *Turning over the auxiliary bolt* ([page 6-8](#)).
3. Perform the steps in *Turning over the latchbolt* ([page 6-9](#)).
4. Close and reinstall the mortise case ([page 6-2](#)).

Changing the hand and bevel

Refer to the detailed instructions for each task that follows.

1. Remove and open the mortise case ([page 6-2](#)).
2. Perform the steps in *Turning over the hubs* ([page 6-6](#)).
3. If the lock has key override, perform the steps in *Turning over the cylinder clamp plate* ([page 6-7](#)).
4. Close and reinstall the mortise case ([page 6-2](#)).

Tasks for changing the hand and bevel

Turning over the hubs

1. Rotate the locking bar and motor module. See [Figure 6.4](#) and [Figure 6.5](#). Remove the locking bar from the case.
2. Remove the top hub from the case, maintaining the hub's orientation.
3. Push the hub lever toward the side of the case and remove the bottom hub from the case. Maintain the hub's orientation.
4. Turn over the hubs.
5. Push the hub lever toward the side of the case and slide the now bottom hub under the auxiliary levers.
6. Insert the now top hub onto the bottom hub.

Note: The inside hub is silver-colored. It is always on the side of the case that faces the inside of the door. The outside hub is gold-colored. It is always on the side of the case that faces the outside of the door.

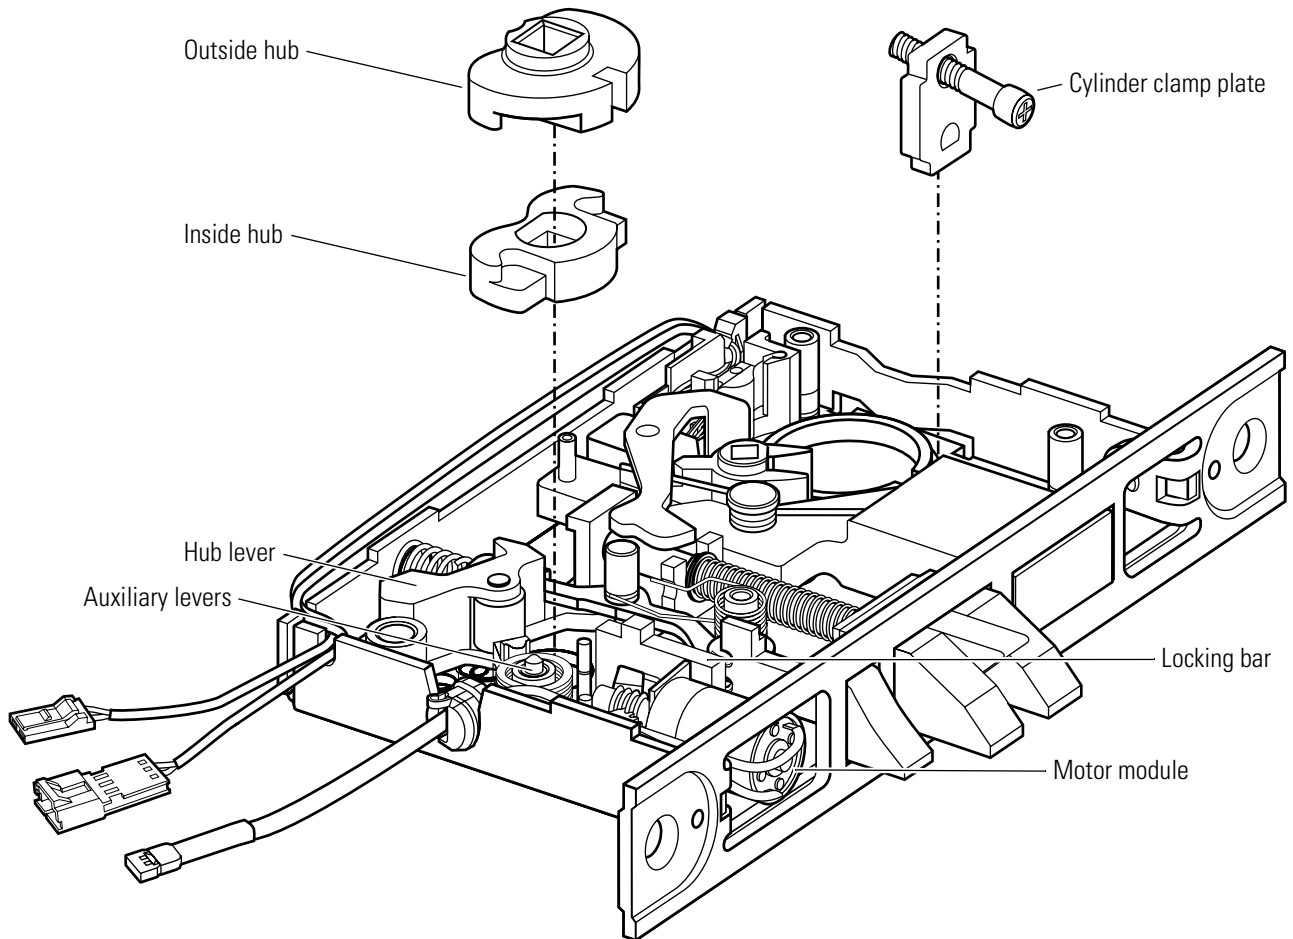


Figure 6.4 Turning over the hubs and cylinder clamp plate (FV function, LH case shown)

7. Insert the motor module's actuator into the opening in the locking bar. See [Figure 6.5](#). Rotate the components into place. The motor module locks into place in the case. The locking bar fits into the slot on the outside hub. The two feet on the bottom of the locking bar fit into the bottom of the case.

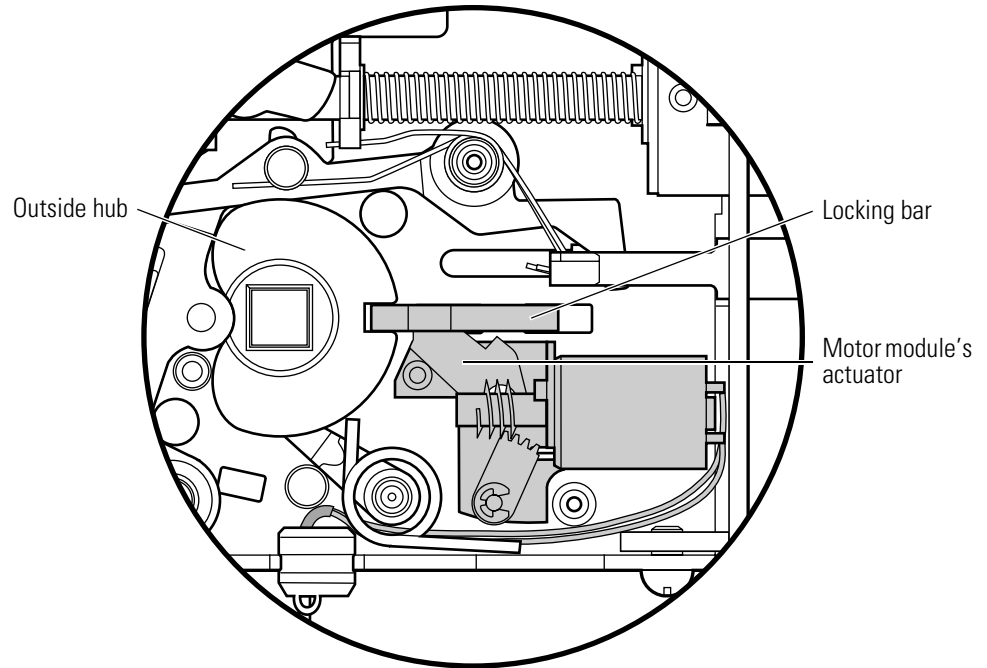


Figure 6.5 Motor module and locking bar in place

Turning over the cylinder clamp plate

Turn over the cylinder clamp plate and insert it in the case. See [Figure 6.4](#).

Note: The screw must be on the same side of the case as the cylinder.

Turning over the auxiliary bolt

1. Remove the auxiliary bolt spring and the deadlocking spring.
See [Figure 6.6](#).
2. Remove the auxiliary bolt from the case and turn it over.
3. Insert the auxiliary bolt into the case. The beveled portion of the bolt should be pushed through the front of the case and the feet should be resting in the slot.

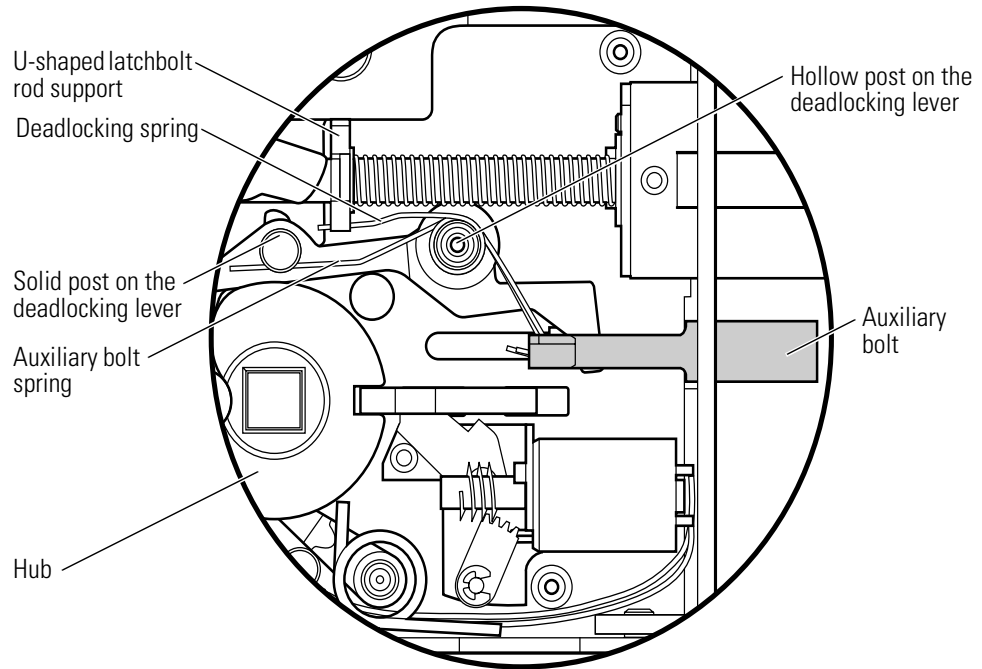


Figure 6.6 Turning over the auxiliary bolt

4. Place the auxiliary bolt spring, bent shank up, onto the hollow post on the deadlocking lever. Then place the deadlocking spring, bent shank down, on top of the auxiliary bolt spring. The center of both spring coils should rest around the hollow post.
5. Position the long, straight shank of the auxiliary bolt spring so it rests between the solid post on the deadlocking lever and the hubs. Position the short, straight shank of the deadlocking spring against the U-shaped latchbolt rod support.
6. While holding the springs on the post, grasp the bent shanks of both springs and fit them into the top groove on the auxiliary bolt. The spring tension should push the bolt toward the front of the case.

Turning over the latchbolt

1. Remove the latch lever. See [Figure 6.8](#)
2. Slide the brass grommet on the latchbolt away from the U-shaped latchbolt rod support. Grasp the latchbolt by the square-shaped tail and pull the latchbolt up and out of the case.
3. Turn over the latchbolt and rotate the anti-friction latch lever into position. See [Figure 6.7](#). Place the latchbolt in the case.

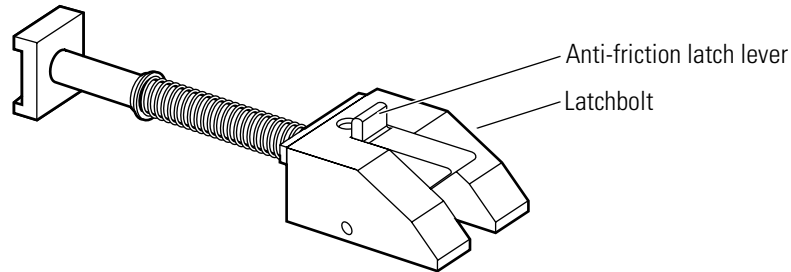


Figure 6.7 Latchbolt with anti-friction latch lever in position

4. Slide the brass grommet on the latchbolt away from the U-shaped latchbolt rod support. Rest the latchbolt rod into the U-shaped support. Release the grommet. It should snap into place.

Note 1: If you can pull the square-shaped tail out of the rod support, the latchbolt is not placed properly. Reposition the latchbolt.

Note 2: The bevel of the latchbolt must match the bevel of the auxiliary bolt.

5. Reinstall the latch lever, as shown in [Figure 6.8](#).

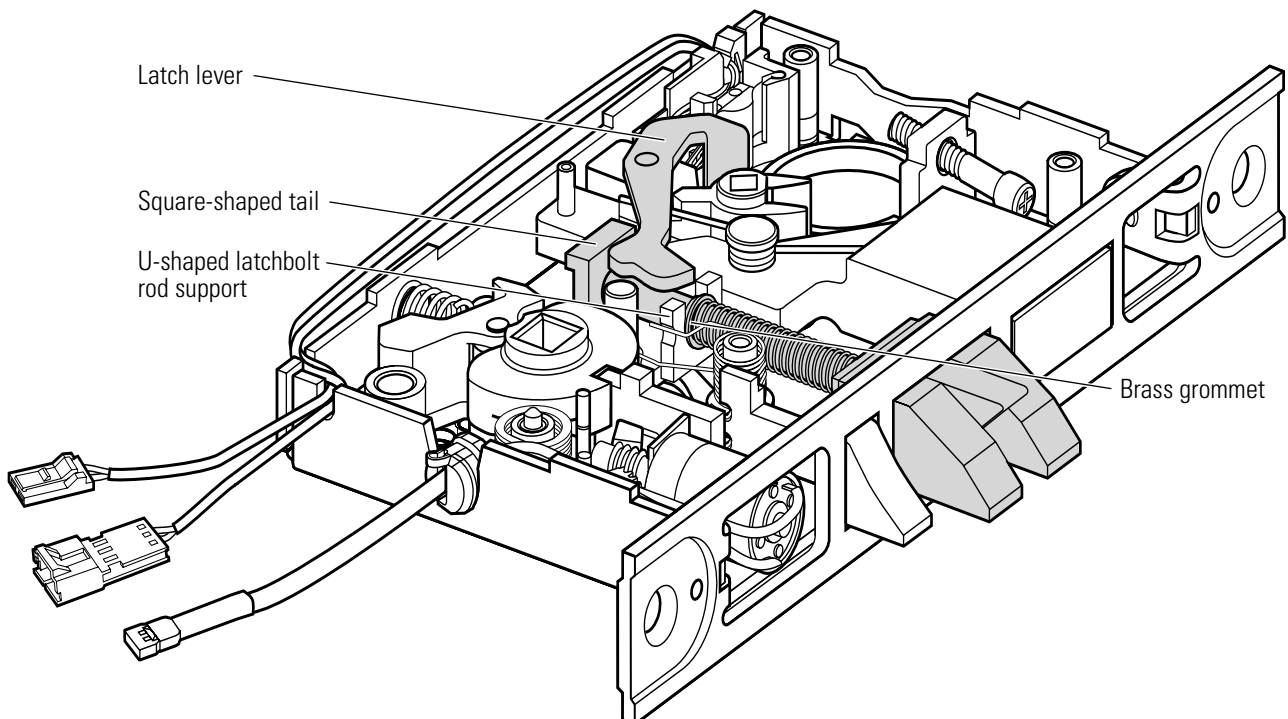


Figure 6.8 Turning over the latchbolt (FV function, LH case shown)

FUNCTION CONVERSION

The following table describes the B.A.S.I.S. mortise functions.

Function	Deadbolt	Key override
FV	✓	✓
LV	✓	
EV		✓
NV		

Removing key override

To remove key override from a B.A.S.I.S. Mortise Lock, you can convert an FV function lock to an LV function lock or an EV function lock to an NV function lock.

Note: For a description of lock functions, see [page 2-2](#).

Order the outside escutcheon, part number D62506 for brass or C60446 for zinc, and perform the tasks below.

1. Remove all of the trim parts from the door, by performing all of the steps for removing parts in each section of Chapter 5. Begin with the levers ([page 5-2](#)).
2. Remove the cylinder clamp plate:
 - a. Remove and open the mortise case ([page 6-2](#)).
 - b. Remove the clamp plate from the mortise case ([page 6-19](#)).
 - c. Close and reinstall the mortise case ([page 6-2](#)).
3. Remove all of the parts from the old outside escutcheon, by performing all of the steps for removing parts in each section of Chapter 9. Begin with the escutcheon gasket ([page 9-2](#)).
4. Install all of the parts from the old outside escutcheon into the new outside escutcheon, by performing all of the steps for reinstalling parts in each section of Chapter 9. Begin with the reader assembly:
 - magnetic stripe card reader assembly ([page 9-21](#))
 - smart card reader assembly ([page 9-13](#))
 - dual validation reader assembly ([page 9-27](#))
 - proximity reader assembly ([page 9-29](#)).
5. Reinstall all of the trim parts onto the door, except for the cylinder and core, by performing all of the steps for reinstalling parts in each section of Chapter 5. Begin with the faceplate ([page 5-15](#)).

Adding key override

To add key override, you can convert an LV function lock to an FV function lock or an NV function lock to an EV function lock.

Note: For a description of lock functions, see [page 2-2](#).

Order these parts/kits and perform the tasks below:

- brass outside escutcheon, part number D62506 (or D62508 for use with non-BEST cores) or zinc outside escutcheon, part number C60445 (or C60406 for use with non-BEST cores).
 - core, contact your BEST Representative for details
 - cylinder, part number B61341 for 1 3/4"-2" thick doors.
See [page 2-20](#) for cylinder part numbers for thicker doors.
 - sensor harness kit, part number 1833728 (NV to EV) or 1833760 for the conversion harness
 - sensor module kit, part number 1833885 (LV to FV) or 1833927 (NV to EV)
 - clamp plate, part number A35257.
1. Remove all of the trim parts from the door, by performing all of the steps for removing parts in each section of Chapter 5. Begin with the levers ([page 5-2](#)).
 2. Remove and open the mortise case ([page 6-2](#)).
 3. *For LV to FV conversions*, remove the sensor module ([page 6-16](#)).
 4. Install the following parts in the mortise case:
 - sensor module ([page 6-16](#))
 - clamp plate ([page 6-19](#)).
 5. Remove all of the parts from the old outside escutcheon, by performing all of the steps for removing parts in each section of Chapter 9. Begin with the escutcheon gasket ([page 9-2](#)).
 6. Install all of the parts from the old outside escutcheon into the new outside escutcheon, by performing all of the steps for reinstalling parts in each section of Chapter 9. Begin with the reader assembly:
 - magnetic stripe card reader assembly ([page 9-21](#))
 - smart card reader assembly ([page 9-24](#))
 - dual validation reader assembly ([page 9-27](#))
 - proximity reader assembly ([page 9-29](#)).
 7. Close and reinstall the mortise case ([page 6-2](#)).
 8. Reinstall all of the trim parts onto the door, including the cylinder and core, by performing all of the steps for reinstalling parts in each section of Chapter 5. Begin with the cylinder ([page 5-16](#)).

Adding a deadbolt

To add a deadbolt, you can convert an EV function lock to an FV function lock or an NV function lock to an LV function lock.

Note: For a description of lock functions, see [page 2-2](#).

Order these parts/kits and perform the tasks below:

- inside escutcheon, part number
 - faceplate, part number D34095
 - sensor harness kit, part number 1833728 (NV to LV)
 - sensor module kit, part number 1833885 (EV to FV)
1838747 (NV to LV)
 - deadbolt, part number B35035
 - turn knob hub assembly (includes hub and spacer), part number A35000.
1. Remove all of the trim parts from the door, by performing all of the steps for removing parts in each section of Chapter 5. Begin with the levers ([page 5-2](#)).
 2. Remove and open the mortise case ([page 6-2](#)).
 3. Install the following parts in the mortise case:
 - sensor module ([page 6-16](#))
 - deadbolt ([page 6-18](#))
 - turn knob hub assembly ([page 6-18](#)).
 4. *For NV to LV conversions*, install the sensor harness kit in the outside escutcheon.
 5. Close and reinstall the mortise case ([page 6-2](#)).
 6. Reinstall all of the trim parts onto the door, including the new inside escutcheon and faceplate, by performing all of the steps for reinstalling parts in each section of Chapter 5. Begin with the cylinder ([page 5-16](#)).

Removing a deadbolt

To remove a deadbolt, you can convert an FV function lock to a EV function lock or an LV function lock to an NV function lock.

Note: For a description of lock functions, see [page 2-2](#).

Order these parts/kits and perform the tasks below:

- inside escutcheon, part number B60778
 - sensor module, part number B60794 (FV to EV)
 - faceplate, part number B34515.
1. Remove all of the trim parts from the door, by performing all of the steps for removing parts in each section of Chapter 5. Begin with the levers ([page 5-2](#)).
 2. Remove and open the mortise case ([page 6-2](#)).

3. Remove the following parts in the mortise case:
 - sensor module ([page 6-16](#))
 - deadbolt ([page 6-18](#))
 - turn knob hub assembly ([page 6-18](#)).
4. *For FV to EV conversions*, install the new sensor module in the mortise case.
5. *For LV to NV conversions*, remove the sensor harness from the outside escutcheon ([page 9-6](#)).
6. Close and reinstall the mortise case ([page 6-2](#)).
7. Reinstall all of the trim parts onto the door, including the new inside escutcheon and faceplate, by performing all of the steps for reinstalling parts in each section of Chapter 5. Begin with the cylinder ([page 5-16](#)).

SERVICING PARTS IN THE MORTISE CASE

Servicing the motor module



Use extreme caution and wear safety glasses or goggles when performing the steps below. Point the case away from you while removing and reinstalling the upper auxiliary spring. The spring may unexpectedly pop out and could injure you.

Removing the motor module

1. Remove and open the mortise case ([page 6-2](#)).
2. Rotate the locking bar and motor module. Remove the locking bar from the case. See [Figure 6.9](#).
3. Use a pair of needle-nosed pliers to carefully remove the upper auxiliary spring from the case.
4. Remove the wire strain relief and motor module from the case.
5. Open the wire strain relief and remove the wires.

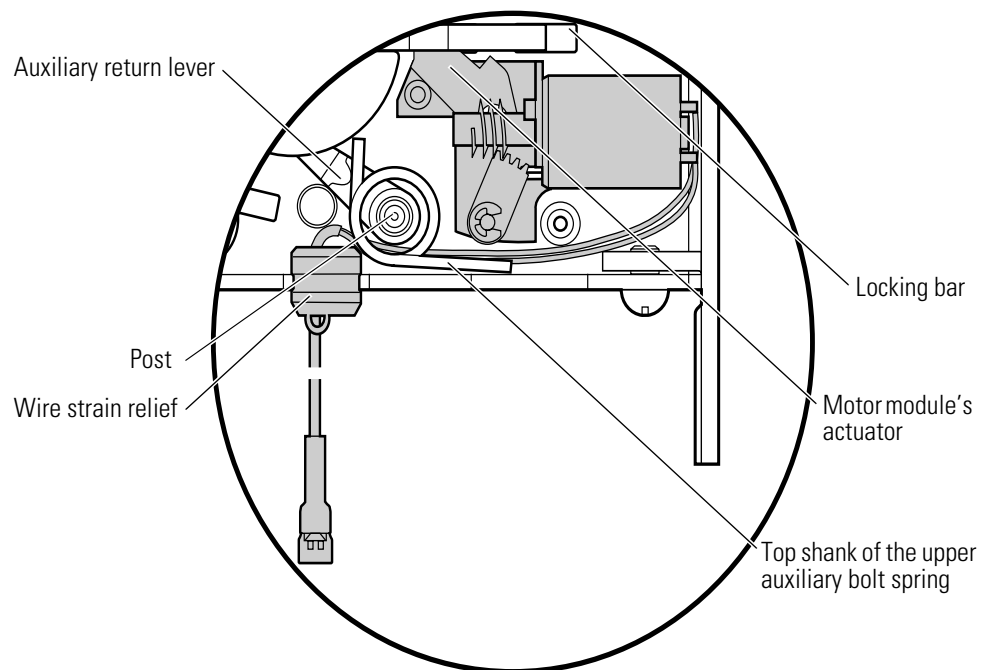


Figure 6.9 Removing and reinstalling the motor module

Reinstalling the motor module

1. Insert the motor module's actuator into the opening in the locking bar. Rotate the components into place. The motor module locks into place in the case. The locking bar fits into the slot on the outside hub. The two feet on the bottom of the locking bar fit into the bottom of the case.
2. Place the strain relief on the notch in the case.
3. Route the motor module's wires behind the post, above the lower auxiliary spring, and out through the strain relief.

Note: Make sure the wires are not pulled so tightly that there is strain on the connection to the motor, and the wires are not pulled so loosely that they will interfere with the operation of the auxiliary springs.

4. Clamp the wires in the strain relief. Slide the strain relief into position on the case. It should lock into place.
5. Install the upper auxiliary spring on the post so the short shank rests against the auxiliary return lever.
6. While holding the coil of the upper auxiliary spring on the post, use a pair of needle-nosed pliers to pull the top shank of the spring around to rest against the inside of the case. The shank should be parallel to the top of the case.

Note: Make sure that the upper auxiliary spring does not separate and ride onto the top of the post.

7. Close and reinstall the mortise case ([page 6-2](#)).

Servicing the sensor module

Replacement kits are available for the sensor module. See [page 4-10](#).

Removing the sensor module

1. Remove and open the mortise case ([page 6-2](#)).
2. Remove the latch lever.
3. Remove the sensor module.

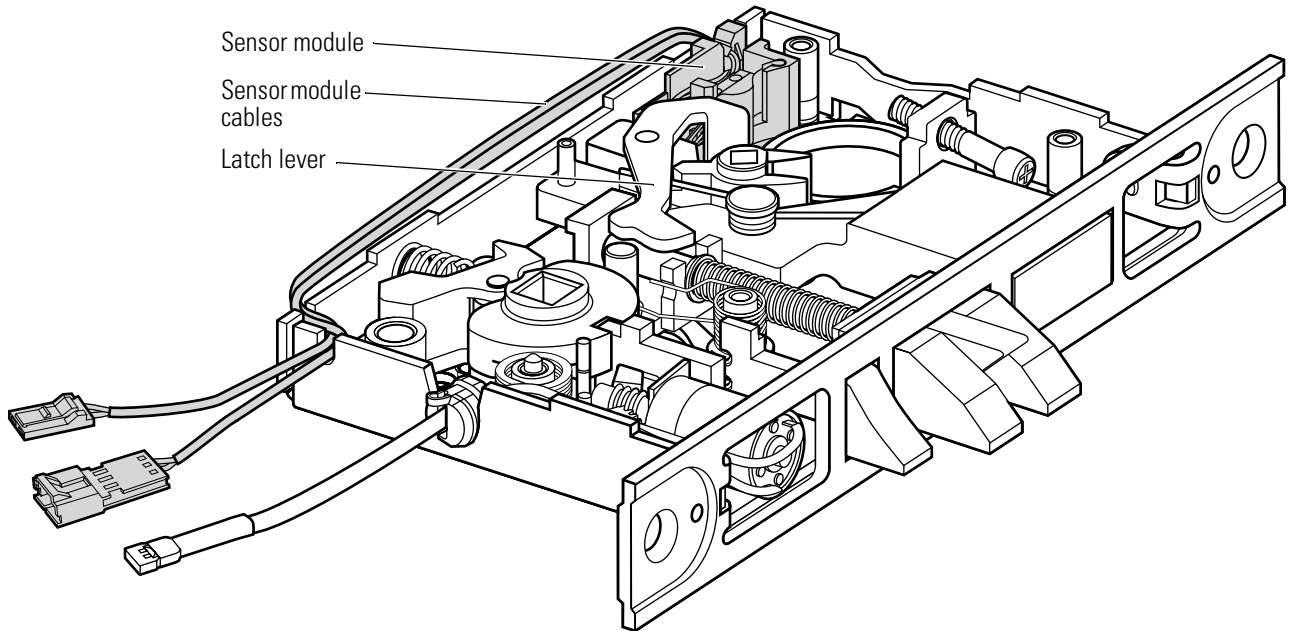


Figure 6.10 Removing and reinstalling the sensor module (FV function, LH case shown)

Reinstalling the sensor module

1. Position the sensor module in the case and route the cables as shown in [Figure 6.10](#).
2. Reinstall the latch lever.
3. Close and reinstall the mortise case ([page 6-2](#)).

Servicing the deadbolt, turn knob hub, and spacer

Removing the deadbolt, turn knob hub, and spacer

1. Remove and open the mortise case ([page 6-2](#)).
2. Remove the latch lever. See [Figure 6.10](#).
3. Pull the deadbolt spring away from the turn knob hub and remove the turn knob hub from the case. See [Figure 6.11](#).
4. Grasp the deadbolt by the post and remove the deadbolt from the case.
5. Remove the turn knob hub spacer from the case.

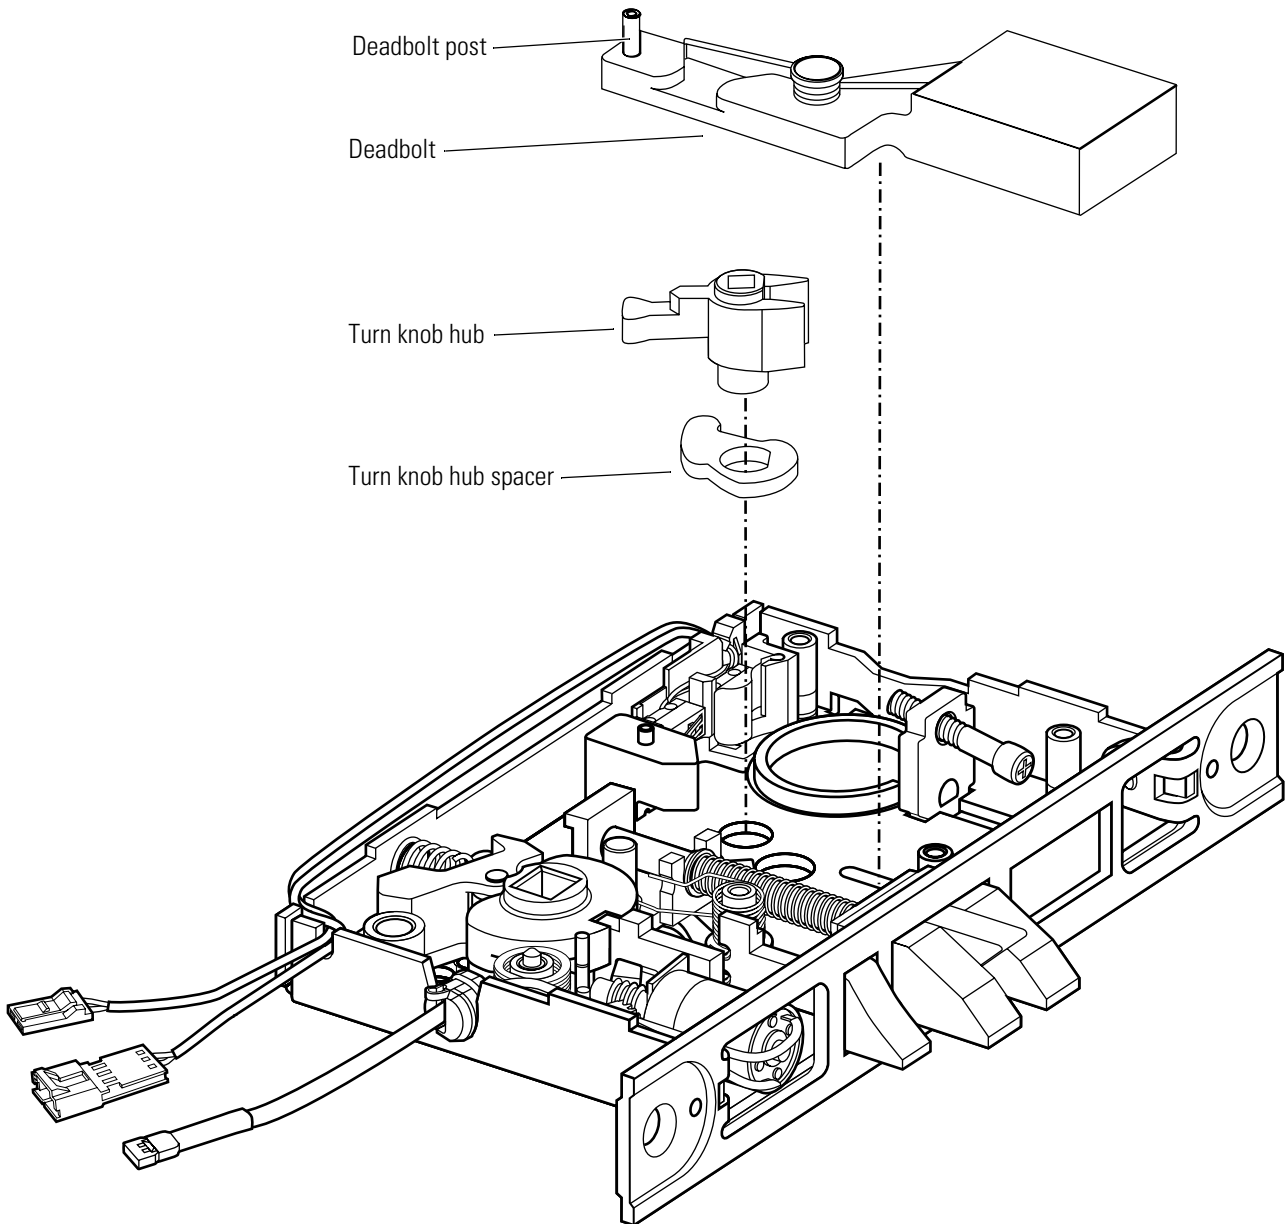


Figure 6.11 Removing the deadbolt, turn knob hub, and spacer (FV function, LH case shown)

Reinstalling the deadbolt, turn knob hub, and spacer

1. Position the turn knob hub spacer so that the tail fits under the case support. See [Figure 6.12](#).
2. Insert the deadbolt into the case, spring side up, so the bolt fits through the opening in the armored front.
3. Insert the turn knob hub into the turn knob hub spacer so that the tail of the turn knob hub is positioned against the deadbolt, as shown in [Figure 6.12](#).
4. Position the spring on the deadbolt against the turn knob hub, as shown in [Figure 6.12](#).
5. Reinstall the latch lever.
6. Close and reinstall the mortise case ([page 6-2](#)).

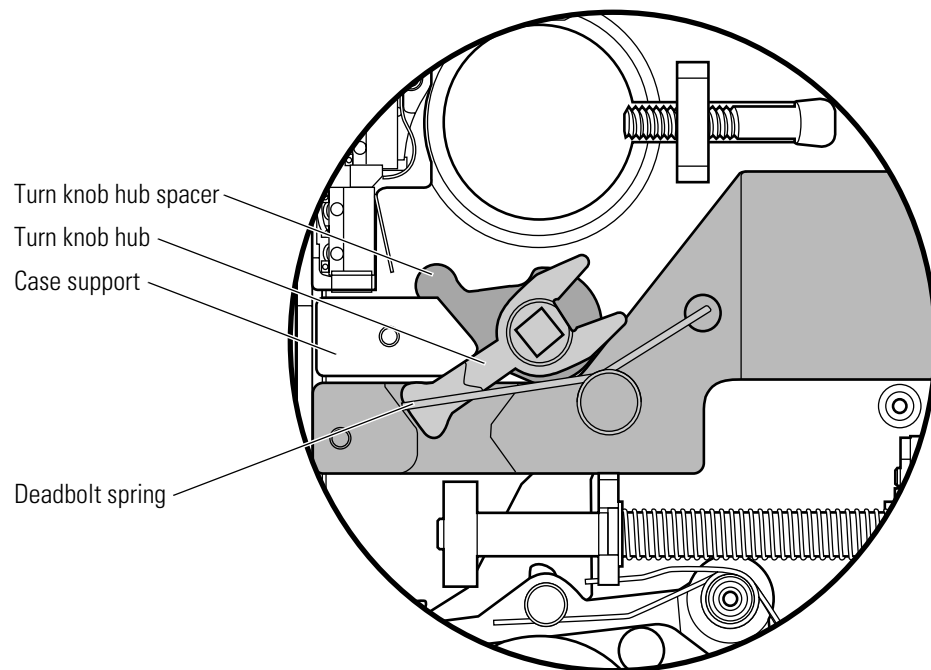


Figure 6.12 Positioning the turn knob hub and deadbolt spring

**Servicing the
cylinder clamp plate**

Removing the cylinder clamp plate

1. Remove and open the mortise case ([page 6-2](#)).
2. Remove the cylinder clamp plate from the case.

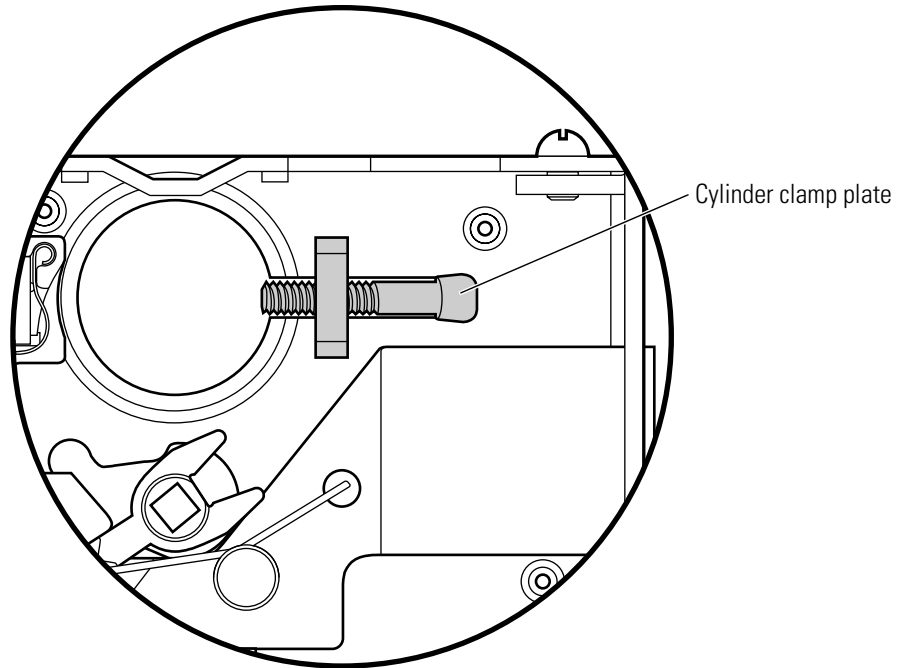


Figure 6.13 Removing and reinstalling the cylinder clamp plate

Reinstalling the cylinder clamp plate

1. Insert the cylinder clamp plate into the case so the screw is on the same side of the case as the concealed cylinder.
2. Close and reinstall the mortise case ([page 6-2](#)).

7

SERVICING CYLINDRICAL PARTS

This chapter contains instructions for replacing B.A.S.I.S. V cylindrical parts.

- To remove all of the trim parts from the door, perform all of the steps for removing parts in each section of this chapter. Begin with the core and throw member ([page 7-2](#)).
- To reinstall all of the trim parts onto the door, perform all of the steps for reinstalling parts in each section of this chapter. Begin with the rose liners ([page 7-16](#)).
- To service an individual part, see the section for that part. The instructions refer to other sections as necessary.

If you need to service...	See...
Core and throw member	page 7-2
Levers	page 7-3
Inside and outside escutcheons	page 7-5
Rose liners	page 7-15
Cylindrical chassis	page 7-18

Note: When replacing parts, always test that the lock works properly when you're finished.

SERVICING THE CORE AND THROW MEMBER

Note: To service a core and throw member from a manufacturer other than BEST with a 9KBV Lock, see the Installation Instructions for 9K Non-interchangeable Cores & Throw Members (T56093).

Removing the core and throw member

1. Insert the control key into the core and rotate the key 15 degrees to the right.
2. Remove the core and throw member from the lever.

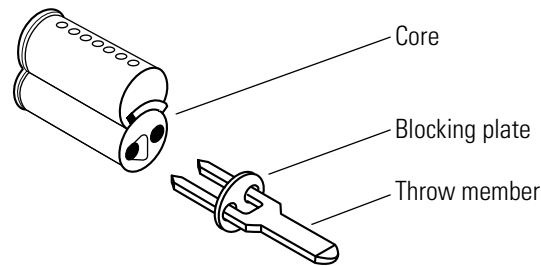


Figure 7.1 Removing the core and throw member

Reinstalling the core and throw member

1. Install the blocking plate onto the throw member.



You must use the blocking plate to prevent unauthorized access.

2. Insert the control key into the core and rotate the key 15 degrees to the right.
3. Insert the throw member into the core.
4. Insert the core and throw member into the lever with the control key.
5. Rotate the control key 15 degrees to the left and withdraw the key.



The control key can be used to remove cores and to access doors. Provide adequate security for the control key.

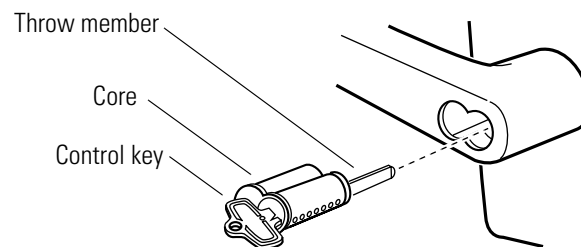


Figure 7.2 Reinstalling the core and throw member

SERVICING THE LEVERS

Removing the levers Removing the keyed lever

1. Remove the core and throw member ([page 7-2](#)).
2. Insert a flat blade screwdriver into the figure-8 core hole and into the lever/knob keeper.
3. Press the screwdriver blade in the direction of the arrow shown in [Figure 7.3](#).

Note: You will not be able to remove the lever if the screwdriver blade is inserted too far past the keeper.

4. Slide the lever off of the sleeve.

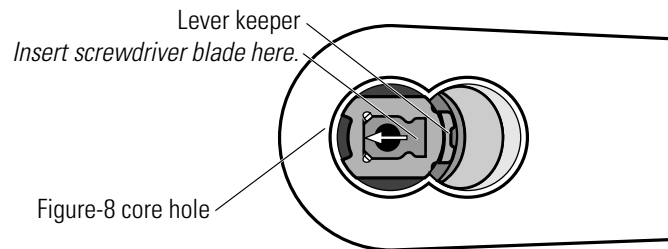


Figure 7.3 Removing the keyed lever

Removing the plain lever

Insert the protrusion on the spanner wrench into the hole on the shaft of the lever, as shown in [Figure 7.4](#). Slide the lever off of the sleeve.

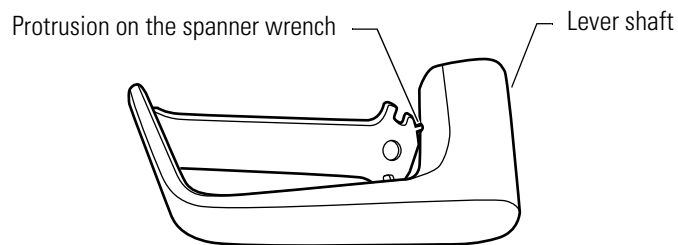


Figure 7.4 Removing the plain lever

Reinstalling the levers

1. With the handle pointing toward the door hinges, position a lever on the outside sleeve and push firmly on the lever until it is seated. Repeat, placing the other lever on the inside sleeve.
2. Tighten the escutcheon mounting screws.
3. Turn the levers to check that they operate smoothly.
4. Reinstall the core and throw member ([page 7-2](#)).

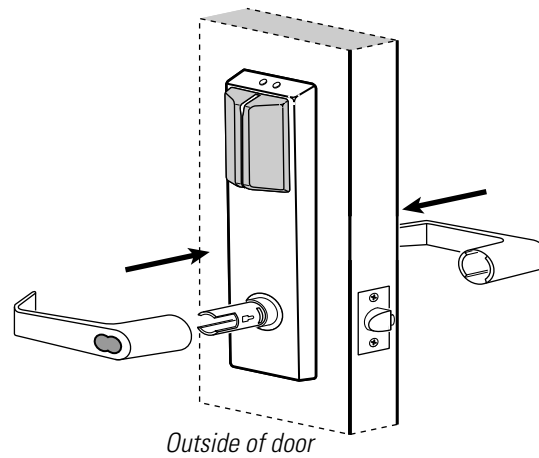


Figure 7.5 Reinstalling the levers

SERVICING THE INSIDE AND OUTSIDE ESCUTCHEONS

Removing the inside and outside escutcheons

1. Remove the following parts:
 - core and throw member ([page 7-2](#))
 - levers ([page 7-3](#)).
2. Remove the battery door.
 - a. Use a T15 TORX bit driver to remove the security screw from the battery door.
 - b. Open the access door and remove it from the escutcheon.

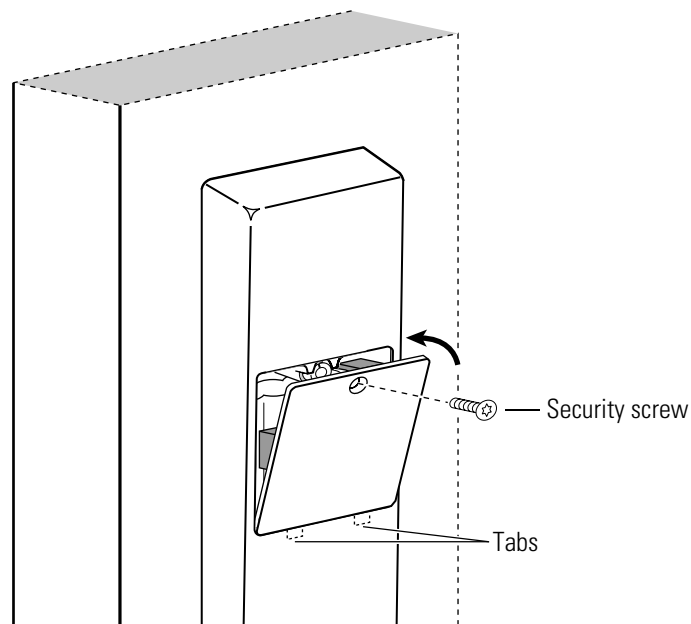


Figure 7.6 Removing the battery door (four-cell door shown)

3. Remove the battery pack.
 - a. Remove the battery pack from the battery compartment.
 - b. Disconnect the battery pack from the battery connector on the wire harness.

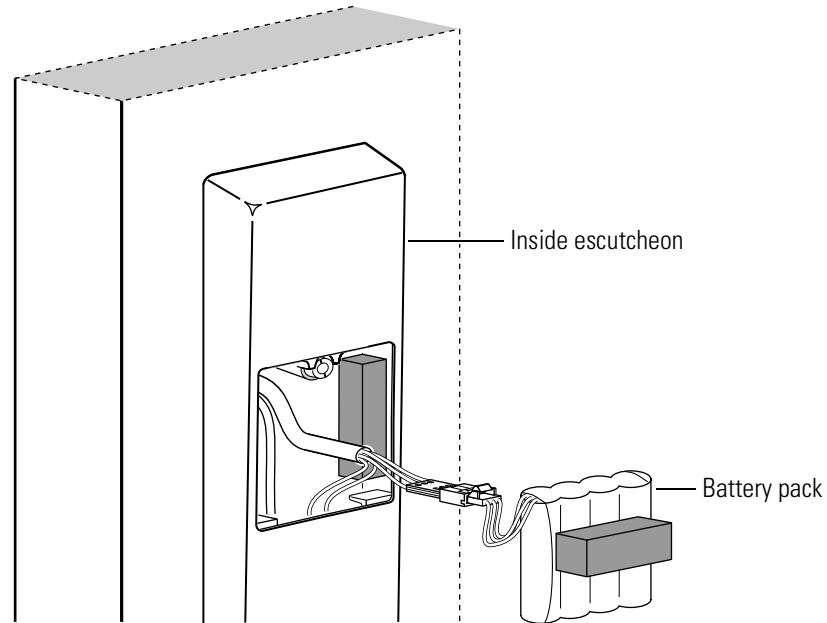


Figure 7.7 Removing the battery pack (four-cell pack shown)

4. Remove the escutcheons.
 - a. Remove the combination mounting screw and standard mounting screw from the inside escutcheon.

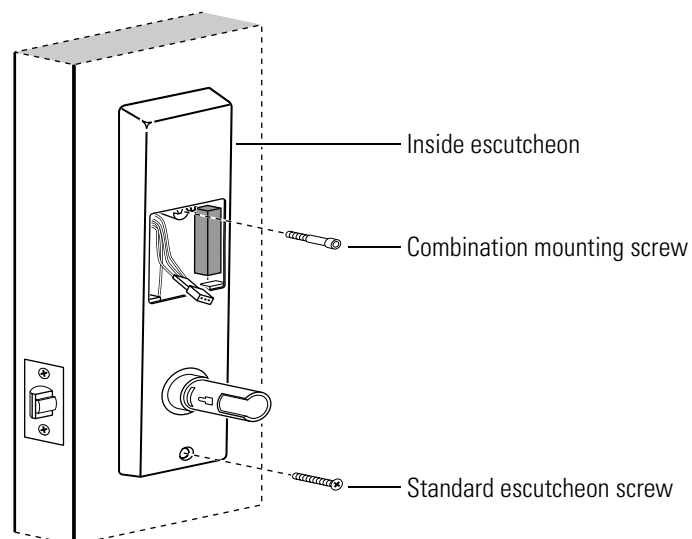


Figure 7.8 Removing the escutcheon

- b. Remove the inside escutcheon from the door.
- c. From the inside of the door, disconnect the motor connector on the chassis from its mating connector on the wire harness.

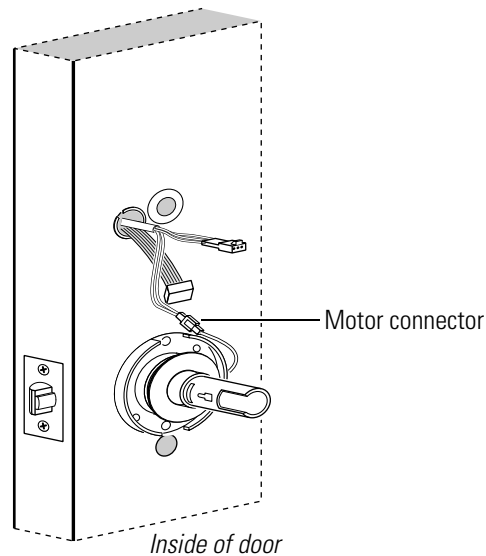


Figure 7.9 Disconnecting the motor connector

- d. Remove the bushings, trim hole inserts, and hub washers from each side of the door.

Note: Trim hole inserts and hub washers are used only for locks with brass escutcheons.

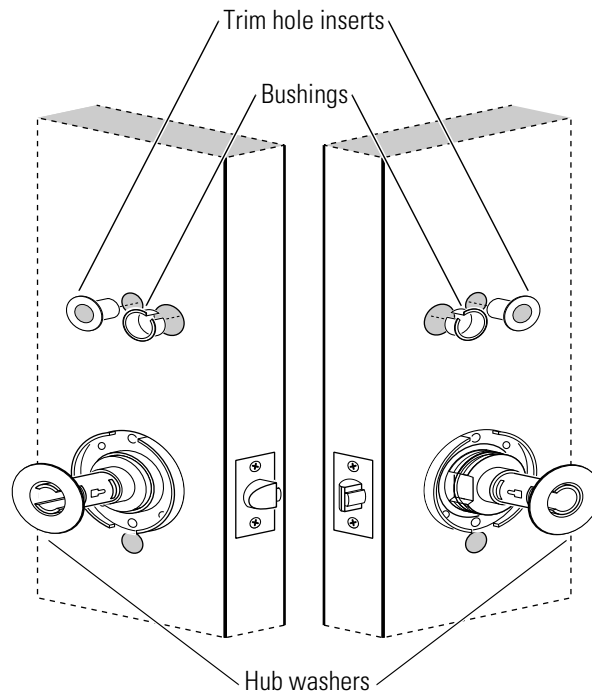


Figure 7.10 Removing the bushings, trim hole inserts, and hub washers

- e. Remove the outside escutcheon from the door, feeding the motor connector out the harness hole.



When removing the outside escutcheon, make sure that the harnesses are not rubbed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

Reinstalling the inside and outside escutcheons

1. Activate the backup battery:

If you are reinstalling the outside escutcheon, go to Step 2.

If you are installing a new outside escutcheon, perform these steps:

- a. Locate the backup battery tab on the inside of the outside escutcheon.
- b. Pull down on the tab and remove it from the outside escutcheon to turn on the backup battery.



For the lock to operate properly, you must remove the backup battery tab.

Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.

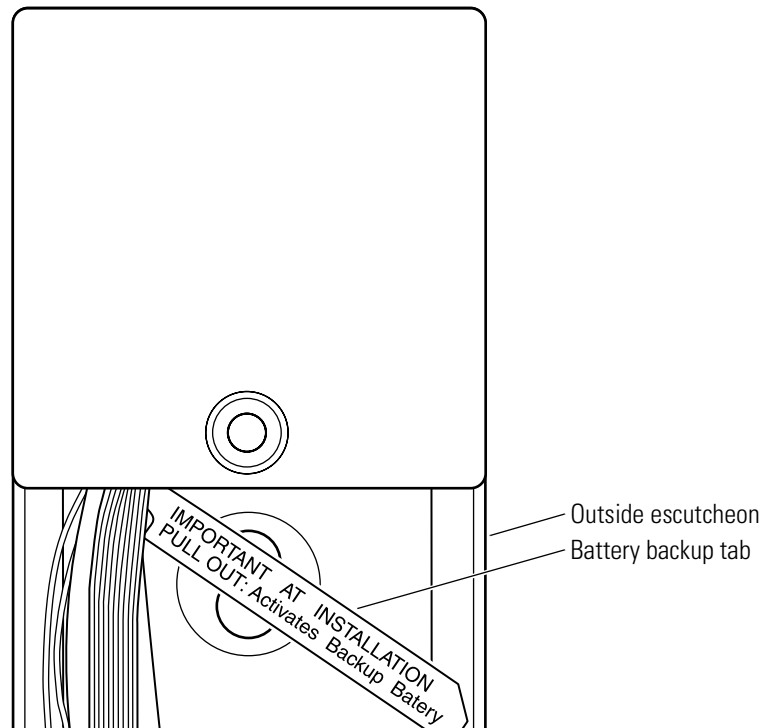


Figure 7.11 Locating the backup battery tab

2. Install the trim hole inserts, bushings, and hub washers:
 - a. Insert the two trim hole inserts into the upper trim hole on each side of the door.
 - b. *For locks with brass escutcheons*, insert the two bushings into the harness hole on each side of the door.
 - c. *For locks with brass escutcheons*, on each side of the door, slide a hub washer over the chassis sleeve so it rests on the hub.

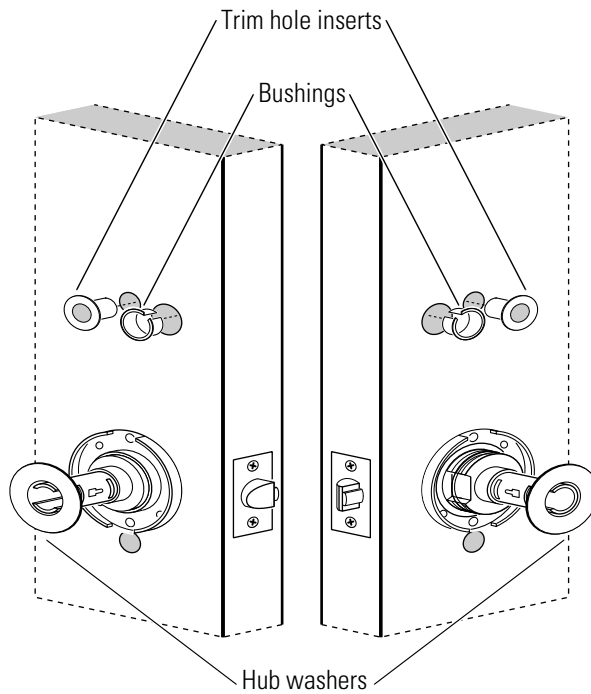


Figure 7.12 Reinstalling the bushings, trim hole inserts, and hub washers

3. Feed the wire harness connectors through the harness hole:
 - a. From the outside of the door, feed the upgrade cable connector through the harness hole.
 - b. From the outside of the door, feed the motor connector and battery connector through the harness hole.



When routing the connectors, make sure the wire harness is not routed across any sharp edges or over any surface that could damage its sleeving or wire insulation.

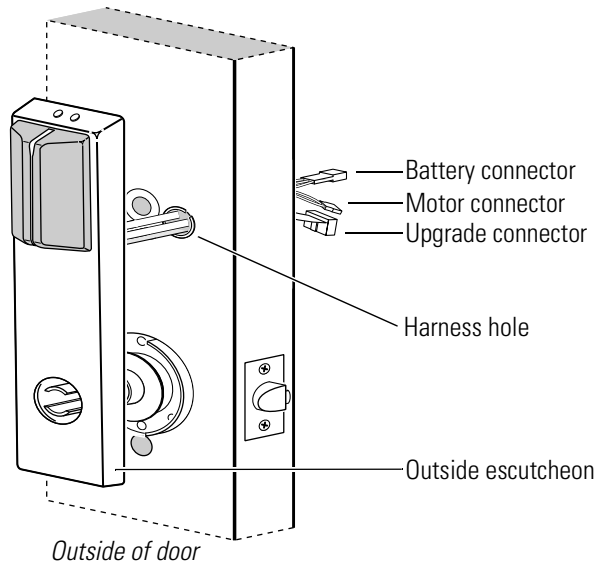


Figure 7.13 Feeding the wire harness connectors through the harness hole

- c. Temporarily rest the outside escutcheon on the door by inserting the trim studs into the trim holes.

Note: You can temporarily install the outside lever to hold the outside escutcheon in place. See *Reinstalling the levers* ([page 7-4](#)).

4. Connect the motor connector:
 - a. From the inside of the door, connect the motor connector from the chassis to its mating connector on the wire harness.

Wire connection	Colors	No. of wires	No. of pins
Motor	Yellow Gray	2	2

Note: The upgrade cable is used for upgrading the lock without removing the lock from the door. This cable does not connect to a mating lock connector.



Caution

When connecting the motor connector, make sure:

- *there are no loose wire connections where the wires are inserted into the connectors*
- *the connectors are firmly mated.*

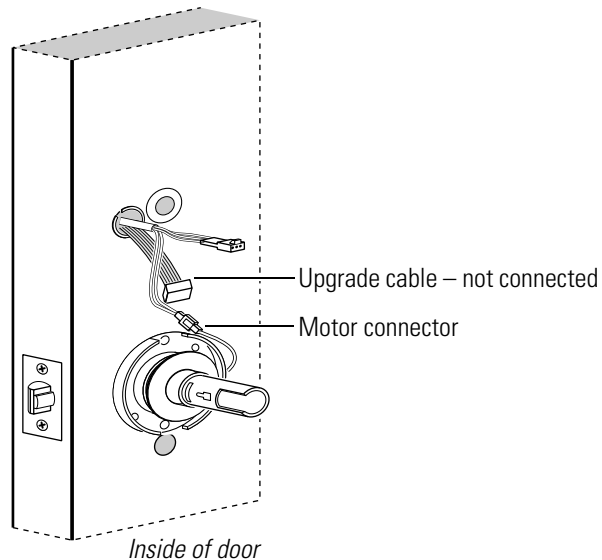


Figure 7.14 Connecting the motor connector

5. Secure the escutcheons:
 - a. Position the inside and outside escutcheons on the door.
 - b. Making sure that the escutcheons do not pinch the wires, secure the escutcheons to the door—but do not tighten. Use the combination mounting screw at the upper trim hole and the standard mounting screw at the lower trim hole.

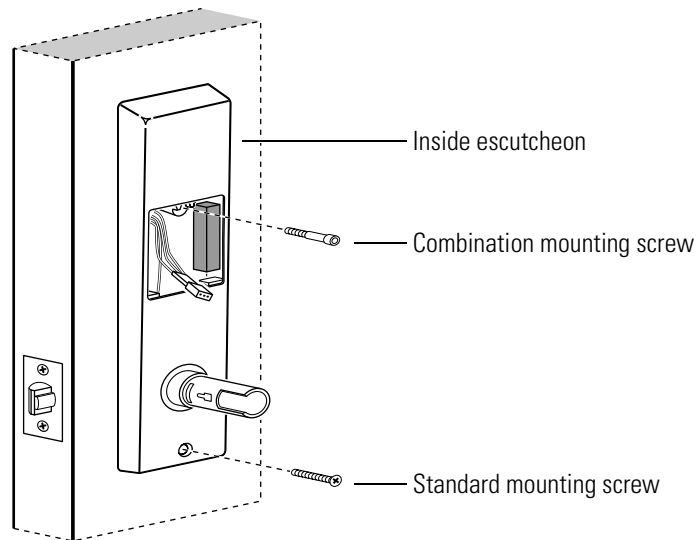


Figure 7.15 Securing the escutcheons

6. Reinstall the battery pack:

- a. Connect the battery pack to the battery connector on the wire harness inside the battery compartment.

Note: The battery connection has 3 wires and 3 pins. The wire colors are:

- red with white stripe
- white
- black with white stripe.



Caution

When connecting the battery pack, make sure:

- *there are no loose wire connections where the wires are inserted into the connectors*
- *the connectors are firmly mated.*

- b. Place the battery pack inside the battery compartment.

Note: For the four-cell battery pack, position the battery so that the foam will face the battery door.



Caution

When routing the battery wires, make sure the wires are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

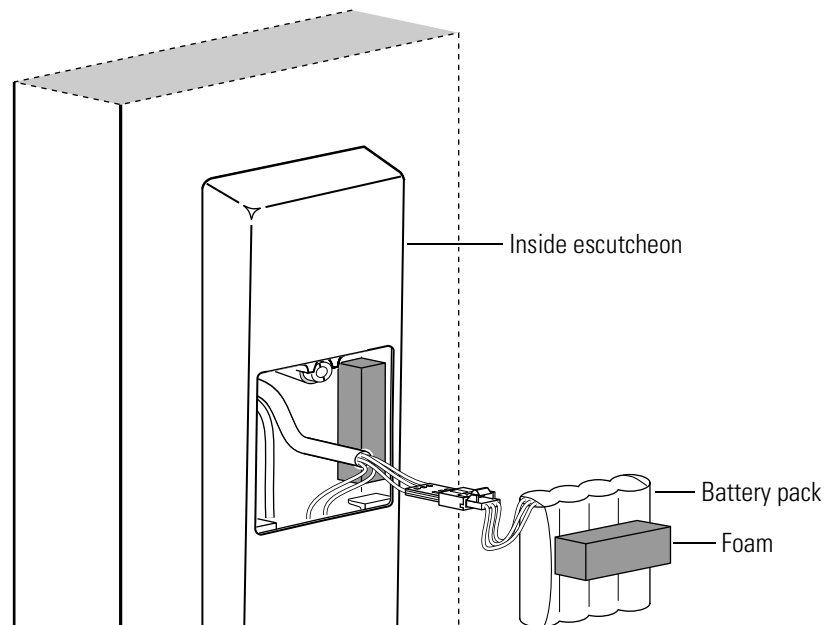


Figure 7.16 Reinstalling the battery pack (four-cell pack shown)

7. Reinstall the battery door:
 - a. Making sure that the battery door does not pinch any wires, insert the tabs of the battery door into its mating slots and swing the door closed.
 - b. Use a T15 TORX bit driver to secure the battery door with the security screw. Tighten firmly.

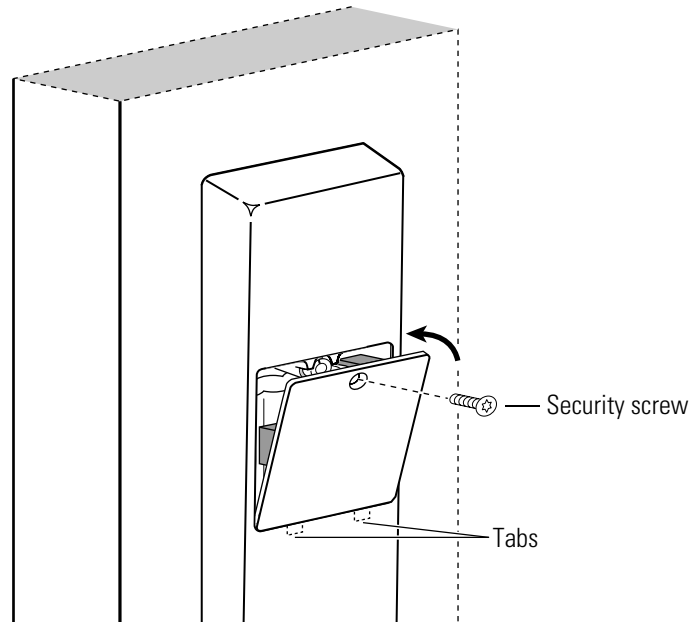


Figure 7.17 Reinstalling the battery door (four-cell door shown)

8. Reinstall the following parts:
 - levers ([page 7-4](#))
 - core and throw member ([page 7-2](#)).

SERVICING THE ROSE LINERS

Removing the rose liners

1. Remove the following parts:
 - core and throw member ([page 7-2](#))
 - levers ([page 7-3](#))
 - escutcheons ([page 7-5](#)).
2. Remove the through-bolts from the top and bottom holes in the rose liner.
3. Slide the inside rose liner off of the door.

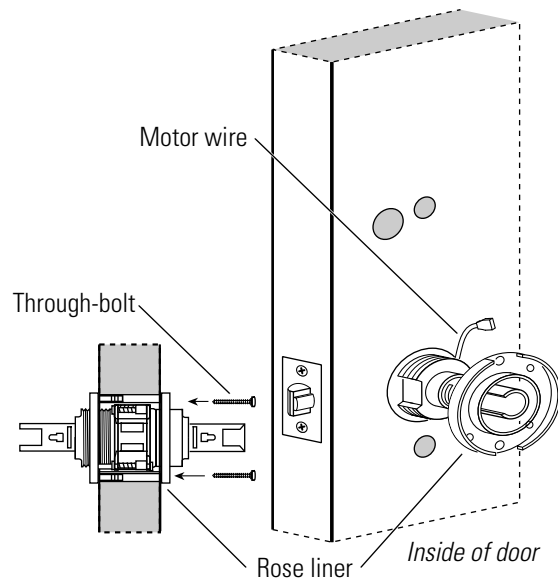


Figure 7.18 Removing the inside rose liner

4. Slide the chassis assembly out of the door.
5. Retract the rose locking pin, and rotate the outside rose liner until it is free from the hub.
6. Remove the rose and liner assembly from the sleeve.

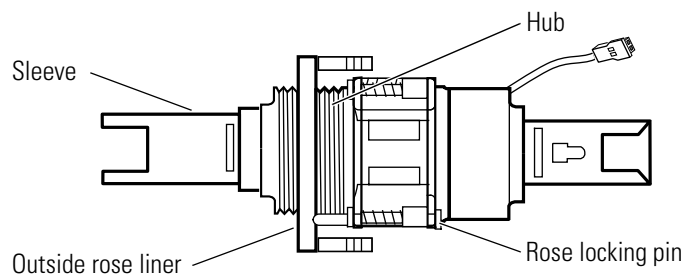


Figure 7.19 Removing the outside rose liner

Reinstalling the rose liners

1. Retract the rose locking pin, and rotate the outside rose liner clockwise until the proper door thickness groove on the through-bolt stud lines up with the hub face.

This illustration shows the chassis adjusted for a 2 1/4" thick door.

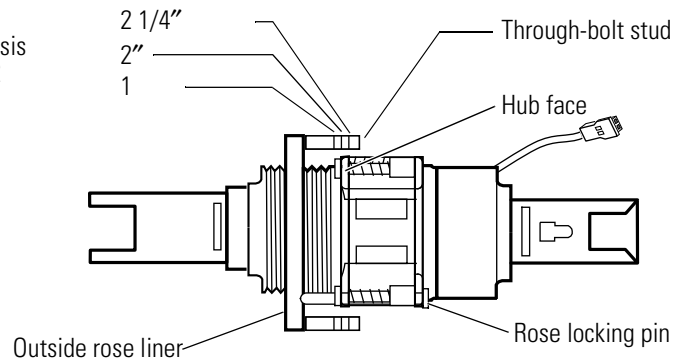


Figure 7.20 Reinstalling the outside rose liner

2. Release the rose locking pin. It should lock into the rose liner.

Note: Make sure that the locking pin fully locks into the rose liner.

3. From the outside of the door, insert the lock chassis into the 2 1/8" chassis hole, routing the motor wire through the notch.

Make sure that the latch tube prongs engage the chassis frame and that the latch tailpiece engages the retractor.



Caution

4. Place the inside rose liner on the chassis, aligning the holes in the rose liner with the holes prepared in the door.

Make sure that there is clearance for the motor wire between the rose liner and the door.



Caution

5. Install the through-bolts through the rose liner and door in the top and bottom holes.

6. Tighten the rose liner on the door with the through-bolts.

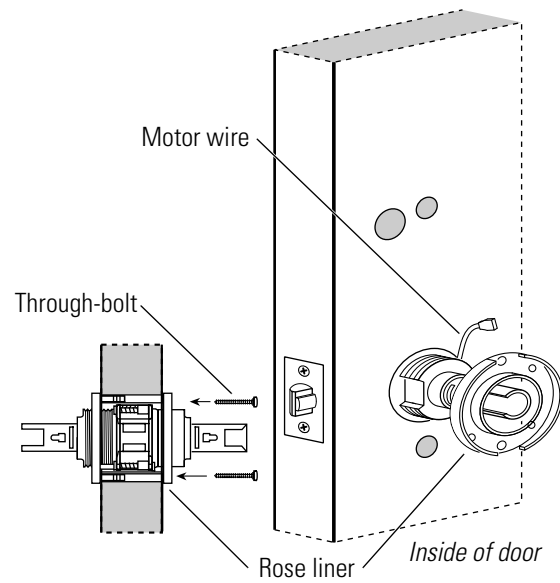


Figure 7.21 Reinstalling the inside rose liner

7. Reinstall the following parts:
 - escutcheons ([page 7-8](#))
 - levers ([page 7-4](#))
 - core and throw member ([page 7-2](#)).

SERVICING THE CYLINDRICAL CHASSIS

Because of the complex nature of servicing the individual components of the cylindrical chassis, BEST recommends that you order a new cylindrical chassis. Contact your BEST representative.

Use the following part numbers when ordering a new cylindrical chassis.

Chassis type	Part no.
Chassis	D60464
Chassis for use with non-BEST cores	D60332
Free motion chassis	D56025

Removing the cylindrical chassis

1. Remove the following parts:
 - core and throw member ([page 7-2](#))
 - levers ([page 7-3](#))
 - escutcheons ([page 7-5](#))
 - rose liners ([page 7-15](#)).

Reinstalling the cylindrical chassis

2. Reinstall the following parts:
 - rose liners ([page 7-16](#))
 - escutcheons ([page 7-8](#))
 - levers ([page 7-4](#))
 - core and throw member ([page 7-2](#)).

8

SERVICING EXIT HARDWARE TRIM PARTS

This chapter contains instructions for servicing EX Series Exit Hardware Trim parts.

- To remove all of the trim parts from the door, perform all of the steps for removing parts in each section of this chapter. Begin with the battery cover ([page 8-2](#)).
- To reinstall all of the trim parts onto the door, perform all of the steps for reinstalling parts in each section of this chapter. Begin with the B.A.S.I.S. escutcheon ([page 8-14](#)).
- To service an individual part, see the section for that part. The instructions refer to other sections as necessary.

If you need to service...	See...
Battery cover	page 8-2
Battery pack	page 8-4
Battery bracket	page 8-6
Exit hardware	page 8-8
Core (for EV function only)	page 8-9
Cylinder (for EV function only)	page 8-10
Escutcheon	page 8-13

Note: When servicing parts, always test that the lock works properly when you're finished.

SERVICING THE BATTERY COVER

Removing the battery cover

1. Use a T15 TORX driver to remove the security screws from the battery cover.
2. Remove the battery cover from the battery bracket.

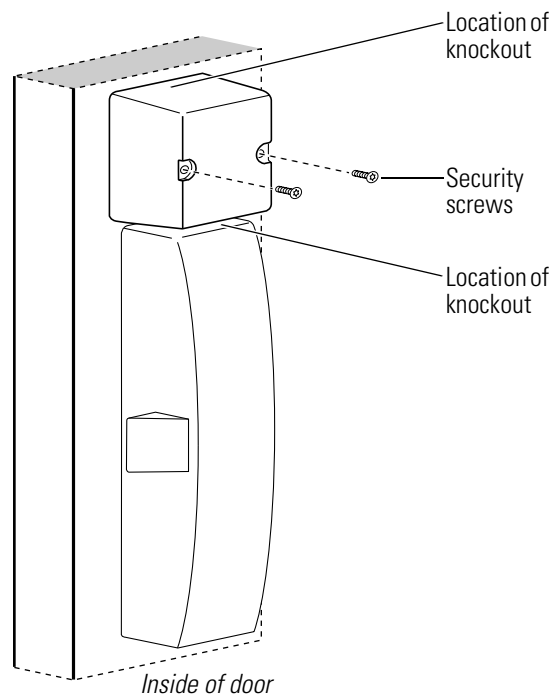


Figure 8.1 Removing and reinstalling the battery cover on the battery bracket

**Reinstalling the
battery cover**

1. *If installing a new battery cover with a surface rod exit device, remove the knockouts for the rod from the battery cover. See [Figure 8.1](#).*
2. Making sure that the battery cover does not pinch any wires, place the cover over the bracket.
3. Use a T15 TORX bit driver to secure the battery compartment cover with the security screws. Tighten firmly. See [Figure 8.1](#).

SERVICING THE BATTERY PACK

Removing the battery pack

1. Remove the battery cover. See [page 8-2](#).
2. Remove the battery pack from the holder inside the battery bracket.

Note: You might need to cut a cable tie if one was used to dress the wire harness inside the battery bracket.

3. Disconnect the battery pack from the battery connector on the wire harness.

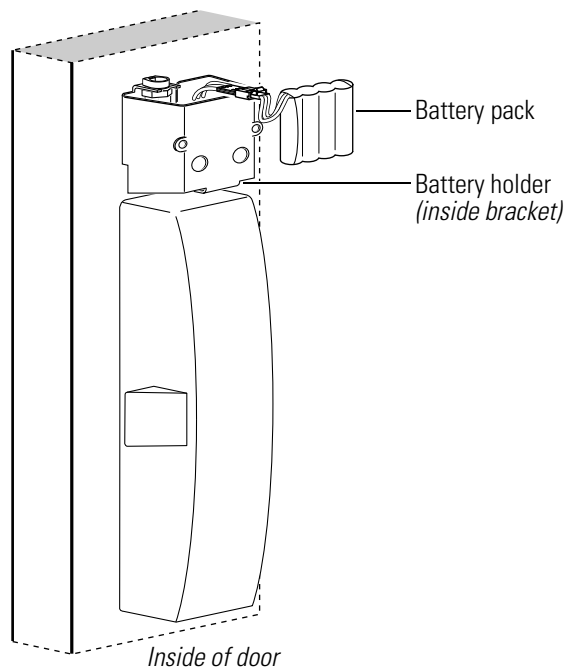


Figure 8.2 Removing and reinstalling the battery pack

Reinstalling the battery pack

Note: Replacement battery packs are shipped with foam attached, but foam is not needed for EX Series Exit Hardware Trim. Remove and discard the foam before installing the battery pack.

1. Connect the battery pack to the battery connector on the wire harness shown in [Figure 8.2](#).

Note: The battery connector has 3 wires and 3 pins. The wire colors are:

- red with white stripe
- white
- black with white stripe.



Caution

When connecting the battery pack, make sure there are no loose wire connections where the wires are inserted into the connectors and the connectors are firmly mated.

2. Place the battery pack in the holder inside the battery bracket and dress the wire harness inside the bracket.



Caution

Make sure you do not damage the sleeving on the battery pack. Doing so may cause the batteries to be drained.

3. *If reinstalling with a surface rod device*, dress the wire harness inside the bracket to the left of the rod so that the harness will not interfere with the movement of the rods.

We recommend that you loosely coil the harness and use a cable tie to secure the coil. To avoid damaging the harness, do not put any sharp bends in it or flex it close to the connectors.



Caution

Failure to dress the wire harness away from the rod could damage the wire harness, causing the lock's electronics to not work properly.

4. Reinstall the battery cover. See [page 8-3](#).

SERVICING THE BATTERY BRACKET

Removing the battery bracket

1. Remove the following parts:
 - battery cover ([page 8-2](#))
 - battery pack ([page 8-4](#)).
2. Remove the two battery bracket mounting screws. See [Figure 8.3](#).
3. Loosen the nut securing the com port to the bracket and slide the com port out of the bracket. See [Figure 8.4](#).

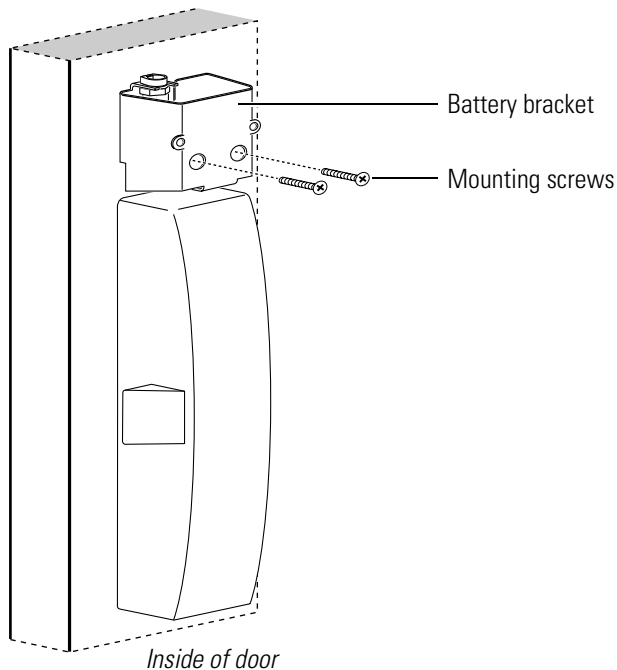


Figure 8.3 Removing and reinstalling the battery bracket on the door

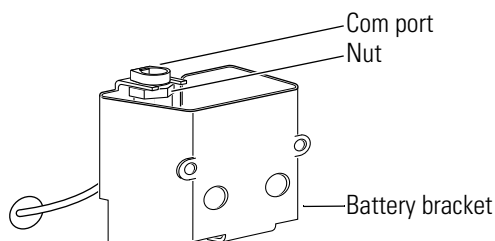


Figure 8.4 Removing and reinstalling the com port in the battery bracket

Reinstalling the battery bracket

1. Routing the wire harness into the bottom of the battery bracket, slide the com port into its mounting slot inside the battery bracket as shown in [Figure 8.4](#).

Note: The com port is used when programming the control electronics for the lock.

2. Tighten the nut to secure the com port to the bracket.
3. Position the battery bracket on the inside of the door as shown in [Figure 8.3](#).

Note: *If reinstalling with a surface rod exit device*, the battery bracket is mounted over the upper rod.

4. Secure the battery bracket to the door using the two mounting screws.

Note: Doors less than 2" in thickness use 1 1/4" screws. Doors 2" or greater use 1 3/4" screws.



Caution

When routing the wire harness, make sure the wires are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

5. Reinstall the following parts:
 - battery pack ([page 8-5](#))
 - battery cover ([page 8-3](#)).

SERVICING THE EXIT HARDWARE

Removing the exit hardware

1. Remove the following parts:
 - battery cover ([page 8-2](#))
 - battery pack ([page 8-4](#))
 - battery bracket ([page 8-6](#)).
2. Remove the exit hardware (lock stile case, case cover, touch bar assembly, and related hardware); follow the instructions provided by the exit hardware manufacturer.

Note: The B.A.S.I.S. escutcheon is secured on the outside of the door by the screws used to mount the lock stile case on the inside of the door.

Reinstalling the exit hardware

1. Reinstall the exit hardware (lock stile case, case cover, touch bar assembly, and related hardware); follow the instructions provided by the exit hardware manufacturer.

Note: Make any adjustments to the exit hardware necessary for compatibility with lever function outside trim.



When securing the B.A.S.I.S. escutcheon, make sure that it does not pinch the wire harness.

2. Reinstall the following parts:
 - battery bracket ([page 8-7](#))
 - battery pack ([page 8-5](#))
 - battery cover ([page 8-3](#)).

SERVICING THE CORE

Perform these steps for EV function locks only.

Note: For a description of lock functions, see [page 3-2](#).

Removing the core

1. Insert the control key into the core and rotate the key 15 degrees to the right.
2. Remove the core from the cylinder.

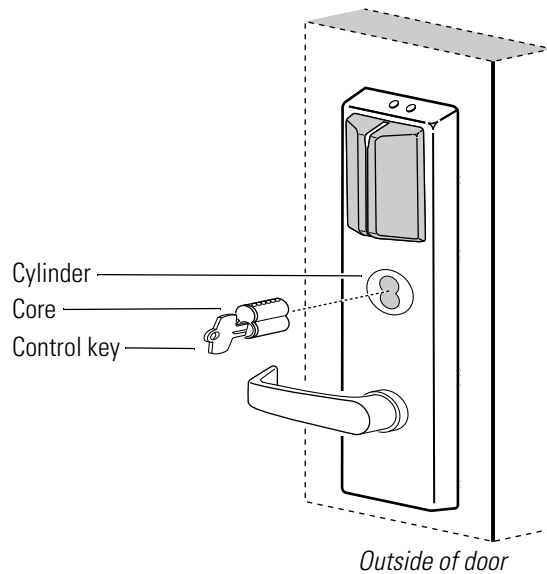


Figure 8.5 Removing and reinstalling the core

Reinstalling the core

1. Insert the control key into the core and rotate the key 15 degrees to the right.
2. With the control key in the core, insert the core into the cylinder as shown in [Figure 8.5](#).
3. Rotate the control key 15 degrees to the left and withdraw the key.



Caution

The control key can be used to remove cores and to access doors. Provide adequate security for the control key.

SERVICING THE CYLINDER

Perform these steps for EV function locks only.

Note: For a description of lock functions, see [page 3-2](#).

Removing the mortise cylinder

1. Remove the core. See [page 8-9](#).
2. Insert a cylinder wrench (ED211) into the cylinder and unscrew the cylinder from the mortise case.
3. Slide the cylinder and cylinder ring (if present) out of the door and escutcheon.

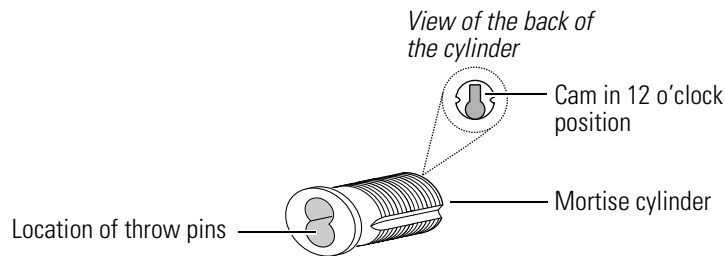


Figure 8.6 Mortise cylinder components

Reinstalling the mortise cylinder

1. *For doors less than 2" in thickness*, place the cylinder ring provided on the cylinder.
2. Rotate the cylinder cam to the 12 o'clock position, as shown in [Figure 8.6](#).
3. Using a cylinder wrench (ED211), insert the cylinder through the cylinder opening in the B.A.S.I.S. escutcheon and screw the cylinder into the mortise case. Make sure that the cylinder is oriented as shown in [Figure 8.6](#).



Do not screw the cylinder in too tightly. Doing so may cause you or someone else to be locked out.

4. Reinstall the core. See [page 8-9](#).

Removing the rim cylinder for Precision Hardware installations

Note: *The rim cylinder is used in rim and rod exit device installations.*

1. *If replacing the cylinder, remove the core (page 8-9).*
2. Remove the exit hardware as necessary to access the cylinder clamp plate and mounting screws. See [page 8-8](#).
3. Remove the two mounting screws and the clamp plate.
4. Slide the cylinder out of the door and the B.A.S.I.S. escutcheon.

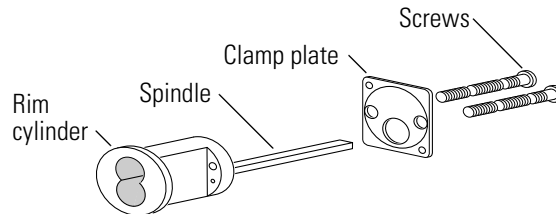


Figure 8.7 Rim cylinder components

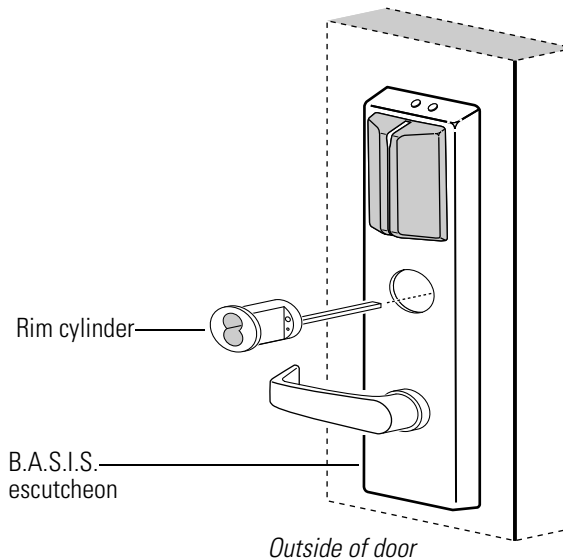


Figure 8.8 Removing and reinstalling the rim cylinder for Precision Hardware installations

Reinstalling the rim cylinder for Precision Hardware installations

1. *If installing a new cylinder, break off the new spindle to match the length of the old spindle.*
2. Insert the cylinder through the cylinder opening in the B.A.S.I.S. escutcheon and into the door as shown in [Figure 8.8](#).
3. Orient the cylinder and clamp plate as shown in [Figure 8.8](#). From the inside of the door, secure the cylinder using the clamp plate and mounting screws.
4. Reinstall the exit hardware. See [page 8-8](#).
5. *If installing a new cylinder, reinstall the core. See [page 8-9](#).*

Removing the rim cylinder for Von Duprin installations

Note: *The rim cylinder is used in rim and rod exit device installations.*

1. *If replacing the cylinder*, remove the core. See [page 8-9](#).
2. Remove the following parts:
 - exit hardware as necessary to remove the B.A.S.I.S. escutcheon ([page 8-8](#))
 - B.A.S.I.S. escutcheon ([page 8-13](#)).
3. From the back of the escutcheon, remove the two mounting screws and the cylinder clamp plate.
4. Lift the mounting sleeve off the cylinder.
5. Slide the cylinder out of the escutcheon.

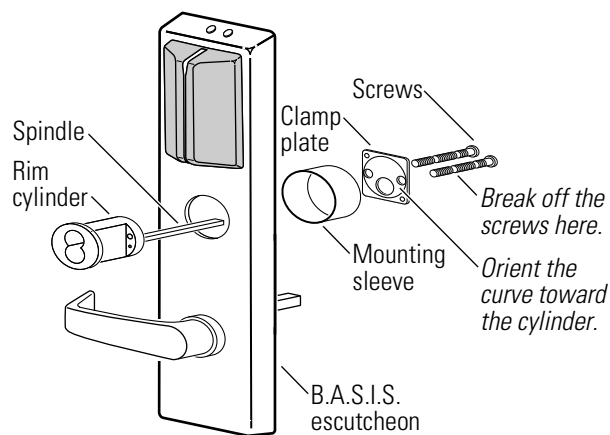


Figure 8.9 Removing and reinstalling the rim cylinder for Von Duprin installations

Reinstalling the rim cylinder for Von Duprin installations

1. *If installing a new cylinder*, break off the spindle on the new cylinder to match the length of the old spindle.
2. From the front of the B.A.S.I.S. escutcheon, insert the cylinder into the cylinder opening.
3. Holding the cylinder in position in the escutcheon, insert the cylinder mounting sleeve through the back of the escutcheon, over the cylinder.
4. Orient the cylinder and clamp plate as shown in [Figure 8.9](#). From the back of the escutcheon, secure the cylinder and mounting sleeve using the clamp plate and mounting screws.
5. Reinstall the following parts:
 - B.A.S.I.S. escutcheon ([page 8-14](#))
 - exit hardware ([page 8-8](#)).
6. *If installing a new cylinder*, reinstall the core. See [page 8-9](#).

SERVICING THE B.A.S.I.S. ESCUTCHEON

Removing the escutcheon

1. Remove the following parts:
 - battery cover ([page 8-3](#))
 - battery pack ([page 8-4](#))
 - battery bracket ([page 8-6](#))
 - exit hardware ([page 8-8](#))
 - core (for EV function locks) ([page 8-9](#))
 - cylinder (for EV function locks) ([page 8-11](#) for a Precision Hardware rim or rod exit device installation, or [page 8-10](#) for a mortise exit device installation).

Note: If removing the escutcheon for a Von Duprin EV function rim or rod exit device installation, you cannot remove the cylinder from the escutcheon until you have removed the escutcheon from the door. See [page 8-12](#).

2. Remove the escutcheon from the door, feeding the battery connector and com port out the harness hole.

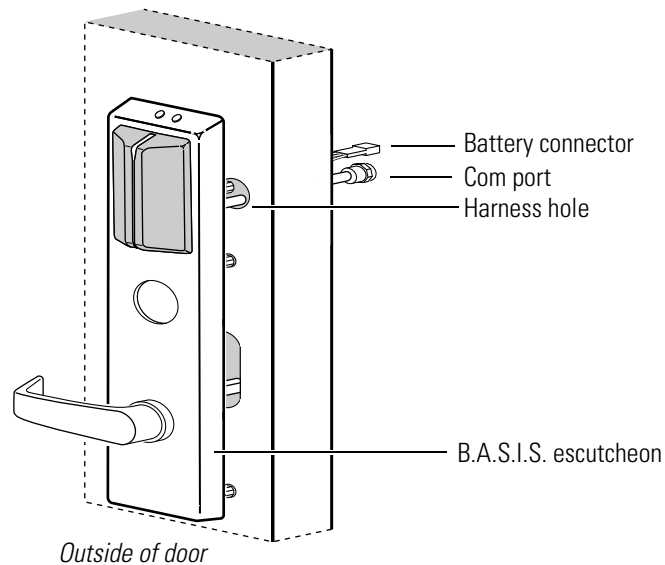


Figure 8.10 Removing and reinstalling the escutcheon

Reinstalling the escutcheon

1. *If installing an escutcheon for a Von Duprin EV function rim or rod exit device*, reinstall the cylinder in the escutcheon. See [page 8-12](#).
2. *If installing a new B.A.S.I.S. escutcheon*, activate the backup battery:
 - a. Locate the backup battery tab on the inside of the B.A.S.I.S. escutcheon.
 - b. Pull down on the tab and remove it from the B.A.S.I.S. escutcheon to turn on the backup battery.



Caution



Caution

For the lock to operate properly, you must remove the backup battery tab.

Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.



Caution

3. From the outside of the door, feed the com port and battery connector through the harness hole as shown in [Figure 8.10](#).

When routing the connectors, make sure the harnesses are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

4. Rest the B.A.S.I.S. escutcheon on the door by inserting the trim studs into the mounting holes.
5. Reinstall the following parts:
 - cylinder (for EV function locks) ([page 8-11](#) for a Precision Hardware rim or rod exit device installation, or [page 8-10](#) for a mortise exit device installation)
 - core (for EV function locks) ([page 8-9](#))
 - exit hardware ([page 8-8](#))
 - battery bracket ([page 8-7](#))
 - battery pack ([page 8-5](#))
 - battery cover ([page 8-3](#)).

9

SERVICING STANDARD OUTSIDE ESCUTCHEON PARTS

This chapter contains instructions for servicing outside escutcheon parts for a standard B.A.S.I.S. V Lock. For instructions on servicing EX Series Exit Hardware Trim parts, see [page 10-1](#).

- To remove all of the parts from the outside escutcheon, perform all of the steps for removing parts in each section of this chapter. Begin with the escutcheon gasket ([page 9-2](#)).
- To reinstall all of the parts in the outside escutcheon, perform all of the steps for reinstalling parts in each section of this chapter. Begin with the reader assembly ([page 9-18](#)).
- To service an individual part, see the section for that part. The instructions refer to other sections as necessary.

If you need to service...	See...
Escutcheon gasket	page 9-2
Lens covers	page 9-3
Harness clamp	page 9-4
Upgrade cable	page 9-5
Sensor harness or conversion harness	page 9-6
Primary harness	page 9-7
Control electronics board	page 9-10
Reader assembly	page 9-18

Note: When servicing components, always test that the lock works properly when you're finished.

SERVICING THE ESCUTCHEON GASKET



Before you handle the control electronics board or any component on the control electronics board, make sure that you are properly grounded using an electrostatic discharge (ESD) protection kit. Touching the control electronics board without proper grounding can damage sensitive electronic components—even if you don't notice any static discharge.

Removing the escutcheon gasket

1. Remove the inside and outside escutcheons from the door. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
2. Remove the escutcheon gasket from the escutcheon and discard the gasket.

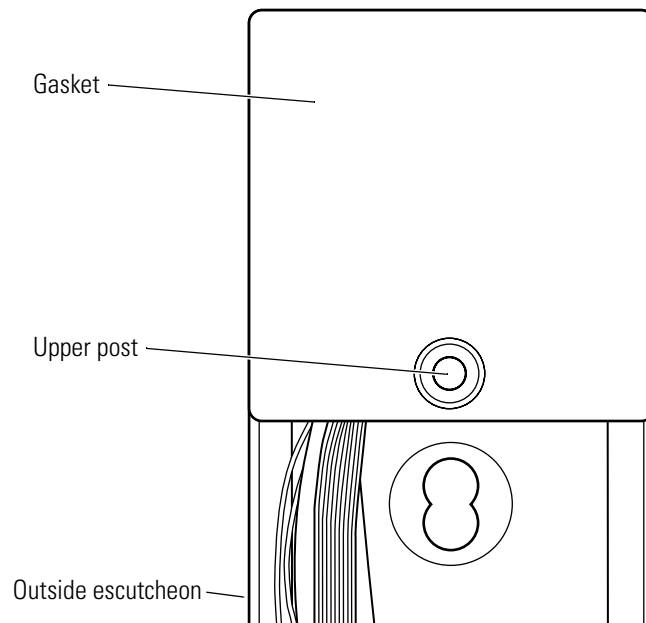


Figure 9.1 Removing and reinstalling the escutcheon gasket

Reinstalling the escutcheon gasket

1. Peel away the protective backing from the edge of the escutcheon gasket and slide the gasket onto the upper escutcheon post. Press the gasket into place on the edge of the escutcheon so the electronics board is covered.
2. Reinstall the inside and outside escutcheons on the door. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

SERVICING THE LENS COVERS

A replacement kit is available for the lens covers. See [page 4-6](#).

Removing the lens covers

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#)).
2. Pry the lens covers off the top of the outside escutcheon.

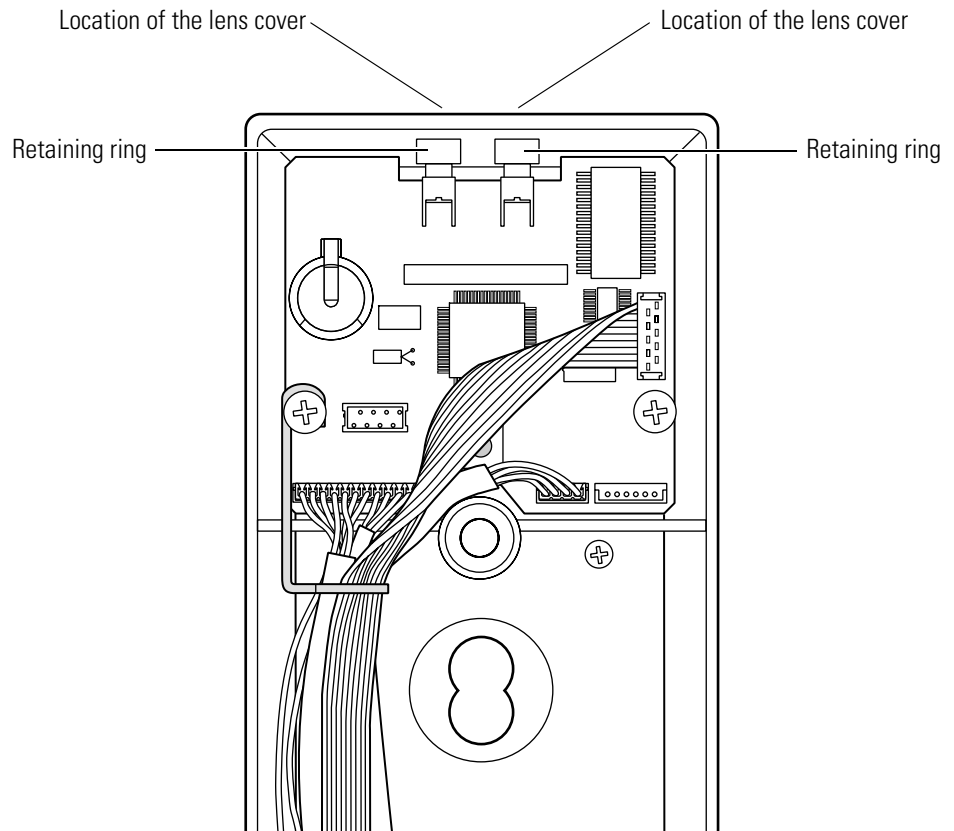


Figure 9.2 Removing and reinstalling the lens covers (smart card reader shown)

Reinstalling the lens covers

1. Insert the lens covers into the holes in the top of the outside escutcheon.
2. On the inside of the escutcheon, slide the retaining rings up and around the ends of the lens covers.
3. Reinstall the following parts:
 - escutcheon gasket
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

SERVICING THE HARNESS CLAMP

Removing the harness clamp

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#)).
2. Loosen the electronics board mounting screw that holds the harness clamp and remove the clamp.

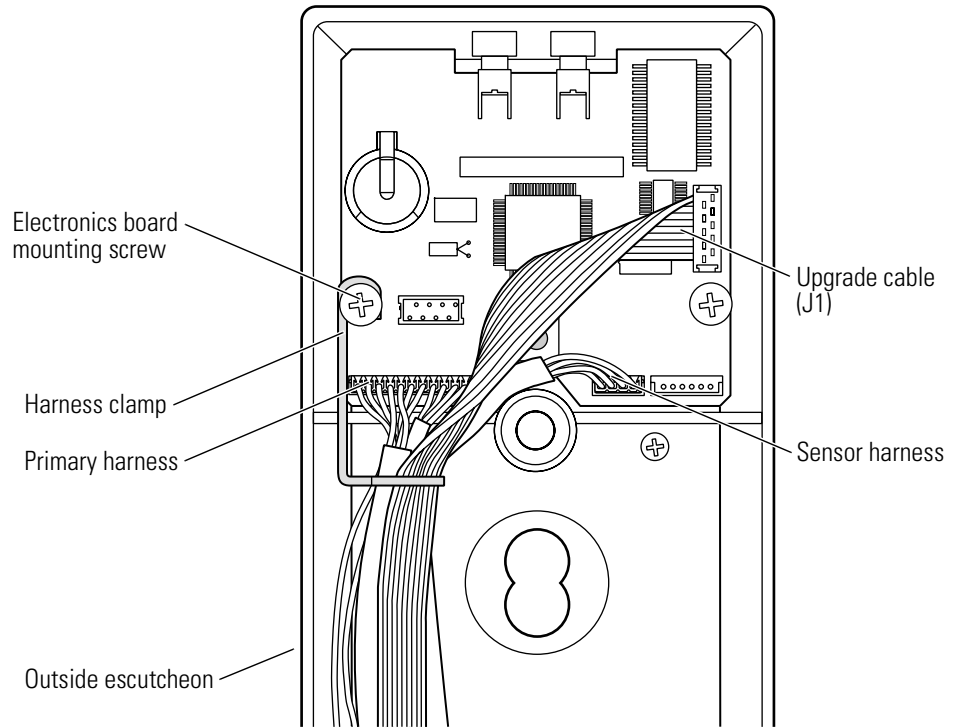


Figure 9.3 Removing and reinstalling the harness clamp (smart card reader shown)

Reinstalling the harness clamp

1. Slide the harness clamp under the loosened electronics board mounting screw.
2. Position the primary harness, sensor harness (EV, FV, and LV function mortise locks), and upgrade cable under the clamp, as shown in [Figure 9.3](#).

Note: For a description of lock functions, see [page 2-2](#).

3. Tighten the screw.
4. Reinstall the following parts:
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

SERVICING THE UPGRADE CABLE

A replacement kit is available for the upgrade cable. See [page 4-6](#).

Note: The upgrade cable is for future use.

Removing the upgrade cable

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#)).
2. Disconnect the upgrade cable from the electronics board.

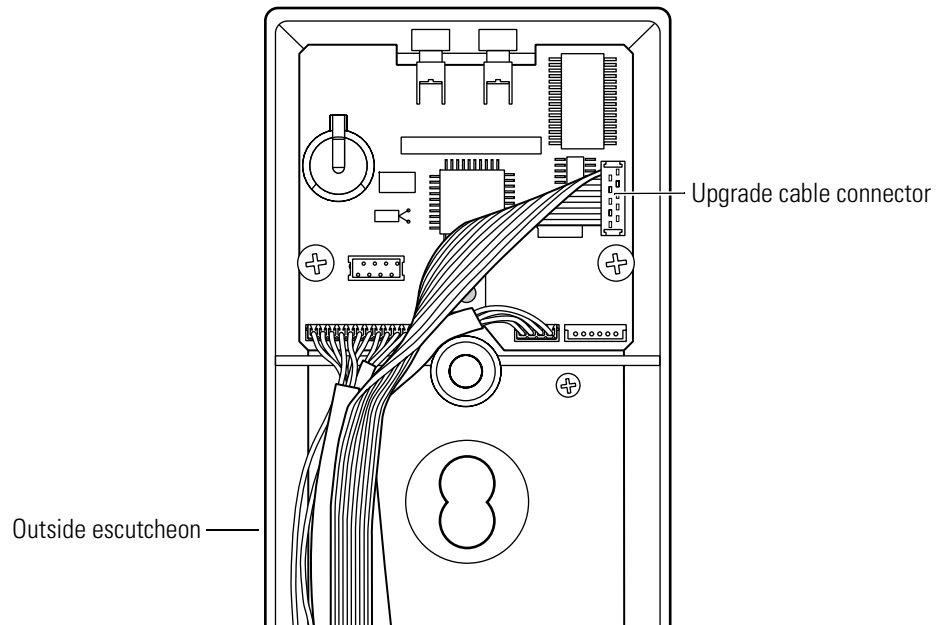


Figure 9.4 Removing and reinstalling the upgrade cable (smart card reader shown)

Reinstalling the upgrade cable

1. Connect the upgrade cable to the J1 connector on the electronics board.
2. Reinstall the following parts:
 - harness clamp ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

SERVICING THE SENSOR HARNESS

Replacement kits are available for the sensor harness and the conversion harness. See [page 4-6](#).

These steps are for EV, FV, and LV function mortise locks only.

Note: For a description of lock functions, see [page 2-2](#).

Removing the sensor harness

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#)).
2. Disconnect the sensor harness from the electronics board.

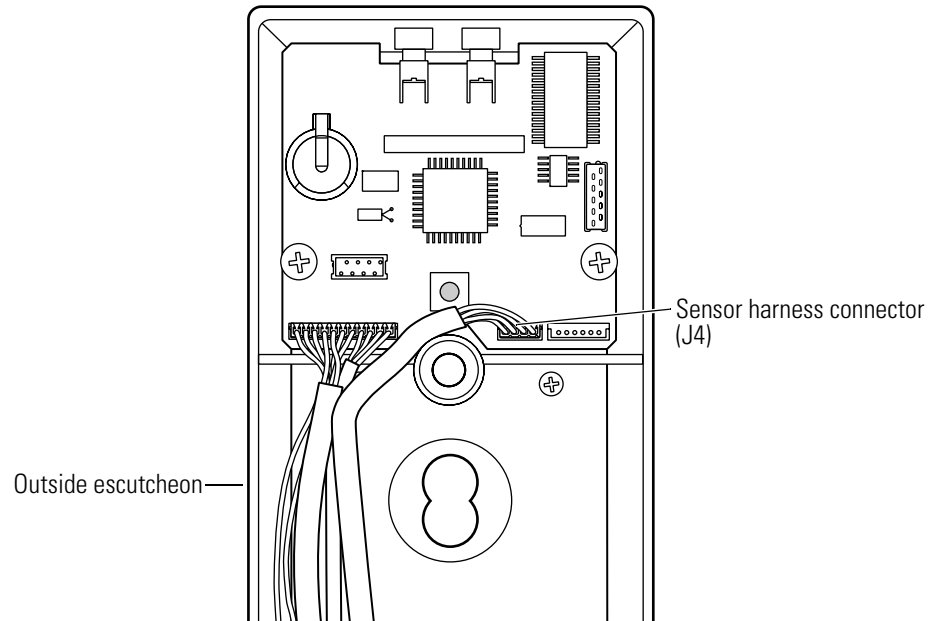


Figure 9.5 Removing and reinstalling the sensor harness (smart card reader shown)

Reinstalling the sensor harness

1. Connect the sensor harness to the J4 connector on the electronics board.
2. Reinstall the following parts:
 - harness clamp ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

SERVICING THE PRIMARY HARNESS

A replacement kit is available for the primary harness. See [page 4-6](#).

Removing the primary harness

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#)).
2. Disconnect the primary harness from the electronics board.

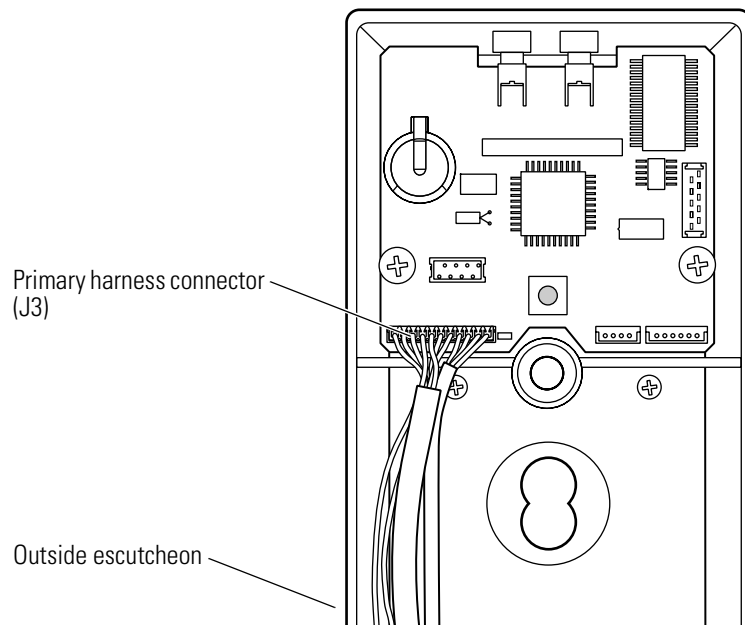


Figure 9.6 Removing and reinstalling the primary harness from the electronics board (smart card reader shown)

3. Insert a flat blade screwdriver under the sounder and turn it to remove the sounder from the outside escutcheon.

4. Loosen the nut and slide the com port out from the escutcheon.

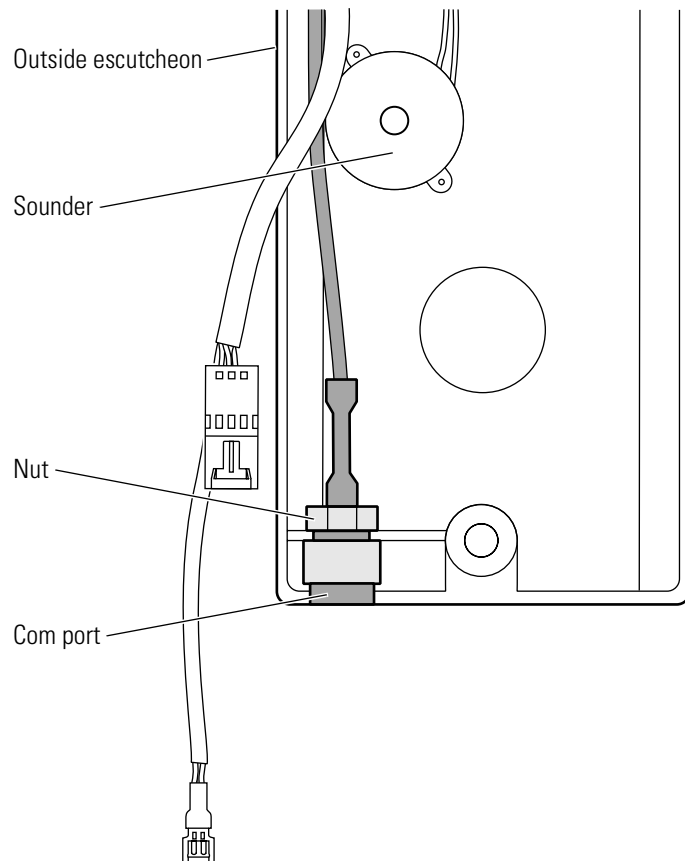


Figure 9.7 Disconnecting the sounder and com port from the outside escutcheon

Reinstalling the primary harness

1. Connect the primary wire harness to the J3 connector on the electronics board.
2. Remove the backing from the adhesive tape and apply the tape to the escutcheon.
3. Press the sounder in place on the tape.

4. Slide the com port into place in the escutcheon and tighten the nut. See [Figure 9.8](#).

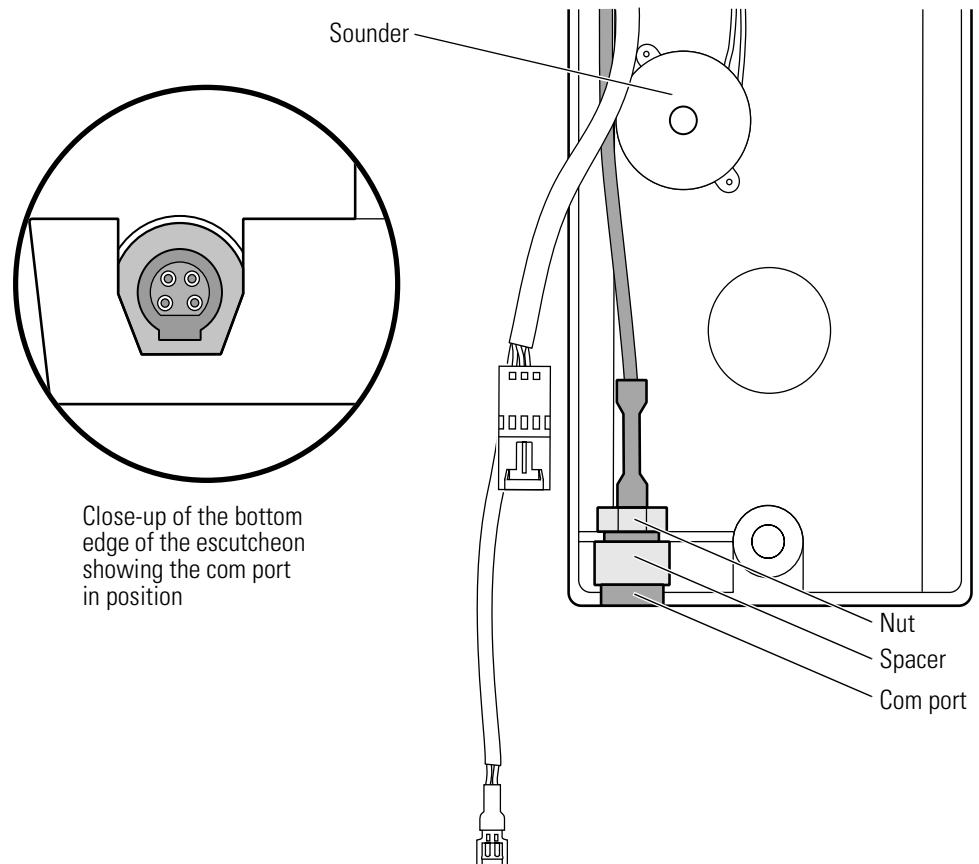


Figure 9.8 Connecting the sounder and com port to the outside escutcheon

5. Reinstall the following parts:
 - harness clamp ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

SERVICING THE CONTROL ELECTRONICS BOARDS

Replacement kits are available for control electronics boards.
See [page 4-5](#).

Note: To determine whether a lock has a B.A.S.I.S. G or B.A.S.I.S. V control electronics board, look at the label on the center of the board. B.A.S.I.S. G is labeled as BAGLKS. B.A.S.I.S. V is labeled as BA_LKS.

Removing the magnetic stripe control electronics board

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#))
 - upgrade cable ([page 9-5](#))
 - sensor harness ([page 9-6](#))
 - primary harness ([page 9-7](#), step 2).
2. Remove and save the electronics board mounting screws.
See [Figure 9.9](#).
3. Disconnect the reader harness from the electronics board. Set aside the electronics board.

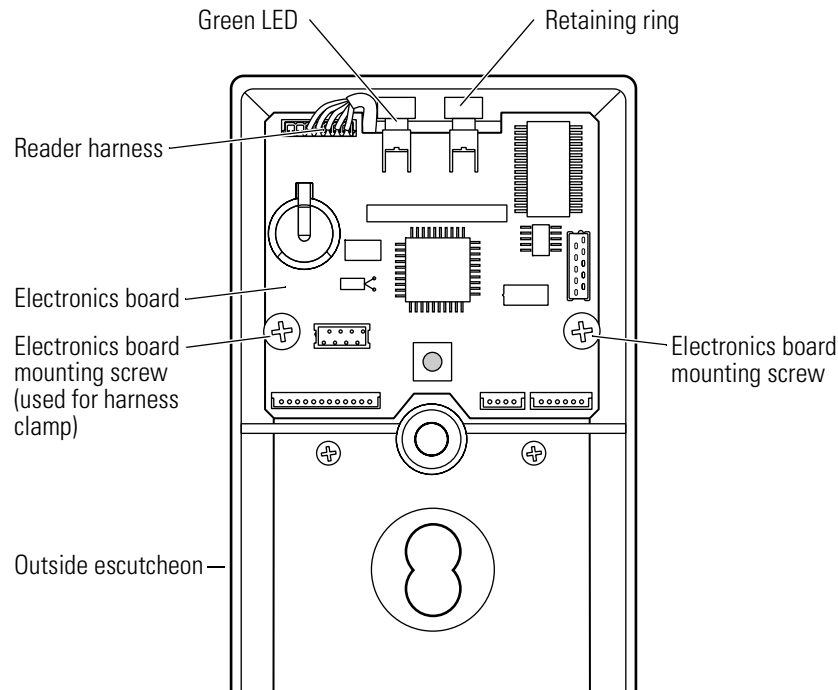


Figure 9.9 Removing and reinstalling the magnetic stripe control electronics board

Reinstalling the magnetic stripe control electronics board



Caution



Caution

1. If you are installing a new control electronics board, pull down on the backup battery tab and remove it from the outside escutcheon to turn on the backup battery.

For the lock to operate properly, you must remove the backup battery tab.

Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.

2. Firmly connect the reader harness to the connector on the upper-left corner of the electronics board. The connector should snap into place. See [Figure 9.9](#).
3. Route the reader harness so it fits to the side of the green LED.
4. Position the electronics board in the escutcheon so the LEDs fit into the retaining rings.
5. Install the two electronics board mounting screws, but do not tighten the screw for the harness clamp.
6. Reinstall the following parts:
 - primary harness ([page 9-8](#), step 1)
 - sensor harness ([page 9-6](#))
 - upgrade cable ([page 9-5](#))
 - harness clamp (and tighten the electronics board mounting screw) ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

Removing the smart card control electronics board

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#))
 - upgrade cable ([page 9-5](#))
 - sensor harness ([page 9-6](#))
 - primary harness (step 2, [page 9-7](#)).
2. Remove and save the electronics board mounting screws. See [Figure 9.10](#).

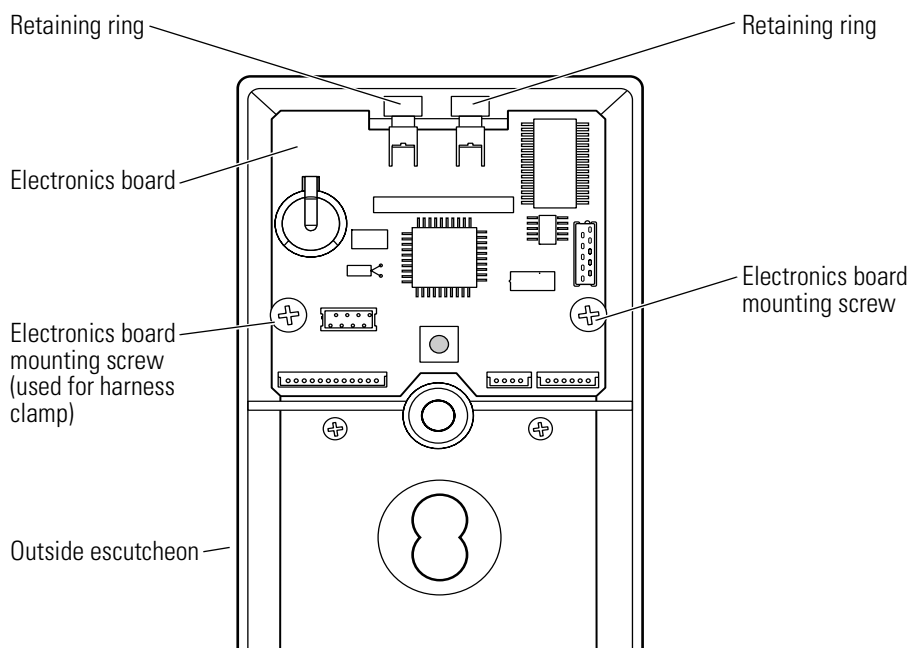


Figure 9.10 Removing and reinstalling the smart card control electronics board

3. Flip up the control electronics board.

4. Slide open the flex cable connector and disconnect the flex cable. Set aside the electronics board. See [Figure 9.11](#).

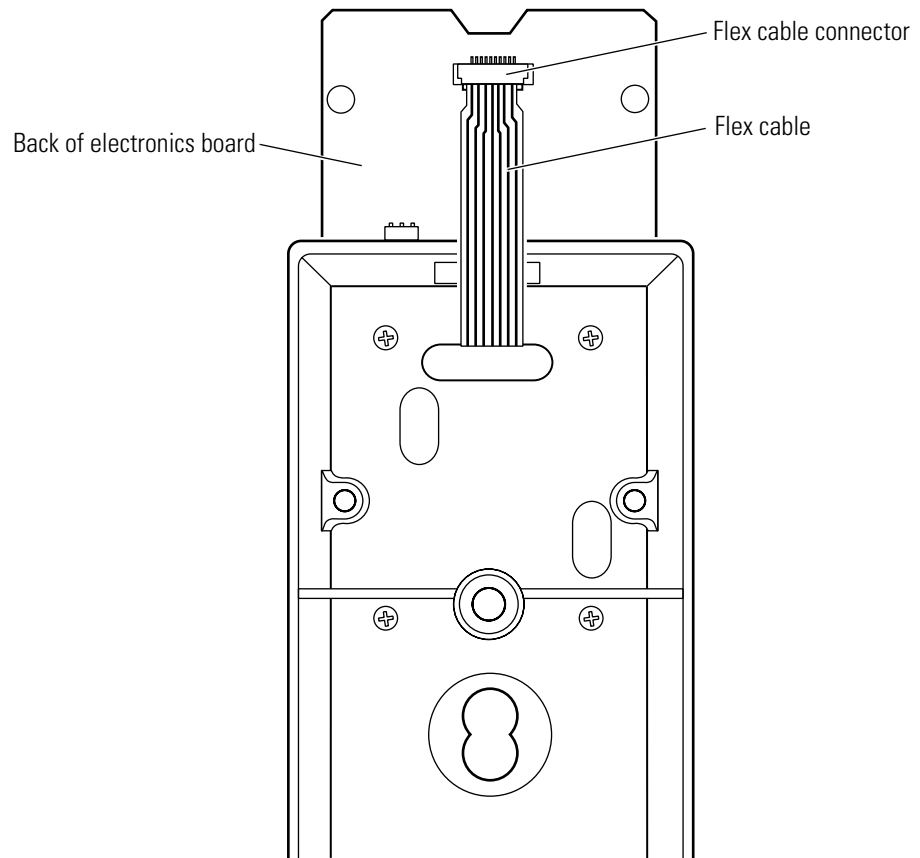


Figure 9.11 Disconnecting the flex cable from the smart card control electronics board

Reinstalling the smart card control electronics board

1. If you are installing a new control electronics board, pull down on the backup battery tab and remove it from the outside escutcheon to turn on the backup battery.

For the lock to operate properly, you must remove the backup battery tab.



Caution



Caution

Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.

2. Insert the flex cable into the connector on the back of the electronics board. See [Figure 9.12](#).
3. Slide closed the flex cable connector.

4. Flip down the electronics board and position it in the escutcheon so the LEDs fit into the retaining rings.

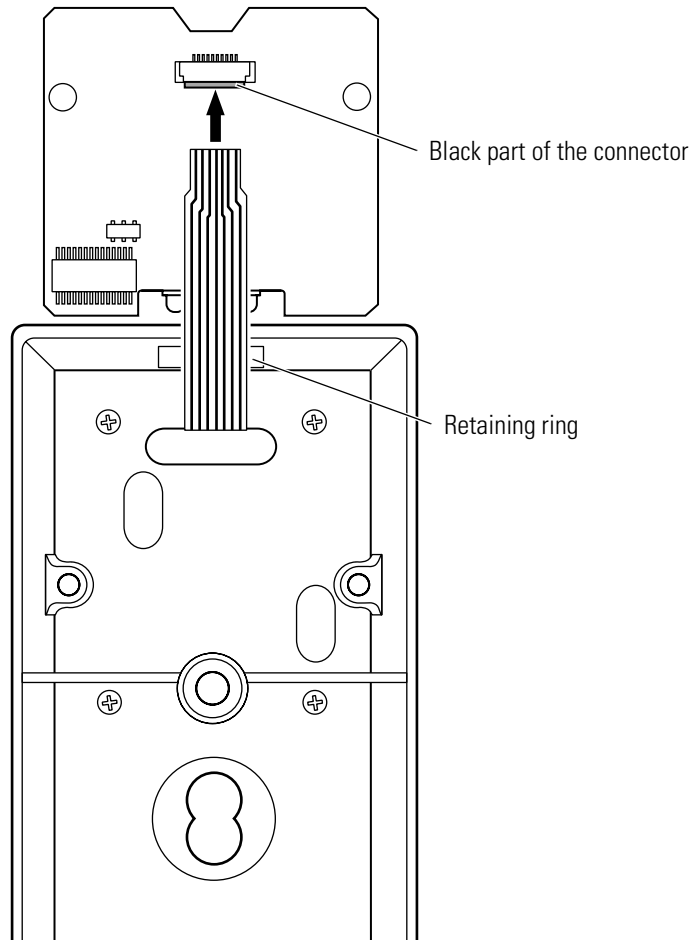


Figure 9.12 Connecting the flex cable to the smart card control electronics board

5. Install the two electronics board mounting screws, but do not tighten the screw for the harness clamp.
6. Reinstall the following parts:
 - primary harness ([page 9-8](#), step 1)
 - sensor harness ([page 9-6](#))
 - upgrade cable ([page 9-5](#))
 - harness clamp (and tighten the electronics board mounting screw) ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

Removing the dual validation control electronics board

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#))
 - upgrade cable ([page 9-5](#))
 - sensor harness ([page 9-6](#))
 - primary harness ([page 9-7](#), step 2).
2. Remove and save the electronics board mounting screws. See [Figure 9.13](#).
3. Disconnect the reader cable from the electronics board. Set aside the electronics board.

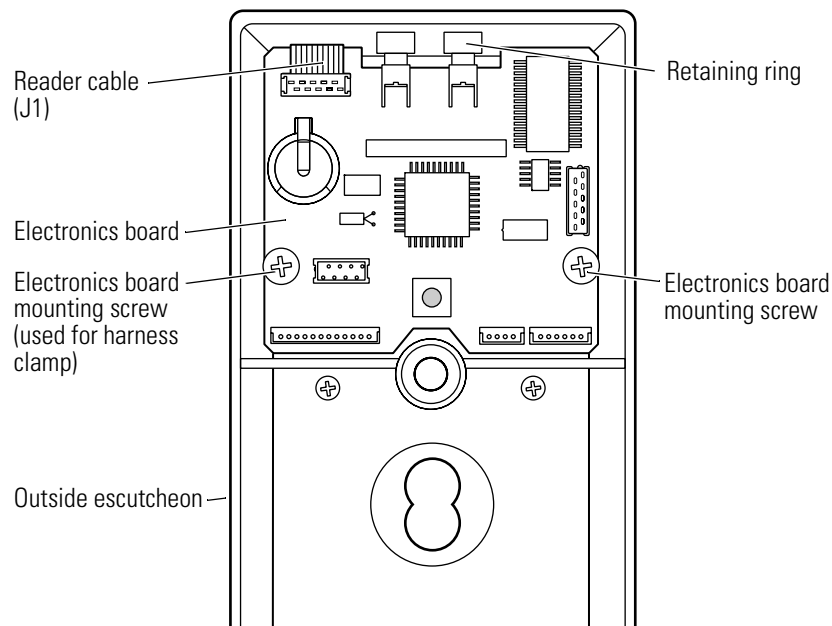


Figure 9.13 Removing and reinstalling the dual validation control electronics board

Reinstalling the dual validation control electronics board

1. If you are installing a new control electronics board, pull down on the backup battery tab and remove it from the outside escutcheon to turn on the backup battery.



Caution



Caution

For the lock to operate properly, you must remove the backup battery tab.

Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.

2. Firmly connect the reader harness to the connector on the upper-left corner of the electronics board. The connector should snap into place. See [Figure 9.13](#).
3. Route the reader cable so it fits in between the top of the electronics board and the escutcheon.
4. Position the electronics board in the escutcheon so the LEDs fit into the retaining rings.
5. Install the two electronics board mounting screws, but do not tighten the screw for the harness clamp.
6. Reinstall the following parts:
 - primary harness ([page 9-8](#), step 1)
 - sensor harness ([page 9-6](#))
 - upgrade cable ([page 9-5](#))
 - harness clamp (and tighten the electronics board mounting screw) ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

Removing the proximity control electronics board

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#))
 - upgrade cable ([page 9-5](#))
 - sensor harness ([page 9-6](#))
 - primary harness ([page 9-7](#), step 2).
2. Remove and save the electronics board mounting screws. See [Figure 9.14](#).

- Carefully pull the electronics board straight out from the escutcheon and remove it. Set aside the electronics board.

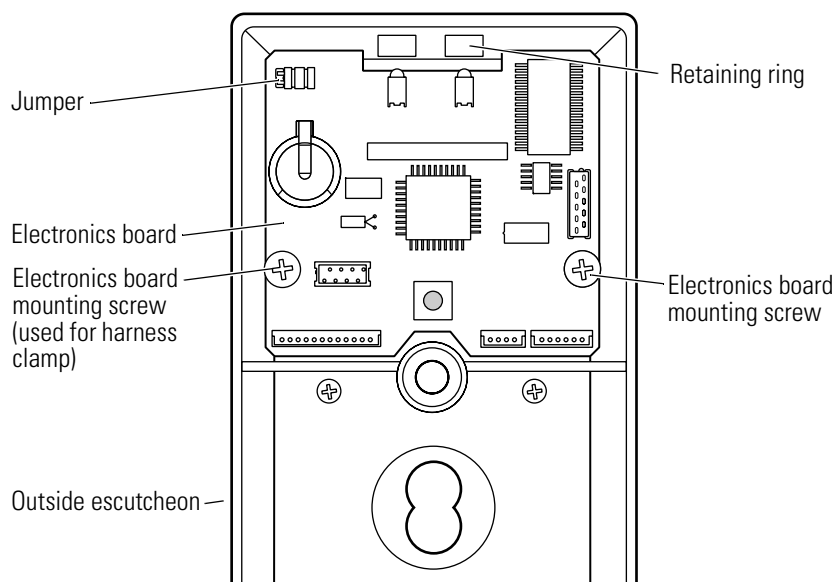


Figure 9.14 Removing and reinstalling the proximity control electronics board

Reinstalling the proximity control electronics board

- If you are installing a new control electronics board, pull down on the backup battery tab and remove it from the outside escutcheon to turn on the backup battery.

For the lock to operate properly, you must remove the backup battery tab.

Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.



- Align the connectors on the back of the electronics board with the reader pins. Press the board into place.
- Install the two electronics board mounting screws, but do not tighten the screw for the harness clamp.

Note: The jumper shown in [Figure 9.14](#) must be installed in order to use an ABA card format with a proximity card reader. This jumper must be removed to use a Weigand card format.

- Reinstall the following parts:
 - primary harness ([page 9-8](#), step 1)
 - sensor harness ([page 9-6](#))
 - upgrade cable ([page 9-5](#))
 - harness clamp (and tighten the electronics board mounting screw) ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

SERVICING THE READER ASSEMBLIES

Replacement kits are available for the reader assemblies. See [page 4-4](#).

Removing the magnetic stripe reader assembly

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#))
 - upgrade cable ([page 9-5](#))
 - sensor harness ([page 9-6](#))
 - primary harness (step 2, [page 9-7](#))
 - electronics board ([page 9-12](#)).
2. Remove and save the four reader assembly mounting screws. See [Figure 9.15](#).

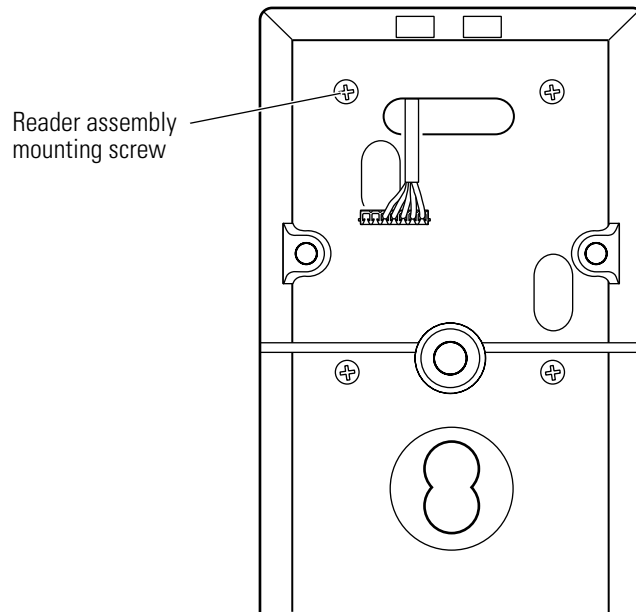


Figure 9.15 Removing and reinstalling the screws for the magnetic stripe reader assembly

3. Remove the magnetic stripe reader assembly from the outside escutcheon, sliding the reader harness through the slot in the escutcheon. See [Figure 9.16](#).

Note: To determine the read head track position for ordering a magnetic stripe reader replacement kit, look at the back of the reader for the label that states, “This reader was factory set to read magstripe track no. 1 2.” The track number is circled. If there is no label, the track number is 3.

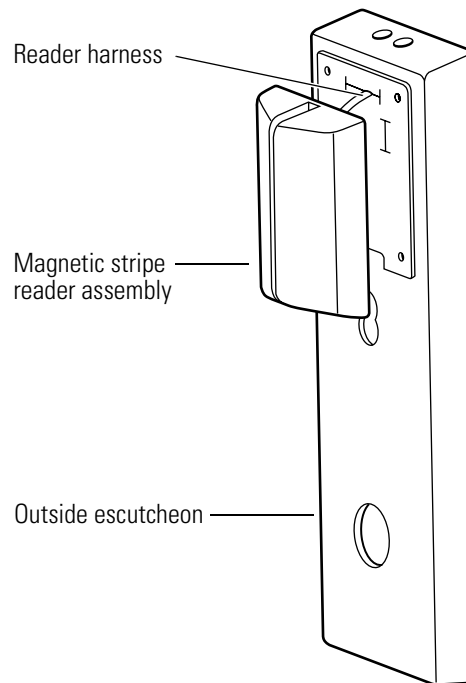


Figure 9.16 Removing the magnetic stripe reader assembly from the outside escutcheon

Reinstalling the magnetic stripe reader assembly

1. Orient the magnetic stripe reader assembly and insert the reader harness through the slot in the outside escutcheon. See [Figure 9.17](#).

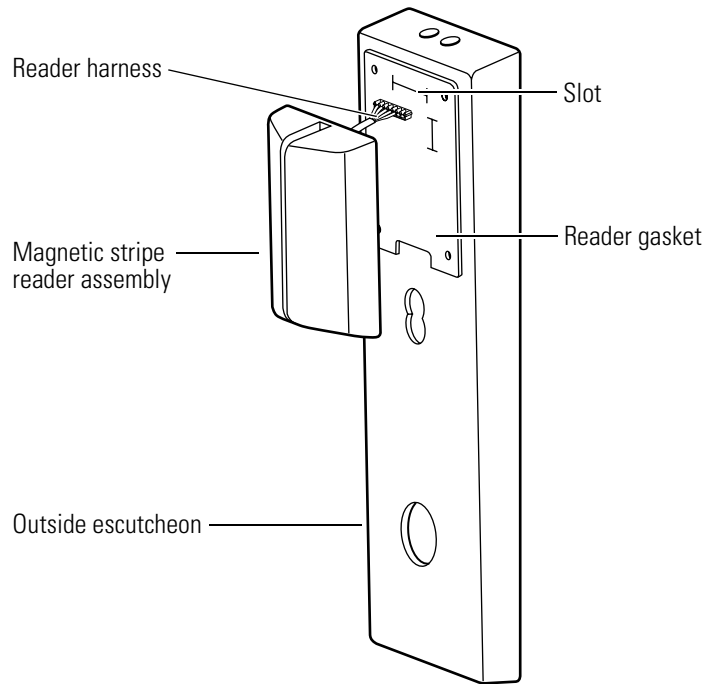


Figure 9.17 Positioning the magnetic stripe reader assembly

2. Position the reader assembly on the reader gasket and install the four reader assembly mounting screws. See [Figure 9.15](#).
3. Reinstall the following parts:
 - electronics board ([page 9-13](#))
 - primary harness ([page 9-8](#), step 1)
 - sensor harness ([page 9-6](#))
 - upgrade cable ([page 9-5](#))
 - harness clamp ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

Removing the smart card reader assembly

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#))
 - upgrade cable ([page 9-5](#))
 - sensor harness ([page 9-6](#))
 - primary harness (step 2, [page 9-7](#))
 - electronics board ([page 9-12](#)).
2. Remove and save the four reader assembly mounting screws. See [Figure 9.18](#).

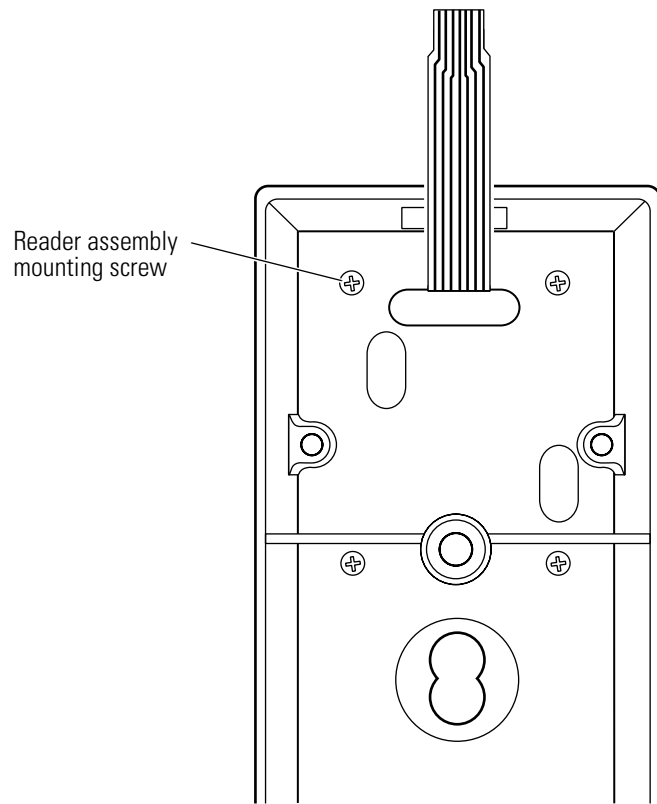


Figure 9.18 Removing and reinstalling the screws for the smart card reader assembly

3. Remove the smart card reader assembly from the outside escutcheon, sliding the flex cable through the slot in the escutcheon. See [Figure 9.19](#).

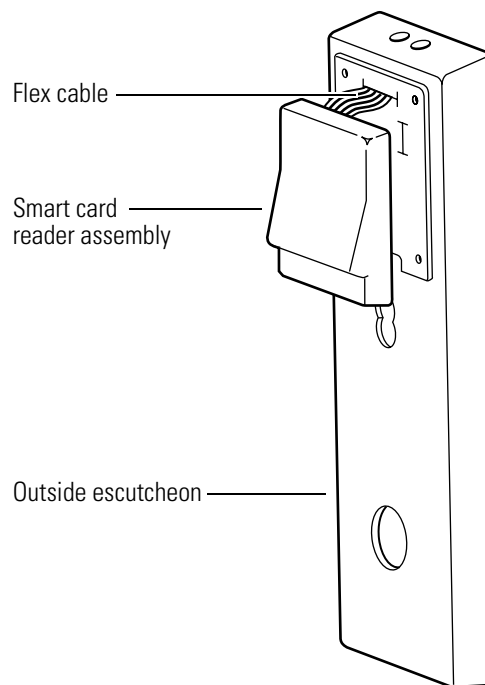


Figure 9.19 Removing the smart card reader assembly from the outside escutcheon

Reinstalling the smart card reader assembly

1. Orient the reader assembly and insert the flex cable through the slot in the outside escutcheon. See [Figure 9.20](#).

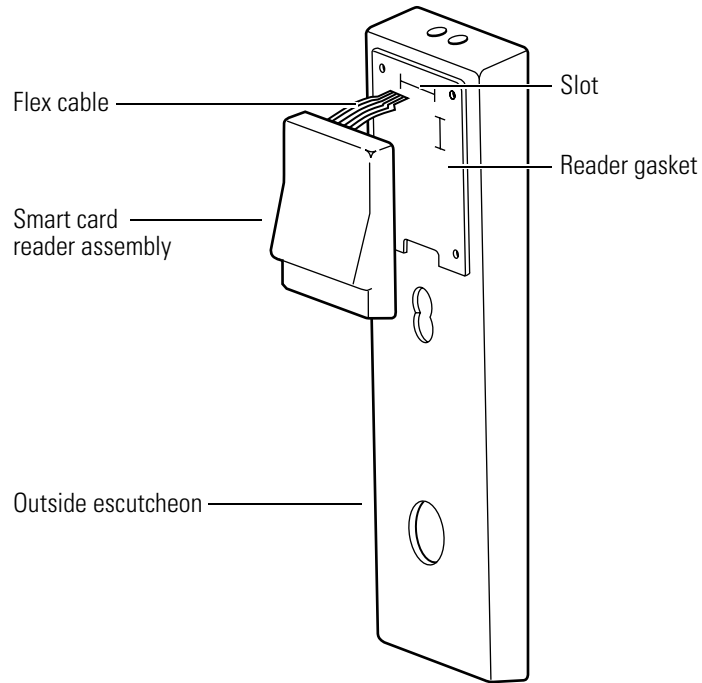


Figure 9.20 Positioning the smart card reader assembly

2. Position the smart card reader assembly on the reader gasket and install the four reader assembly mounting screws. See [Figure 9.18](#).
3. Reinstall the following parts:
 - electronics board ([page 9-13](#))
 - primary harness (step 1, [page 9-8](#))
 - sensor harness ([page 9-6](#))
 - upgrade cable ([page 9-5](#))
 - harness clamp ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

Removing the dual validation reader assembly

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#))
 - upgrade cable ([page 9-5](#))
 - sensor harness ([page 9-6](#))
 - primary harness (step 2, [page 9-7](#))
 - electronics board ([page 9-15](#)).
2. Remove and save the four reader assembly mounting screws. See [Figure 9.21](#).

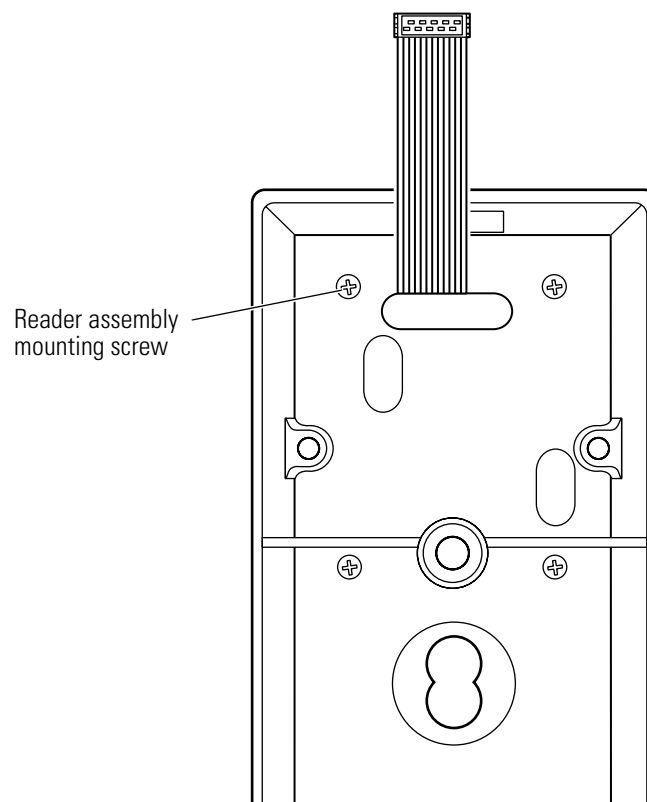


Figure 9.21 Removing and reinstalling the screws for the dual validation reader assembly

3. Remove the dual validation reader assembly from the outside escutcheon, sliding the reader cable through the slot in the escutcheon. See [Figure 9.22](#).

Note: To determine the read head track position for ordering a dual validation reader replacement kit, look at the back of the reader for the label that states, “This reader was factory set to read dual validation track no. 1 2.” The track number is circled. If there is no label, the track number is 3.

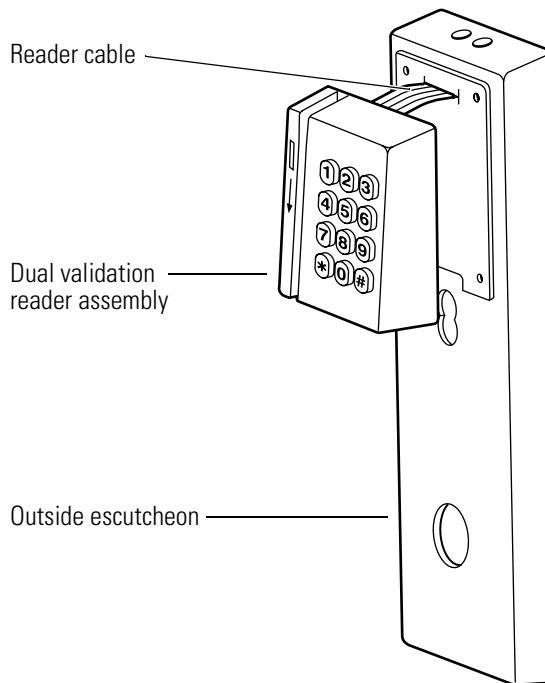


Figure 9.22 Removing the dual validation reader assembly from the outside escutcheon

Reinstalling the dual validation reader assembly

1. Orient the dual validation reader assembly and insert the reader cable through the slot in the outside escutcheon. See [Figure 9.23](#).

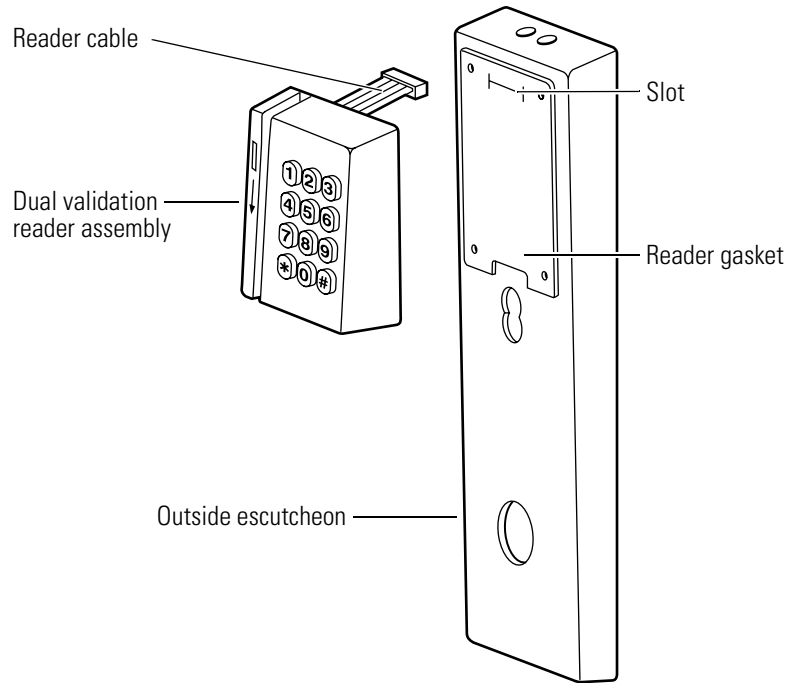


Figure 9.23 Positioning the dual validation reader assembly

2. Position the reader assembly on the reader gasket and install the four reader assembly mounting screws. See [Figure 9.21](#).
3. Reinstall the following parts:
 - electronics board ([page 9-15](#))
 - primary harness ([page 9-8](#), step 1)
 - sensor harness ([page 9-6](#))
 - upgrade cable ([page 9-5](#))
 - harness clamp ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

Removing the proximity reader assembly

1. Remove the following parts:
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).
 - escutcheon gasket ([page 9-2](#))
 - harness clamp ([page 9-4](#))
 - upgrade cable ([page 9-5](#))
 - sensor harness ([page 9-6](#))
 - primary harness (step 2, [page 9-7](#))
 - electronics board ([page 9-16](#)).
2. Remove and save the four reader assembly mounting screws. See [Figure 9.24](#).

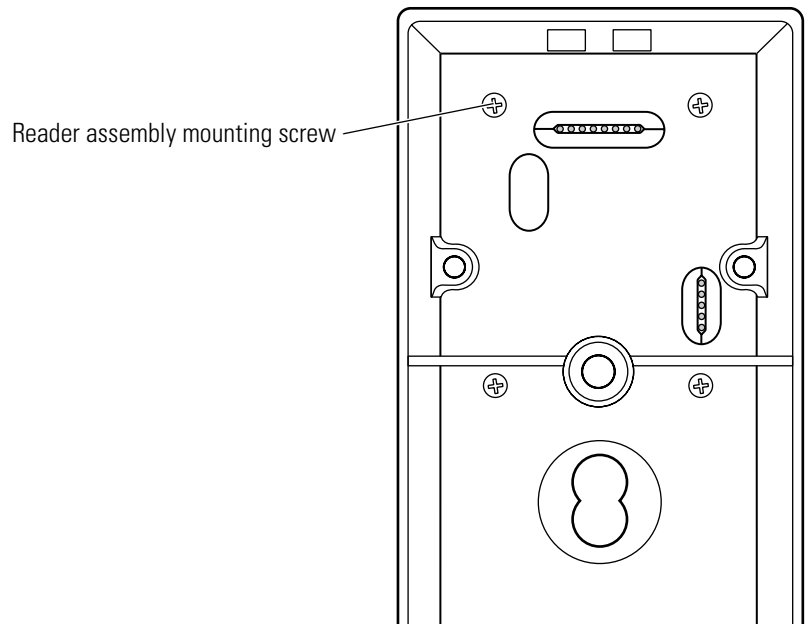


Figure 9.24 Removing the proximity reader assembly from the outside escutcheon

3. Remove the proximity reader assembly from the outside escutcheon.

Reinstalling the proximity reader assembly

1. Orient the proximity reader assembly and insert the prongs through the slots in the outside escutcheon. See [Figure 9.25](#).

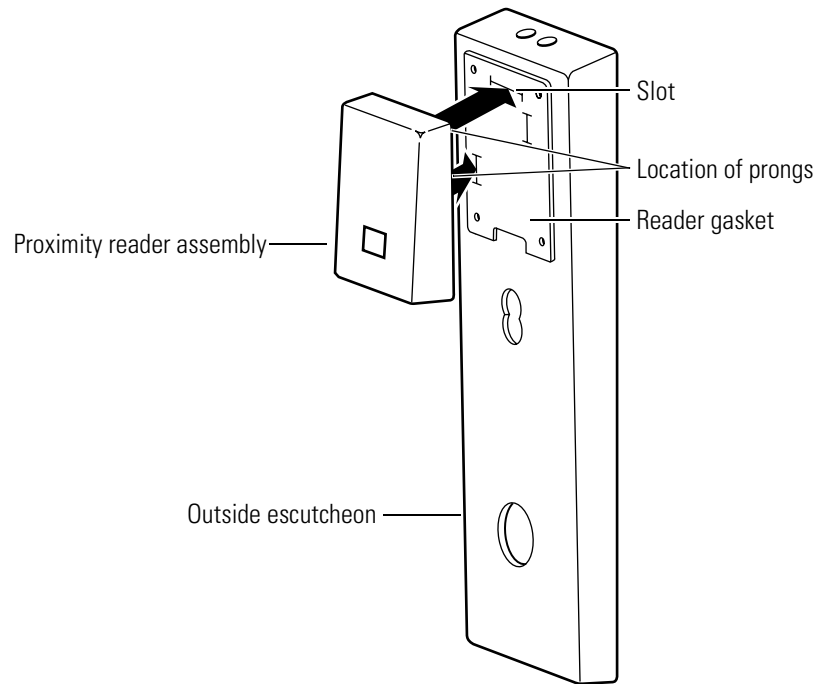


Figure 9.25 Positioning the proximity reader assembly

2. Position the reader assembly on the reader gasket and install the four reader assembly mounting screws. See [Figure 9.24](#).
3. Reinstall the following parts:
 - electronics board ([page 9-17](#))
 - primary harness ([page 9-8](#), step 1)
 - sensor harness ([page 9-6](#))
 - upgrade cable ([page 9-5](#))
 - harness clamp ([page 9-4](#))
 - escutcheon gasket ([page 9-2](#))
 - inside and outside escutcheons. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

10

SERVICING EXIT HARDWARE TRIM ESCUTCHEON PARTS

This chapter contains instructions for servicing escutcheon parts for B.A.S.I.S. V EX Series Exit Hardware Trim. For instructions for servicing standard B.A.S.I.S. outside escutcheon parts, see [page 9-1](#).

- To remove all of the parts from the B.A.S.I.S. escutcheon, perform all of the steps for removing parts in each section of this chapter. Begin with the mounting standoffs ([page 10-2](#)).
- To reinstall all of the parts in the B.A.S.I.S. escutcheon, perform all of the steps for reinstalling parts in each section of this chapter. Begin with the shear pin ([page 10-29](#)).
- To change the handing for the B.A.S.I.S. escutcheon, see [page 10-30](#).
- To service an individual part, see the section for that part. The instructions refer to other sections as necessary.

If you need to service...	See...
Mounting standoffs	page 10-2
Escutcheon gasket	page 10-3
Lift finger	page 10-4
Mounting plate	page 10-6
Lever return springs	page 10-8
Lens covers	page 10-9
Primary harness	page 10-9

If you need to service...	See...
Control electronics board	page 10-10
Reader assembly	page 10-13
Motor assembly	page 10-16
Locking plate	page 10-20
Yoke	page 10-22
Beam and beam roller	page 10-24
Lever assembly	page 10-26
Shear pin	page 10-28

Note: When servicing components, always test that the lock works properly when you're finished.

SERVICING THE MOUNTING STANDOFFS

Removing the mounting standoffs

1. Remove the escutcheon from the door. See [page 8-13](#).
2. Unscrew the 6 mounting plate standoffs from the mounting plate.

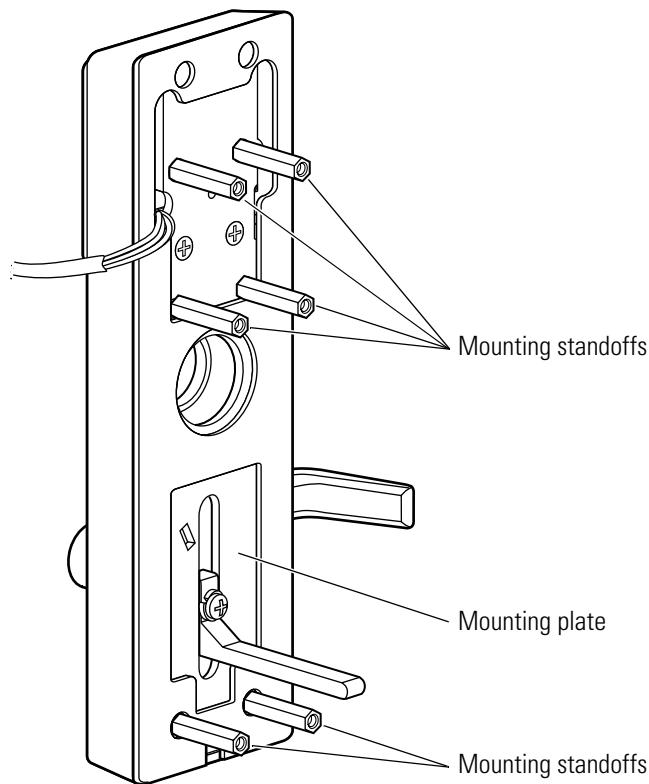


Figure 10.1 Removing and reinstalling the mounting standoffs

Reinstalling the mounting standoffs

1. Screw the 6 mounting standoffs onto the mounting plate.
2. Reinstall the escutcheon on the door. See [page 8-14](#).

SERVICING THE ESCUTCHEON GASKET

Each time you service the escutcheon gasket you need to replace it with a new gasket. Use part number C64564 when ordering.

Removing the escutcheon gasket

1. Remove the followings parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#)).
2. Peel the gasket off the escutcheon and discard. See [Figure 10.2](#).

Note: You may need to scrape remnants of the gasket from the escutcheon.

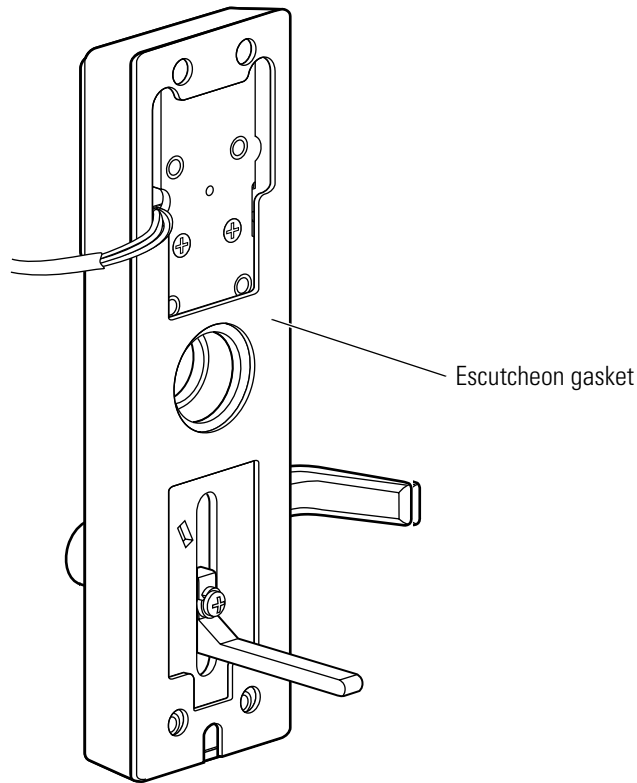


Figure 10.2 Removing and reinstalling the escutcheon gasket

Reinstalling the escutcheon gasket

1. Starting at the bottom of the gasket, peel away the protective backing a small amount at a time while unrolling the gasket into position on the escutcheon.
2. Press the gasket into place on the escutcheon. See [Figure 10.2](#).
3. Reinstall the following parts:
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE LIFT FINGER

Each time you service the lift finger you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- lift finger screw ([page 4-9](#)).

Removing the lift finger

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#)).
2. Note the orientation of the lift finger. See [Figure 10.3](#).
3. Remove the lift finger screw and discard.
4. Remove the washer, and lift finger.

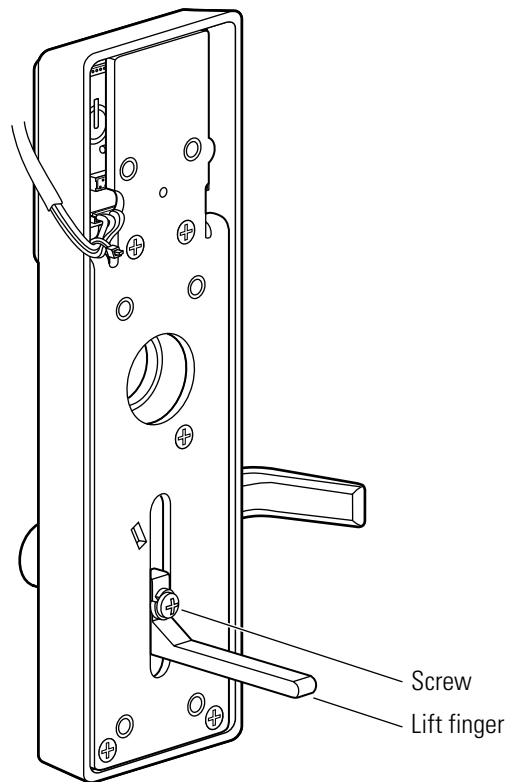


Figure 10.3 Removing and reinstalling the lift finger (Precision Hardware rim configuration shown)

Reinstalling the lift finger

1. Position the lift finger on the escutcheon in the orientation noted in step 2 on [page 10-4](#).
2. Position the washer on the lift finger screw. Tightly secure the lift finger with the lift finger screw (25–30 lbs. torque). See [Figure 10.3](#).
3. Reinstall the following parts:
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE MOUNTING PLATE

Each time you service the mounting plate you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw (page 4-9)
- mounting plate screws (page 4-9).

Removing the mounting plate

1. Remove the following parts:
 - escutcheon from the door (page 8-13)
 - mounting standoffs (page 10-2)
 - escutcheon gasket (page 10-3)
 - lift finger (page 10-4).
2. Cut the cable tie off the mounting plate post and discard the cable tie. See Figure 10.4.

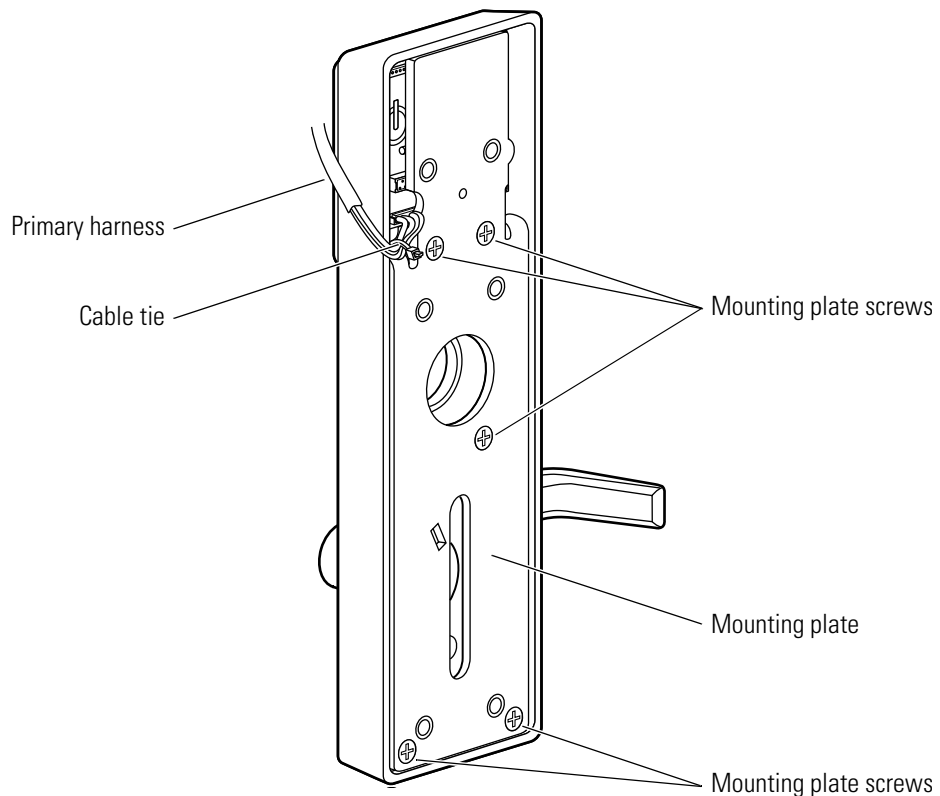


Figure 10.4 Removing and reinstalling the mounting plate

3. Remove the 5 mounting plate screws and discard.
4. Carefully remove the mounting plate from the escutcheon.



Caution

Be careful not to drop the lever return springs on the control electronics board. They can easily damage the electronics.

Reinstalling the mounting plate

1. With the posts on the mounting plate inserted in the lever return springs, slide the mounting plate into the escutcheon. See [Figure 10.5](#).

Make sure that the locking plate fits into the slot in the mounting plate. See [Figure 10.4](#).

2. Install the 5 new mounting plate screws.
3. Route the primary harness against the mounting plate post and secure the harness to the post with a cable tie. See [Figure 10.4](#).
4. Reinstall the following parts:
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE LEVER RETURN SPRINGS

Each time you service the lever return springs you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#)).

Removing the lever return springs

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#)).
2. Remove the lever return springs from the yoke. See [Figure 10.5](#).

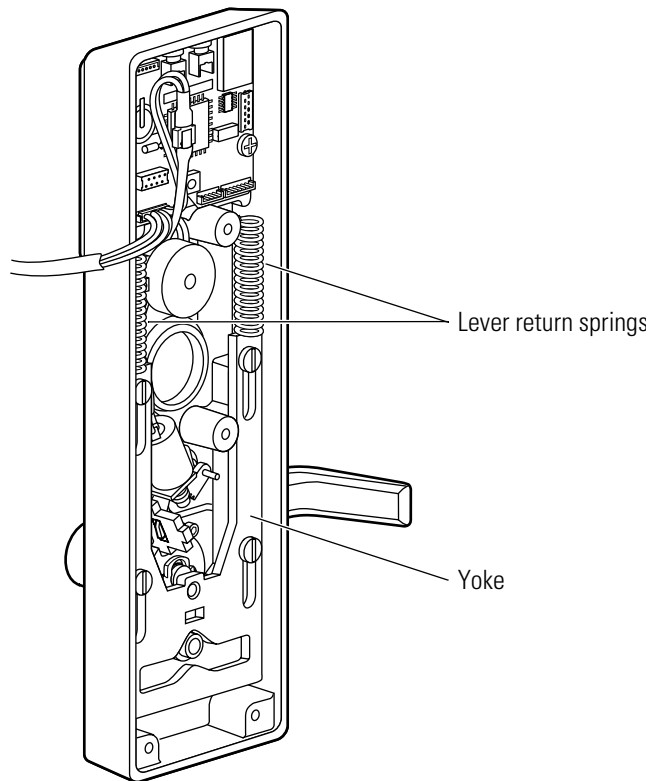


Figure 10.5 Removing and reinstalling the lever return springs

Reinstalling the lever return springs

1. Install the lever return springs onto the yoke posts. See [Figure 10.5](#).
2. Reinstall the following parts:
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE LENS COVERS

A replacement kit is available for the lens covers. See [page 4-6](#).

Each time you service the lens covers you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#)).

Removing the lens covers

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
2. Perform step 2 on [page 9-3](#).

Reinstalling the lens covers

1. Perform steps 1 and 2 on [page 9-3](#).
2. Reinstall the following parts:
 - mounting plate ([page 10-7](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-5](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE PRIMARY HARNESS

A replacement kit is available for the primary harness. See [page 4-10](#).

Each time you service the primary harness you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#))
- tape for mounting the sounder.



Caution

Before you handle the control electronics board or any component on the control electronics board, make sure that you are properly grounded using an electrostatic discharge (ESD) protection kit. Touching the control electronics board without proper grounding can damage sensitive electronic components—even if you don't notice any static discharge.

Removing the primary harness

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#)).
2. Perform steps 2 through 4 starting on [page 9-7](#).

Reinstalling the primary harness

1. Perform steps 1 through 3 starting on [page 9-8](#).
2. Reinstall the following parts:
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE CONTROL ELECTRONICS BOARDS

Replacement kits are available for control electronics boards.
See [page 4-5](#).

Each time you service the control electronics board you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#)).

Note: To determine whether a lock has a B.A.S.I.S. G or B.A.S.I.S. V control electronics board, look at the label on the center of the board. B.A.S.I.S. G is labeled as BAGLKS. B.A.S.I.S. V is labeled as BA_LKS.

Removing the magnetic stripe control electronics board

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - primary harness ([page 10-10](#)).
2. Perform steps 2 and 3 on [page 9-10](#).

Reinstalling the magnetic stripe control electronics board

1. Perform steps 1 through 5 on [page 9-11](#).
2. Reinstall the following parts:
 - primary harness ([page 10-10](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

Removing the smart card control electronics board

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - primary harness ([page 10-10](#)).
2. Perform steps 2 through 4 starting on [page 9-12](#).

Reinstalling the smart card control electronics board

1. Perform steps 1 through 5 starting on [page 9-13](#).
2. Reinstall the following parts:
 - primary harness ([page 10-10](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

Removing the dual validation control electronics board

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - primary harness ([page 10-10](#)).
2. Perform steps 2 and 3 on [page 9-15](#).

Reinstalling the dual validation control electronics board

1. Perform steps 1 through 5 starting on [page 9-15](#).
2. Reinstall the following parts:
 - primary harness ([page 10-10](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

Removing the proximity control electronics board

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - primary harness ([page 10-10](#)).
2. Perform steps 2 and 3 starting on [page 9-16](#).

Reinstalling the proximity control electronics board

1. Perform steps 1 through 3 on [page 9-17](#).
2. Reinstall the following parts:
 - primary harness ([page 10-10](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE READER ASSEMBLIES

Replacement kits are available for the reader assemblies. See [page 4-4](#).

Each time you service the reader assembly you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#)).

Removing the magnetic stripe reader assembly

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - primary harness ([page 10-10](#))
 - electronics board ([page 10-10](#)).
2. Perform steps 2 and 3 starting on [page 9-19](#).

Reinstalling the magnetic stripe reader assembly

1. Perform steps 1 and 2 on [page 9-21](#).
2. Reinstall the following parts:
 - electronics board ([page 10-11](#))
 - primary harness ([page 10-10](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

Removing the smart card reader assembly

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - primary harness ([page 10-10](#))
 - electronics board ([page 10-11](#)).
2. Perform steps 2 and 3 starting on [page 9-22](#).

Reinstalling the smart card reader assembly

1. Perform steps 1 and 2 on [page 9-24](#).
2. Reinstall the following parts:
 - electronics board ([page 10-11](#))
 - primary harness ([page 10-10](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

Removing the dual validation reader assembly

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - primary harness ([page 10-10](#))
 - electronics board ([page 10-11](#)).
2. Perform steps 2 and 3 starting on [page 9-25](#).

Reinstalling the dual validation reader assembly

1. Perform steps 1 and 2 on [page 9-27](#).
2. Reinstall the following parts:
 - electronics board ([page 10-12](#))
 - primary harness ([page 10-10](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

Removing the proximity reader assembly

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - primary harness ([page 10-10](#))
 - electronics board ([page 10-13](#)).
2. Perform steps 2 and 3 on [page 9-28](#).

Reinstalling the proximity reader assembly

1. Perform steps 1 and 2 on [page 9-29](#).
2. Reinstall the following parts:
 - electronics board ([page 10-13](#)).
 - primary harness ([page 10-10](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE MOTOR ASSEMBLY

Replacement kits are available for motor assemblies. See [page 4-10](#).

Each time you service the motor assembly you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#))
- tape for mounting the sounder.

Removing the motor assembly

1. Remove the following components:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - lever return springs ([page 10-8](#)).
2. Disconnect the motor connector from the primary harness. See [Figure 10.6](#).

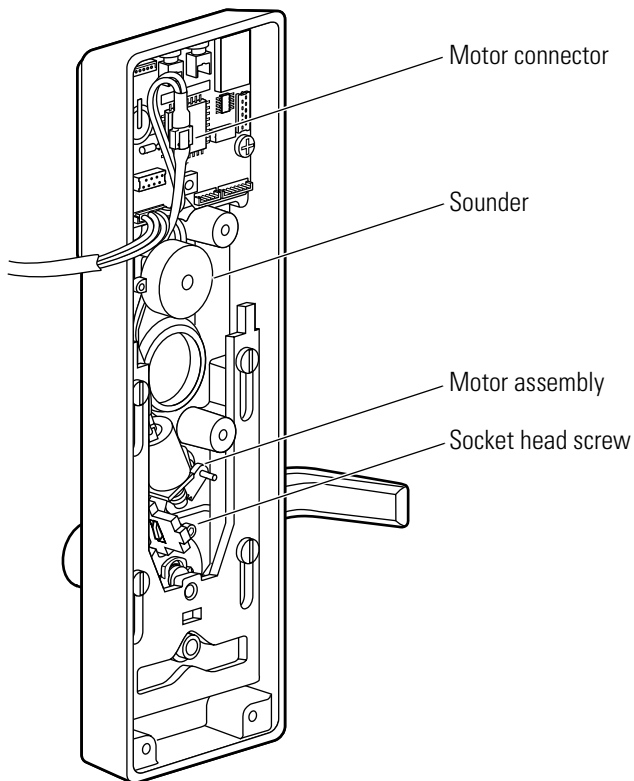


Figure 10.6 Removing the motor assembly

3. Using a screwdriver, pry the sounder off the escutcheon.
4. Using a 3/32" hex driver, remove the socket head screw and spacer. Remove the motor assembly from the escutcheon.

Reinstalling the motor assembly

1. Rotate the gear on the motor assembly until the locking lever is as close to the screw hole as possible, as shown in [Figure 10.7](#).

Note: If the locking lever does not move freely as you turn the gear, gently move the locking lever into position.

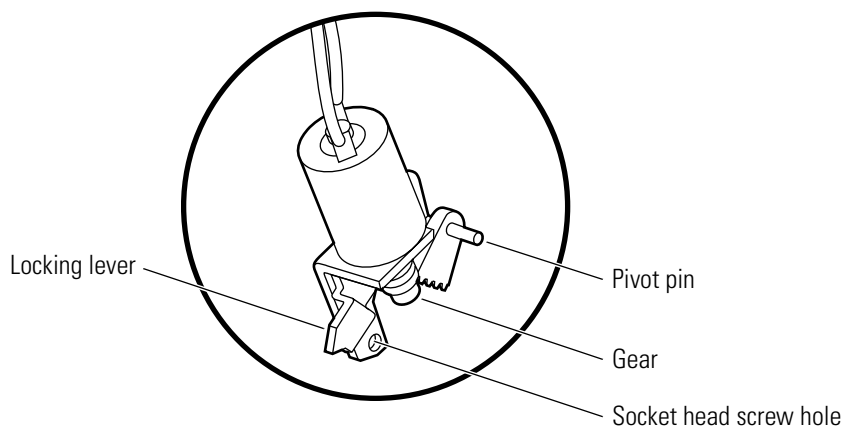


Figure 10.7 Rotating the motor assembly gear

2. Position the motor assembly in the escutcheon as shown in [Figure 10.8](#). Make sure that:
 - the locking lever is inserted through the locking plate.
 - the motor assembly pivot pin is seated in the recess in the escutcheon

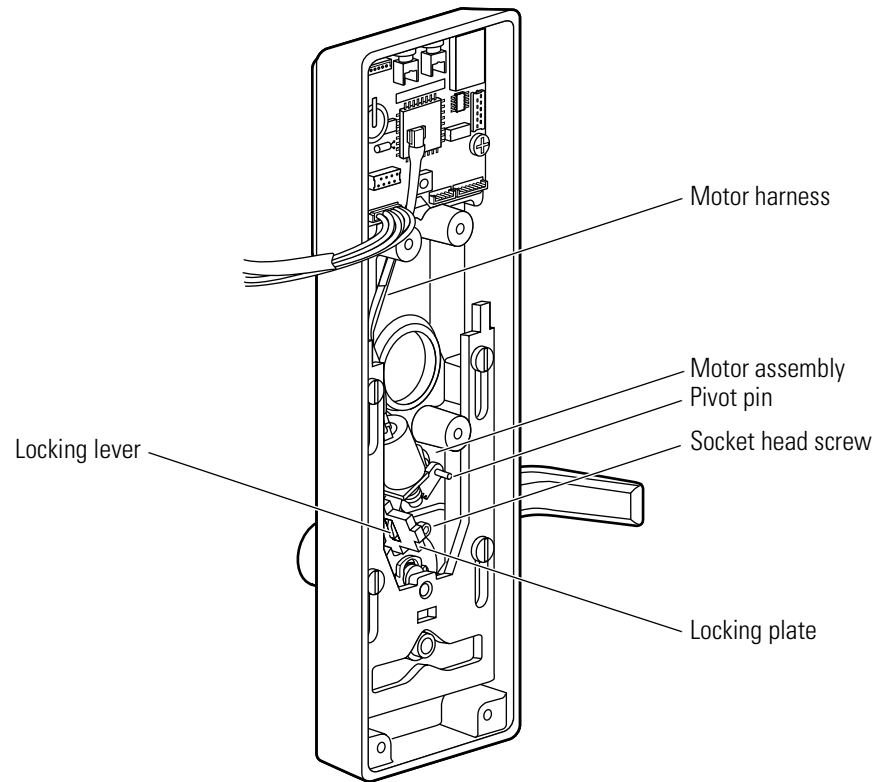


Figure 10.8 Routing the motor harness

3. Place the spacer on the socket head screw. Using a 3/32" hex driver, reinstall the socket head screw.
4. Route the motor harness into the groove in the escutcheon, as shown in [Figure 10.8](#).
5. Reinstall the sounder onto the escutcheon. See [Figure 10.9](#).

6. Connect the motor harness to the primary harness.

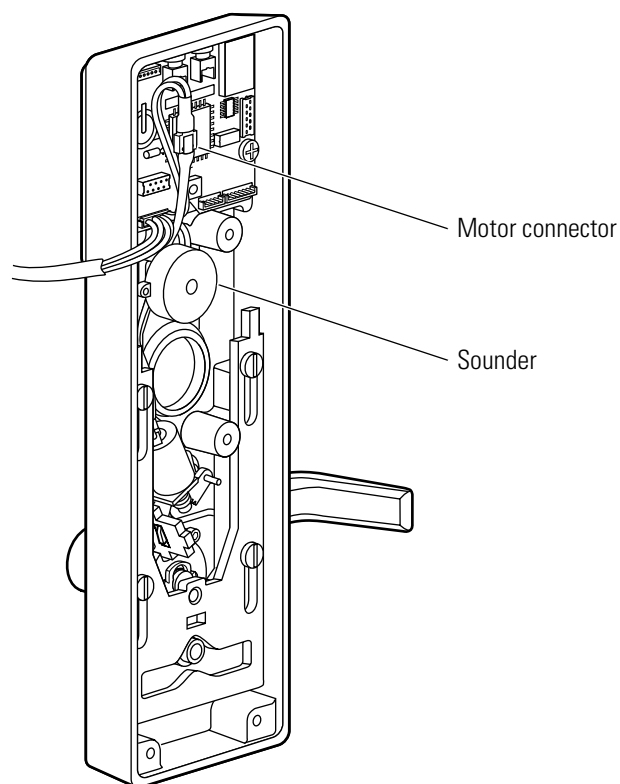


Figure 10.9 Reinstalling the motor assembly

7. Reinstall the following components:
 - lever return springs ([page 10-8](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE LOCKING PLATE

Each time you service the locking plate you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#)).

Removing the locking plate

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - lever return springs ([page 10-8](#))
 - motor assembly ([page 10-16](#)).
2. Slide the locking plate out of the escutcheon. See [Figure 10.10](#).

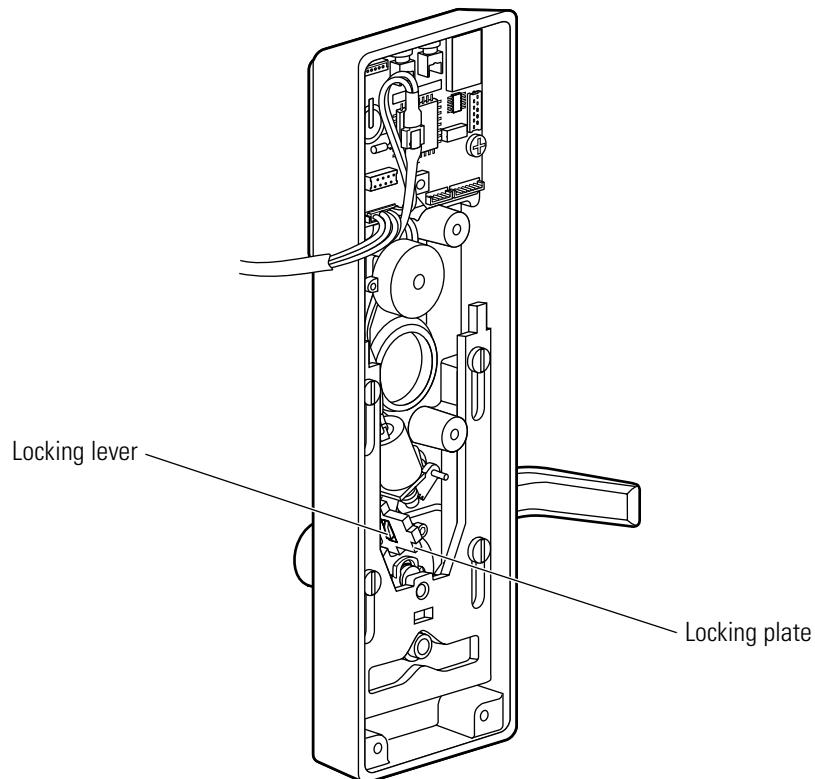


Figure 10.10 Removing and reinstalling the locking plate

Reinstalling the locking plate

1. Slide the locking plate into position as shown in [Figure 10.11](#). Make sure that the locking lever of the motor assembly is inserted through the locking plate.

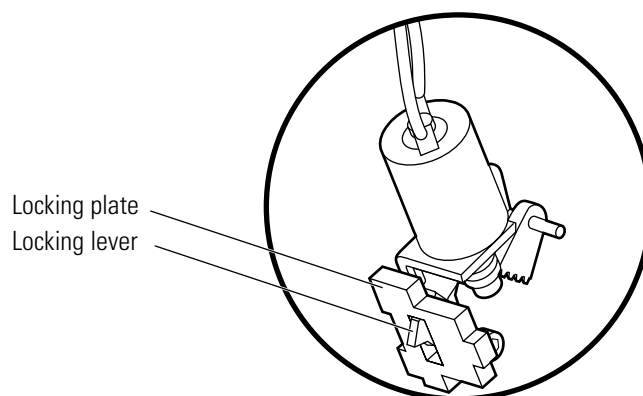


Figure 10.11 Reinstalling the locking plate

2. Reinstall the following parts:
 - motor assembly ([page 10-17](#))
 - lever return springs ([page 10-8](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE YOKE

Each time you service the yoke you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#))
- 4 shoulder screws ([page 4-10](#)).

Removing the yoke

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - lever return springs ([page 10-8](#)).
2. Unscrew the 4 shoulder screws and discard. See [Figure 10.12](#).
3. Remove the yoke from the escutcheon.

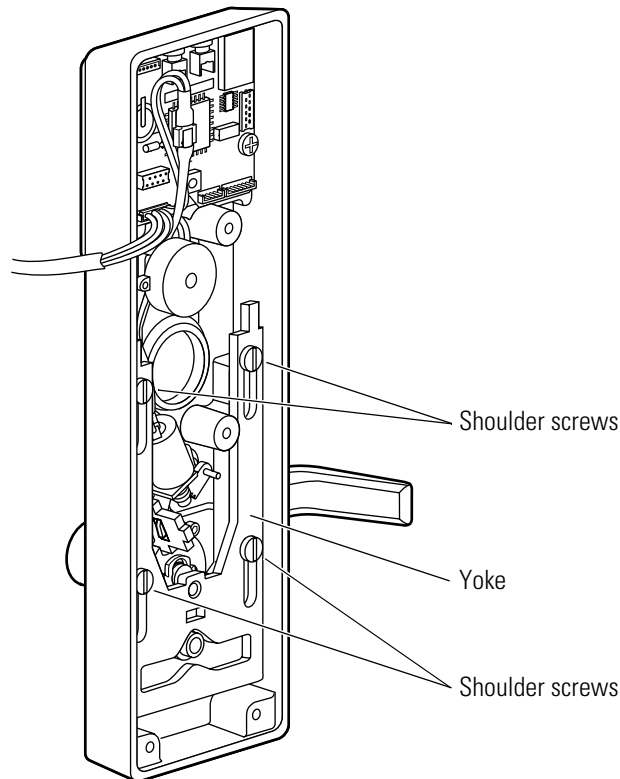


Figure 10.12 Removing and reinstalling the yoke

Reinstalling the yoke

1. Position the yoke in the escutcheon with the threaded nut down.
2. Apply Lubriplate[®] GR-132 grease or an equivalent quality petroleum around the slots on the face of the yoke.
3. Tightly secure the yoke to the escutcheon using the 4 new shoulder screws (20–25 lbs. torque). See [Figure 10.12](#).
4. Reinstall the following parts:
 - lever return springs ([page 10-8](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE BEAM AND BEAM ROLLER

Each time you service the beam or beam roller you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#))
- 4 shoulder screws ([page 4-10](#)).

Removing the beam and beam roller

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - lever return springs ([page 10-8](#))
 - yoke ([page 10-22](#)).
2. Remove the c-clip from the lever spindle. See [Figure 10.13](#).

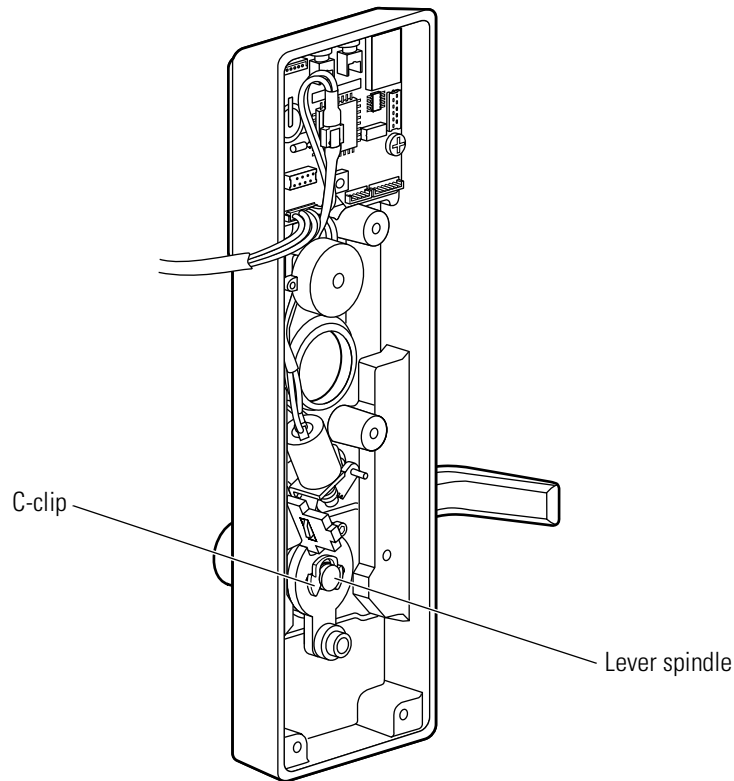


Figure 10.13 Removing and reinstalling the c-clip

3. Remove the beam and beam roller from the lever spindle. See [Figure 10.14](#).

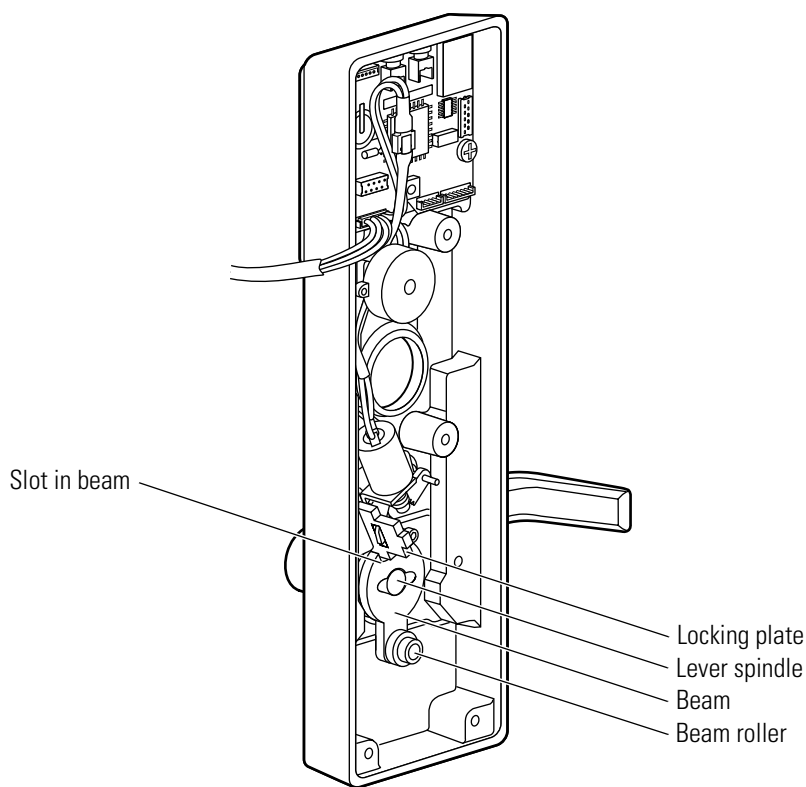


Figure 10.14 Removing and reinstalling the beam and beam roller

Reinstalling the beam and beam roller

1. Place the beam on the lever spindle so that the slot in the beam aligns with the locking plate. See [Figure 10.14](#).
2. Reinstall the c-clip onto the lever spindle. The orientation of the clip does not matter. See [Figure 10.13](#).
3. Place the beam roller on the beam.
4. Reinstall the following parts:
 - yoke ([page 10-23](#))
 - lever return springs ([page 10-8](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

SERVICING THE LEVER ASSEMBLY

Each time you service the lever assembly you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#))
- 4 shoulder screws ([page 4-10](#)).

Removing the lever assembly

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - lever return spring ([page 10-8](#))
 - yoke ([page 10-22](#))
 - beam and beam roller ([page 10-24](#)).
2. Remove the lever from the front of the escutcheon. See [Figure 10.15](#).

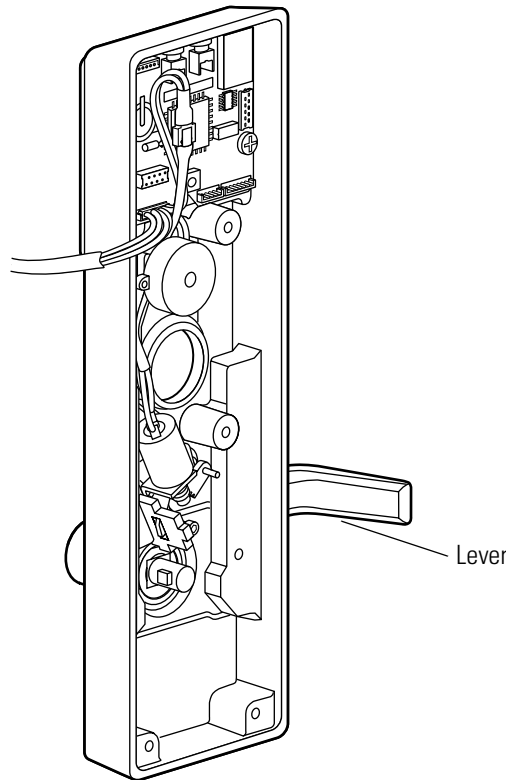


Figure 10.15 Removing and reinstalling the lever assembly

Reinstalling the lever assembly

1. Make sure that the shear pin is positioned on the lever so that the head faces the opposite direction of the lever handle. See [Figure 10.16](#).
2. Insert the lever through the escutcheon, positioning the lever so its handle will point toward the door hinges. See [Figure 10.15](#).
3. Reinstall the following parts:
 - beam and beam roller ([page 10-25](#))
 - yoke ([page 10-23](#))
 - lever return spring ([page 10-8](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon ([page 8-14](#)).

SERVICING THE SHEAR PIN

Replacements kits are available for shear pins. See [page 4-10](#).

Each time you service the shear pin you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#))
- 4 shoulder screws ([page 4-10](#)).

Removing the shear pin

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - lever return spring ([page 10-8](#))
 - yoke ([page 10-22](#))
 - beam and beam roller ([page 10-24](#))
 - lever assembly ([page 10-26](#)).
2. Remove the shear pin from the lever. See [page 10-28](#).

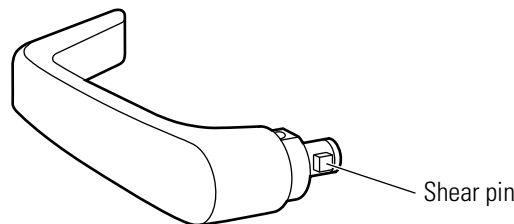


Figure 10.16 Removing and reinstalling the shear pin

**Reinstalling the
shear pin**

1. Insert the shear pin into the lever, making sure that the shear pin is positioned in the lever so that the head faces the opposite direction of the lever handle. See [Figure 10.16](#).
2. Reinstall the following parts:
 - lever assembly ([page 10-27](#))
 - beam and beam roller ([page 10-25](#))
 - yoke ([page 10-23](#))
 - lever return spring ([page 10-8](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon in the door ([page 8-14](#)).

CHANGING THE HANDING

Each time you change the handing you need to replace the following parts with new parts:

- escutcheon gasket (C64564)
- cable tie
- lift finger screw ([page 4-9](#))
- mounting plate screws ([page 4-9](#))
- 4 shoulder screws ([page 4-10](#)).

Note: When changing the handing for Precision Hardware mortise applications, you must replace the lift finger with the correct lift finger for the desired handing. To order the left-hand lift finger, use part number C64576. To order the right-hand lift finger, use part number C64568.

1. Remove the following parts:
 - escutcheon from the door ([page 8-13](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#))
 - lever return springs [page 10-8](#))
 - yoke ([page 10-22](#))
 - beam and beam roller ([page 10-24](#))
 - lever assembly ([page 10-26](#)).

2. Make sure that the shear pin is positioned in the lever so that the head faces the opposite direction of the lever handle. Then insert the lever through the escutcheon, positioning the lever so its handle will point toward the door hinges. See [Figure 10.17](#).

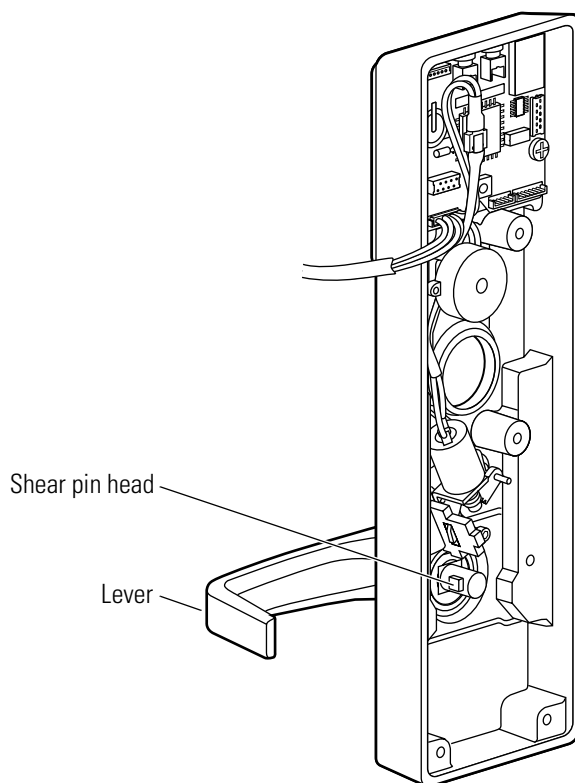


Figure 10.17 Changing the handing

3. Reinstall the following parts:
 - beam and beam roller ([page 10-25](#))
 - yoke ([page 10-23](#))
 - lever return springs ([page 10-8](#))
 - mounting plate ([page 10-7](#))
 - lift finger ([page 10-5](#))
 - escutcheon gasket ([page 10-3](#))
 - mounting standoffs ([page 10-2](#))
 - escutcheon on the door ([page 8-14](#)).

11

MAINTENANCE

This chapter includes instructions for performing basic maintenance for standard B.A.S.I.S. Locks and for EX Series Exit Hardware Trim.

If you need to...	See...
Replace the backup battery	page 11-2
Replace or upgrade the battery pack	page 11-4
Add key override sensing to standard B.A.S.I.S. Mortise Locks and B.A.S.I.S. Locks with V Series mortise cases	page 11-10
Perform diagnostics using a PDA	page 11-13

Note: When servicing components, always test that the lock works properly when you're finished.

REPLACING THE BACKUP BATTERY

Removing the backup battery

A replacement kit is available for the backup battery. See [page 4-5](#).

1. *For standard locks*, remove the inside and outside escutcheons from the door. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).

For exit hardware trim, remove the B.A.S.I.S. escutcheon from the door. See [page 8-13](#).

2. *For standard locks*, remove the gasket from the outside escutcheon to expose the control electronics board and discard the gasket.

For exit hardware trim, remove the following parts from the escutcheon to expose the control electronics board:

- mounting standoffs ([page 10-2](#))
 - escutcheon gasket ([page 10-3](#))
 - lift finger ([page 10-4](#))
 - mounting plate ([page 10-6](#)).
3. Remove the backup battery from the battery socket.

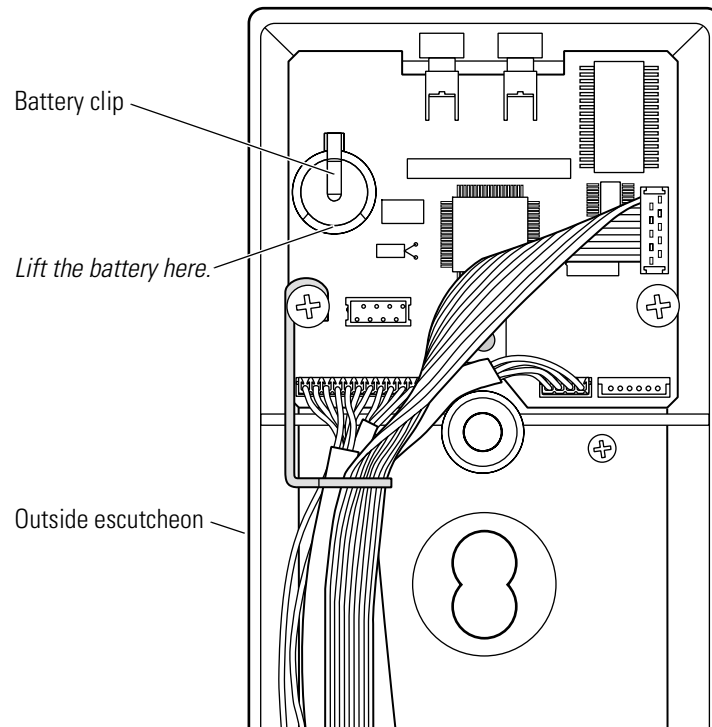


Figure 11.1 Removing the backup battery (escutcheon for standard mortise lock shown)

Reinstalling the backup battery

1. Slide the backup battery under the clip and into position in the battery socket.

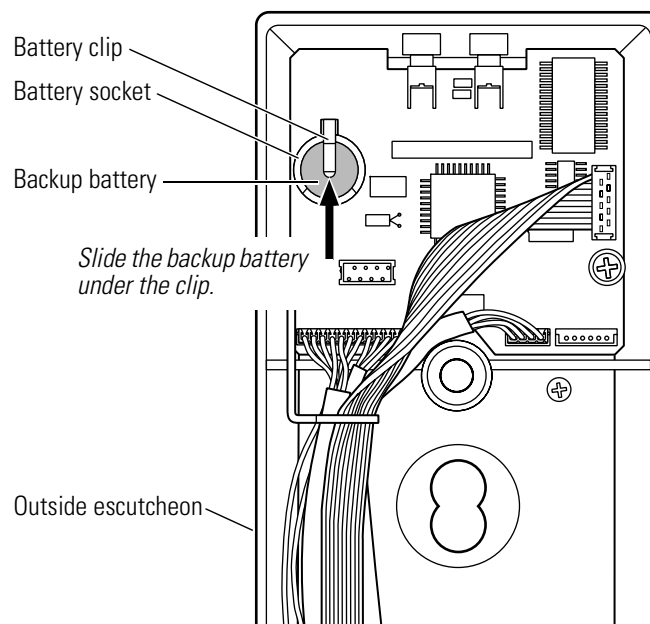


Figure 11.2 Reinstalling the backup battery (escutcheon for standard mortise lock shown)

2. *For standard locks*, peel away the protective backing from the edge of the escutcheon gasket and slide the gasket onto the upper escutcheon post. Press the gasket into place so the electronics board is covered.

For exit hardware trim, reinstall the following parts in the escutcheon:

- mounting plate ([page 10-7](#))
- lift finger ([page 10-5](#))
- escutcheon gasket ([page 10-3](#))
- mounting standoffs ([page 10-2](#)).

3. *For standard locks*, reinstall the inside and outside escutcheons on the door. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

For exit hardware trim, reinstall the escutcheon on the door. See [page 8-14](#).

REPLACING OR UPGRADING THE BATTERY PACK

To replace the four-cell battery pack for a standard B.A.S.I.S. Lock or for EX Series Exit Hardware Trim, obtain part number B60726.

An eight-cell battery pack also is available for use with standard B.A.S.I.S. Locks. To replace the eight-cell battery pack in a standard lock, obtain part number B62101. An upgrade kit is available to upgrade a standard lock with a four-cell battery pack (and brass escutcheons) to an eight-cell battery pack. See [page 4-5](#).

Removing the battery pack for a standard lock

1. Use a T15 TORX bit driver to remove the security screw from the battery door. See [Figure 11.3](#).
2. Open the battery door and remove it from the escutcheon.
3. Remove the battery pack from the battery compartment.

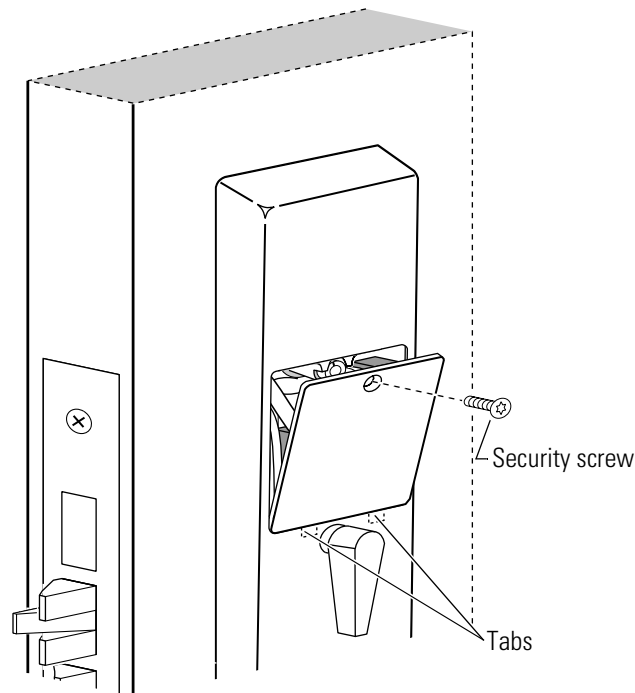


Figure 11.3 Removing the battery door (four-cell door shown)

4. Disconnect the battery pack from the battery connector on the wire harness. See [Figure 11.4](#).

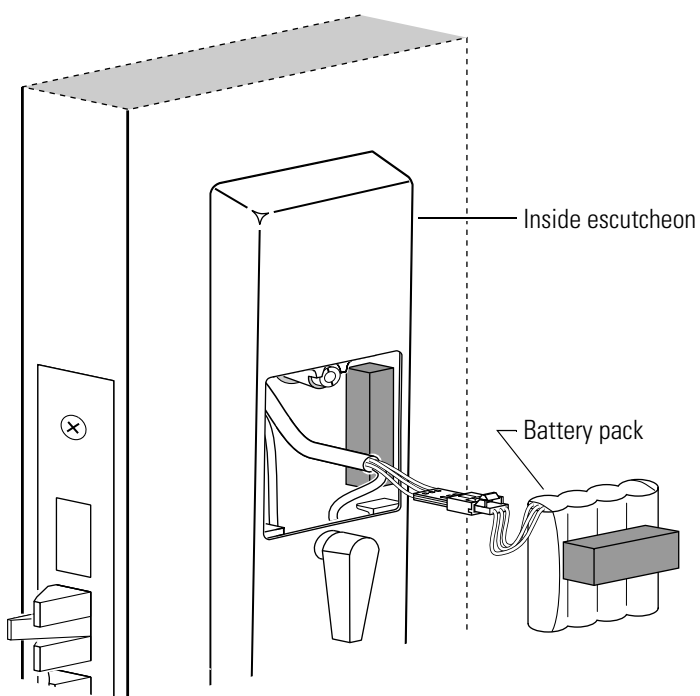


Figure 11.4 Removing the battery pack (four-cell pack shown)

Reinstalling the battery pack for a standard lock



1. Connect the battery pack to the battery connector on the wire harness inside the battery compartment. See [Figure 11.5](#).

Note: The battery connection has 3 wires and 3 pins. The wire colors are:

- red with white stripe
- white
- black with white stripe.

When connecting the battery pack, make sure:

- *there are no loose wire connections where the wires are inserted into the connectors*
- *the connectors are firmly mated.*

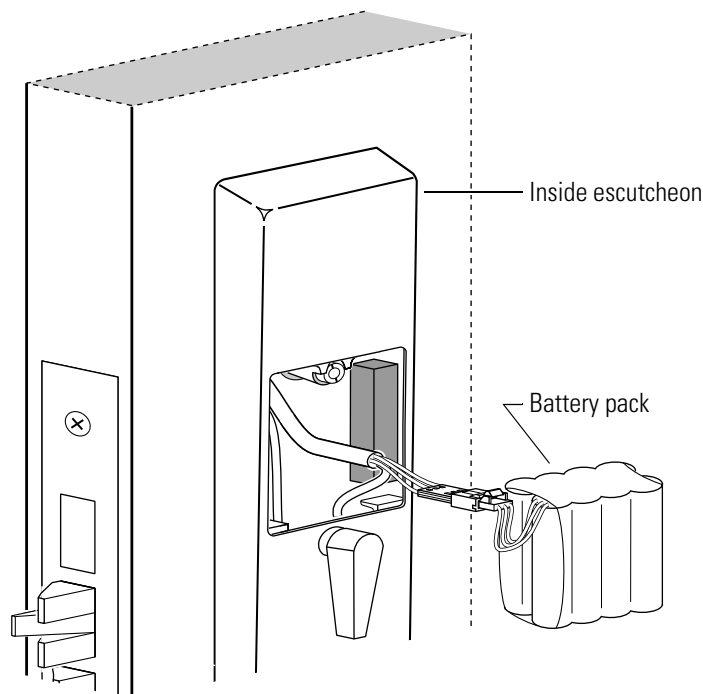


Figure 11.5 Reinstalling the battery pack (eight-cell pack shown)

2. Place the battery pack inside the battery compartment.

Note: For the four-cell battery pack, position the battery so that the foam will face the battery door.



When routing the battery wires, make sure the wires are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

3. Making sure that the battery door does not pinch any wires, insert the tabs of the battery door into its mating slots and swing the door closed.

4. Use a T15 TORX bit driver to secure the battery door with the security screw. Tighten firmly.

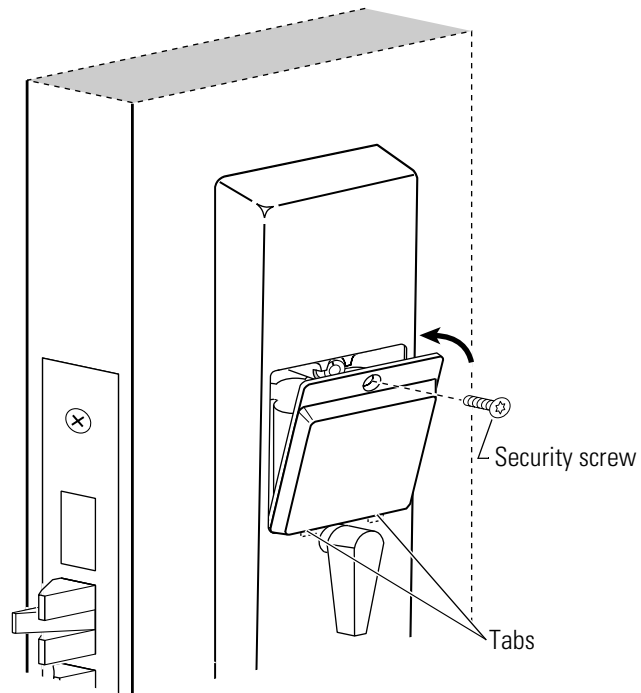


Figure 11.6 Reinstalling the battery door (eight-cell door shown)

Removing the battery pack for exit hardware trim

1. Use a T15 TORX driver to remove the security screws from the battery cover. See [Figure 11.7](#).
2. Remove the battery cover from the battery bracket.

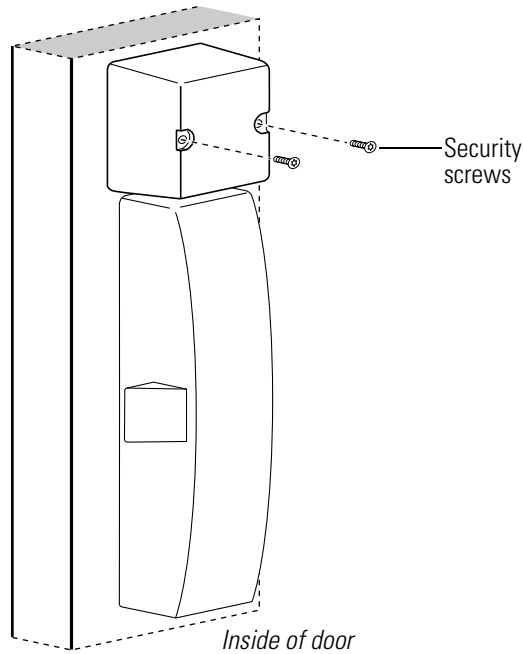


Figure 11.7 Removing and reinstalling the battery cover on the battery bracket

3. Remove the battery pack from the holder inside the battery bracket. See [Figure 11.8](#).

Note: You might need to cut a cable tie if one was used to dress the wire harness inside the battery bracket.

4. Disconnect the battery pack from the battery connector on the wire harness.

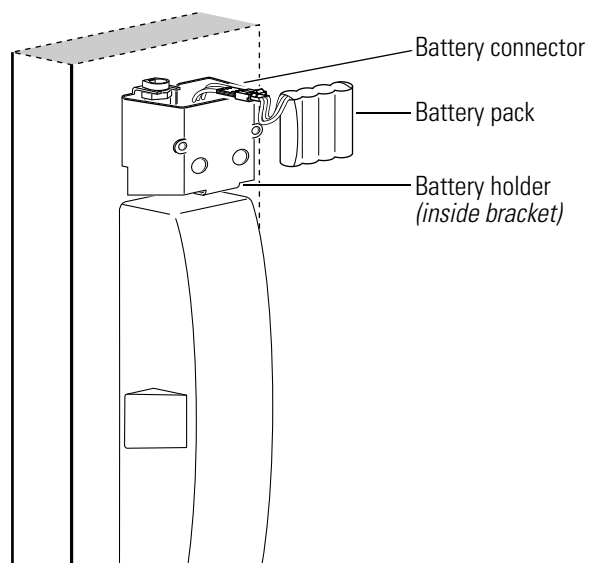


Figure 11.8 Removing and reinstalling the battery pack

Reinstalling the battery pack for exit hardware trim

Note: Replacement battery packs are shipped with foam attached, but foam is not needed for EX Series Exit Hardware Trim. Remove and discard the foam before installing the battery pack.

1. Connect the battery pack to the battery connector on the wire harness as shown in [Figure 11.8](#).

Note: The battery connector has 3 wires and 3 pins. The wire colors are:

- red with white stripe
- white
- black with white stripe.



When connecting the battery pack, make sure there are no loose wire connections where the wires are inserted into the connectors and the connectors are firmly mated.

2. Place the battery pack in the holder inside the battery bracket and dress the wire harness inside the bracket.



Make sure you do not damage the sleeving on the battery pack. Doing so may cause the batteries to be drained.

3. *If reinstalling with a surface rod device*, dress the wire harness inside the bracket to the left of the rod so that the harness will not interfere with the movement of the rods.

We recommend that you loosely coil the harness and use a cable tie to secure the coil. To avoid damaging the harness, do not put any sharp bends in it or flex it close to the connectors.



Failure to dress the wire harness away from the rod could damage the wire harness, causing the lock's electronics to not work properly.

4. Making sure that the battery cover does not pinch any wires, place the cover over the bracket.
5. Use a T15 TORX bit driver to secure the battery compartment cover with the security screws. Tighten firmly. See [Figure 11.7](#).

ADDING KEY OVERRIDE SENSING TO STANDARD B.A.S.I.S. MORTISE LOCKS

You can add key override sensing to a FV or EV function B.A.S.I.S. Mortise Lock that was:

- ordered without the key override sensing option, *or*
- upgraded from a V Series Mortise lock.

Note: For a description of lock functions, see [page 2-2](#).

Order the following parts and perform the tasks below:

- sensor harness kit, part number 1833728
- sensor module with deadbolt and key override kit (FV function), part number 1833885, *or*
- sensor module with key override kit (EV function), part number 1833927.

1. Remove the inside and outside trim from the door ([page 5-3](#)).
2. If the lock has a sensor harness, remove it. See [Figure 11.9](#). For complete instructions, see [page 9-6](#).
3. Connect the new sensor harness. For complete instructions, see [page 9-6](#).

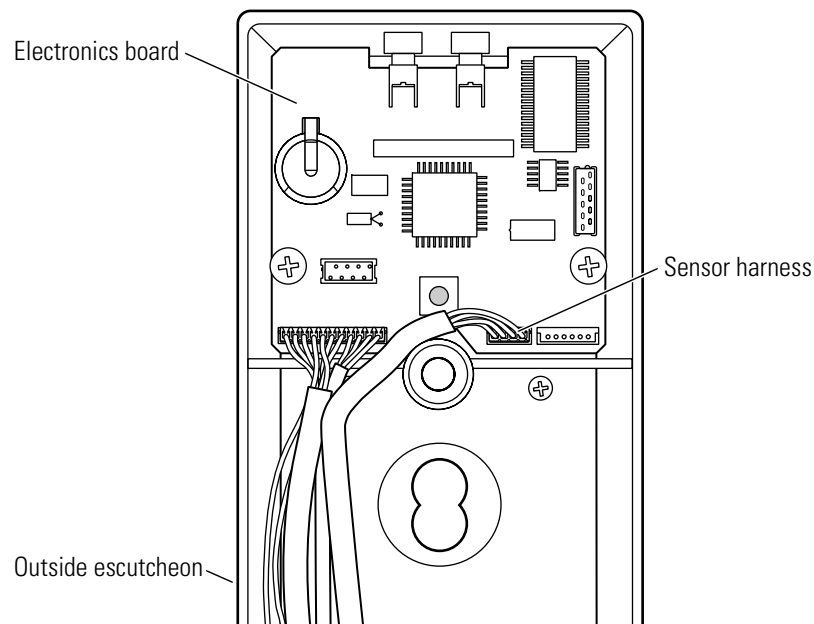


Figure 11.9 Connecting the sensor harness to the electronics board

4. Remove and open the mortise case. For complete instructions, see [page 6-2](#).
5. Remove the latch lever. See [Figure 11.11](#).

6. For *B.A.S.I.S. mortise cases*, if the mortise case has a sensor module, remove it. For complete instructions, see [page 6-16](#).

For *V Series mortise cases*, loosen the two mounting screws on the sensor switch assembly. Remove the assembly. See [Figure 11.10](#).

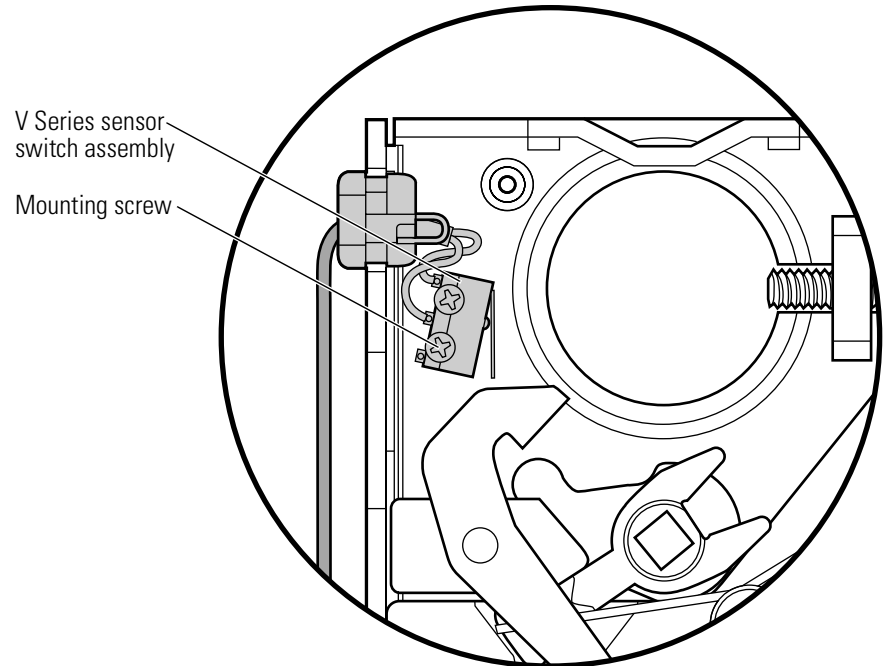


Figure 11.10 Removing the V Series sensor switch assembly

7. Install the sensor module in the mortise case. For complete instructions, see [page 6-16](#).

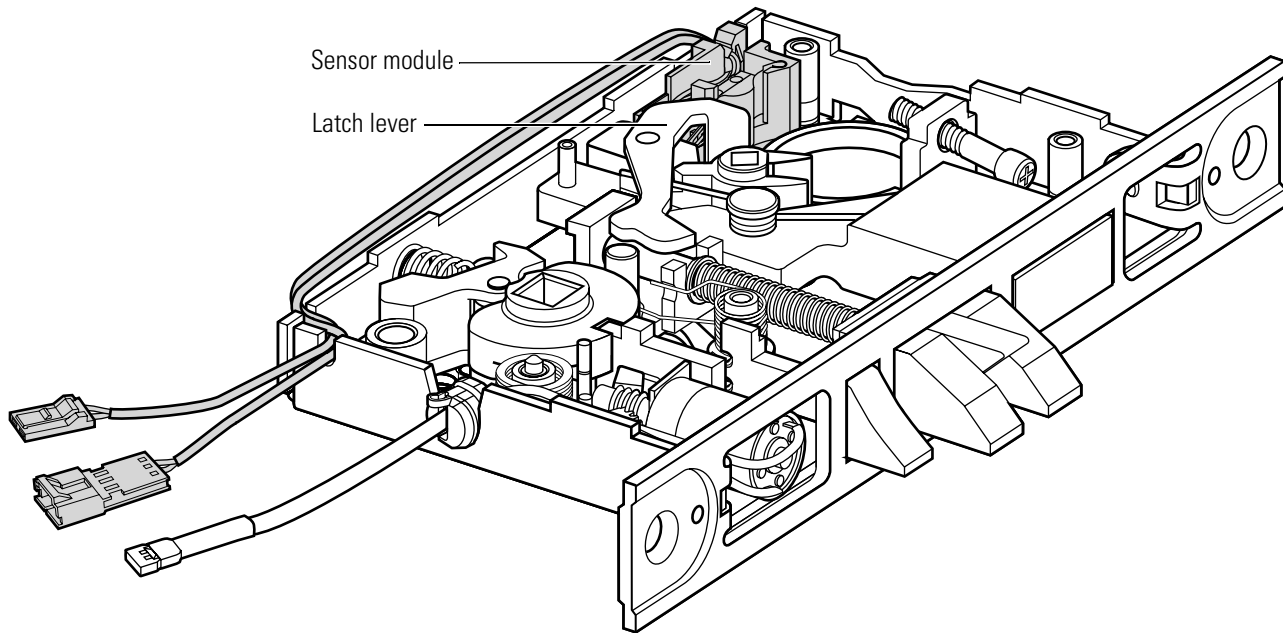


Figure 11.11 Positioning the sensor module in the mortise case (FV function, LH case shown)

8. Reinstall the latch lever.
9. Close and reinstall the mortise case ([page 6-2](#)).
10. Reinstall the inside and outside escutcheons on the door ([page 5-6](#)).

PERFORMING DIAGNOSTICS USING A PDA

Diagnostics overview You can use B.A.S.I.S. Transport to view diagnostics information for a lock. [Figure 11.12](#) shows an example of the diagnostics information provided. The table below describes each of the fields in the Diagnostics window.

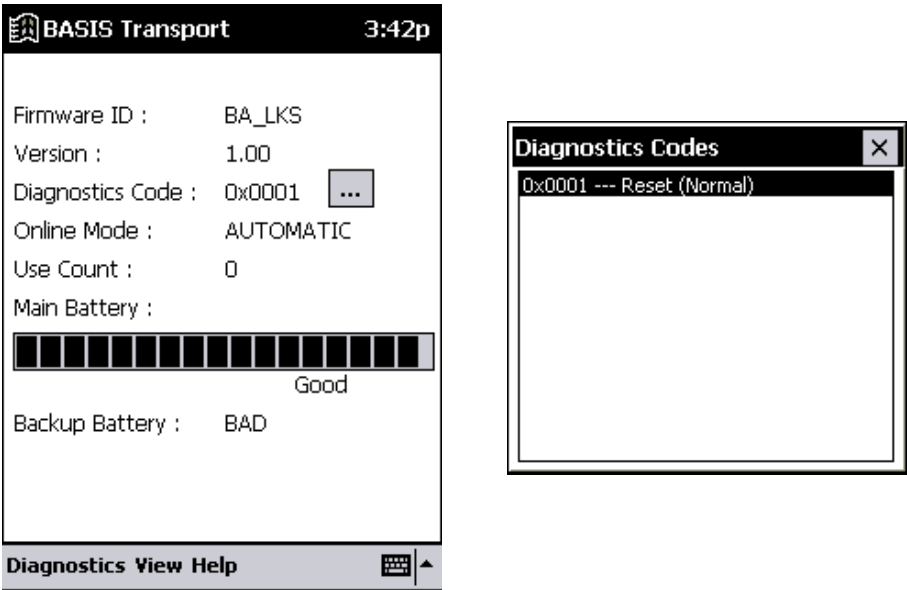


Figure 11.12 B.A.S.I.S. Transport Diagnostics window and Diagnostics Codes window

This field	Shows
Firmware ID	ID indicating the type of firmware in the lock. Technical support personnel may ask you to provide this information. The B.A.S.I.S. G firmware ID is BAGLKS. The B.A.S.I.S. V firmware ID is BA_LKS.
Version	Version number of the lock's firmware. Technical support personnel may ask you to provide this information.
Diagnostics Code	Hexadecimal number indicating firmware conditions, such as firmware resets, that have occurred at the lock since the diagnostics code was last cleared. The code 0x00 means no conditions have occurred. To view the meaning of the code, tap the more button (...). The Diagnostics Codes window shows each active diagnostics code and its meaning. See Figure 11.12 . Tap the close button (X) to close this window. Technical support personnel may ask you to provide this information. To clear the diagnostics code, see page 11-20 .

This field	Shows
Online Mode	Whether the lock is under timezone control (Automatic) or set to a specific mode, such as Locked or Unlocked. For more information, see <i>Changing a lock's online mode</i> on page 11-18 .
Use Count	Number of times access was granted since the use count was last reset. To reset the use count, see page 11-19 .
Main Battery	Current power level of the lock's battery pack. No shading in the status bar indicates an Alarm condition. The batteries are dead and must be replaced. If the shading falls within the Warning range, the power level is 10% or lower. You should replace the batteries soon. If the shading falls within the Good range, the power level is between 10% and 100%.
Backup Battery	Current power level of the lock's coin cell battery, used to back up the lock's memory if the main battery pack dies or is disconnected. If the backup battery is Bad, you should replace it. See page 11-2 .

Viewing diagnostics information

1. Connect the PDA to a lock.
 - a. Connect the serial cable to the PDA.
 - b. Connect the serial cable to the programming cable.
 - c. Connect the programming cable to the lock's communication port. The connector snaps into place.

Note 1: For standard locks, the communication port is located in the bottom of the outside escutcheon. See [Figure 11.13](#).

Note 2: For exit hardware trim, the communication port is located in the top of the battery bracket. See [Figure 11.14](#). You must remove the battery cover to access the communication port. See [page 11-2](#).

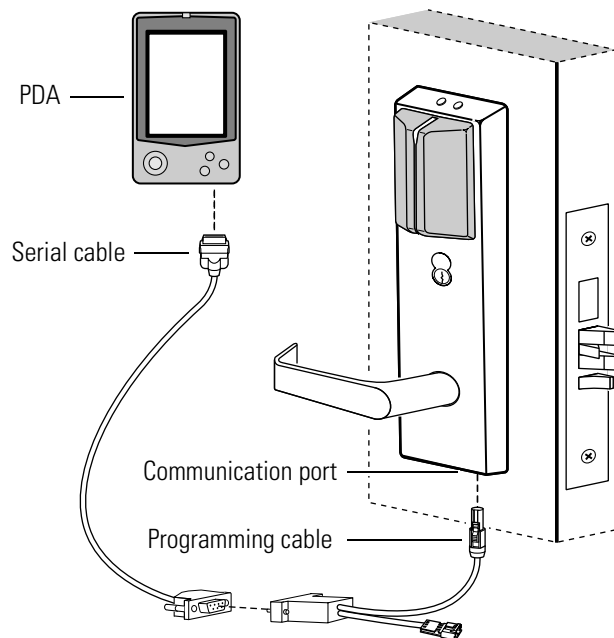


Figure 11.13 Connecting the PDA to a standard lock

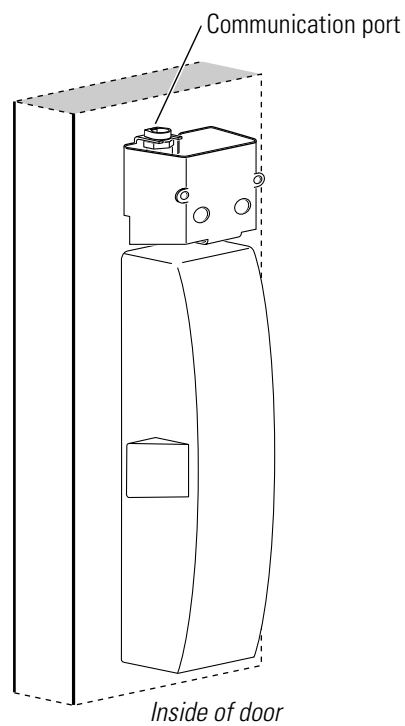


Figure 11.14 Locating the communication port for exit hardware trim

2. Start B.A.S.I.S. Transport.

On the PDA, tap Start, then Programs, then BAS, then Transport.

The Main window appears, as shown in [Figure 11.15](#).



Figure 11.15 Starting B.A.S.I.S. Transport

3. *From the B.A.S.I.S. Transport Main window on the PDA*, tap View, then Diagnostics.

The Diagnostics window appears, with the fields blank.

4. Tap Diagnostics, then Connect.

The Login window appears.

5. Enter the lock's password in the Enter Password field.

For instructions to use the PDA's virtual keyboard, see the documentation provided with the PDA.

Note: The password for a lock is the password programmed for the reader configuration's access control panel. You must enter the password exactly as it was entered in the Password field on the Offline Lock form in the Access Panels folder. Capitalization must be the same.

6. Tap OK.

A message appears stating, "Attempting login... Please swipe a card...".

7. Use the temporary operator card to activate the lock.

The diagnostics information appears on the PDA, as shown in [Figure 11.12](#) on page 11-13.

Note: To perform other activities while connected to the lock, see:

- *Changing a lock's online mode* on [page 11-18](#)
- *Unlocking a door temporarily* on [page 11-19](#)
- *Resetting the use count* on [page 11-19](#)
- *Clearing the diagnostics code* on [page 11-20](#).

8. When you have finished using diagnostics features, tap Diagnostics, then Disconnect.

The PDA closes communications with the lock.

9. To return to the Main window, tap View, then Main.
10. To disconnect the PDA from the lock, press the button on the programming cable connector and unplug the programming cable from the lock's communication port. See [Figure 11.16](#).

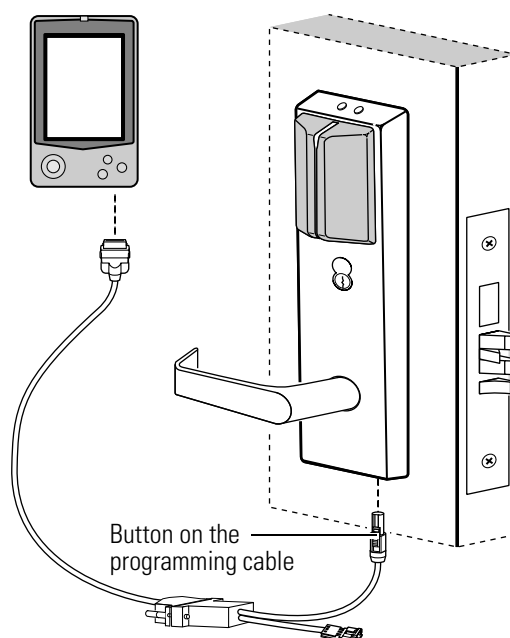


Figure 11.16 Disconnecting the programming cable from the lock

Changing a lock's online mode

When a B.A.S.I.S. V Lock's mode of operation is determined by its programming, the diagnostics information for the lock indicates that the lock's "online mode" is Automatic. In effect, the lock is under timezone control. For information about defining timezones for a lock, see the *B.A.S.I.S. 2002 System Administration User Guide*.

You can use the PDA to select a specific online mode of operation for a lock and override timezone control. The selected mode remains in effect until you restore the lock to timezone control by setting the online mode to Automatic.

For example, during an emergency you might set a lock's online mode to Unlocked so that emergency personnel can access the room. When the emergency is over, you can set the lock's online mode to Automatic to restore timezone control.

The following online modes are available:

- Automatic. The lock is under timezone control.
- Card. Any valid card in the lock's database can access the lock.
- Card and PIN. Any valid card and PIN combination programmed in the lock's database can access the lock.
- Card or PIN. Any valid card or PIN programmed in the lock's database can be used to access the lock.
- Facility Code. Any card or PIN with a valid facility code can access the lock.
- Locked. The door is locked. All cards and PINs are denied access.
- Unlocked. The door is unlocked.

To change a lock's online mode, perform these steps:

1. *If you are already viewing diagnostics information for the lock, go to step 2.*

If you are not viewing diagnostics information for the lock, perform step 1 through step 7 on [page 11-14](#).

2. *From the B.A.S.I.S. Transport Diagnostics window on the PDA, tap Diagnostics, then Set Online Mode, then the mode that you want. See [Figure 11.12](#).*

A confirmation message appears.

3. Select OK.
4. When you have finished using diagnostics features, perform step 8 through step 10 on [page 11-17](#).

Unlocking a door temporarily

You can use the PDA to unlock a door for the default duration programmed for a lock. This feature is useful when you need to access the inside of the door to replace the lock's batteries or perform other maintenance for the lock.

To unlock a door temporarily, perform these steps:

1. *If you are already viewing diagnostics information for the lock, go to step 2.*

If you are not viewing diagnostics information for the lock, perform step 1 through step 7 on [page 11-14](#).

2. *From the B.A.S.I.S. Transport Diagnostics window on the PDA ([Figure 11.12](#) on page 11-13), tap Diagnostics, then Unlock Once.*

A confirmation message appears asking, "Unlock once?"

3. Select OK.

The lock unlocks for the default duration programmed for the lock, letting you open the door.

4. When you have finished using diagnostics features, perform step 8 through step 10 on [page 11-17](#).

Resetting the use count

Every B.A.S.I.S. Lock keeps a count of times access is granted to a card or PIN since the use count was last reset. You can use this count to track how often a lock is used during a selected time frame.

To reset the use count for a lock, perform these steps:

1. *If you are already viewing diagnostics information for the lock, go to step 2.*

If you are not viewing diagnostics information for the lock, perform step 1 through step 7 on [page 11-14](#).

2. *From the B.A.S.I.S. Transport Diagnostics window on the PDA ([Figure 11.12](#) on page 11-13), tap Diagnostics, then Reset, then Use Count.*

A confirmation message appears asking, "Reset use count?"

3. Select OK.

The lock's use count is reset to 0.

4. When you have finished using diagnostics features, perform step 8 through step 10 on [page 11-17](#).

Clearing the diagnostics code

The lock's diagnostics code indicates firmware conditions, such as firmware resets, that have occurred at the lock since the diagnostics code was last cleared. For more information, see [page 11-13](#).

To clear a lock's diagnostics code, perform these steps:

1. *If you are already viewing diagnostics information for the lock, go to step 2.*

If you are not viewing diagnostics information for the lock, perform step 1 through step 7 on [page 11-14](#).

2. *From the B.A.S.I.S. Transport Diagnostics window on the PDA ([Figure 11.12](#) on page 11-13), tap Diagnostics, then Reset, then Diagnostics Code.*

A confirmation message appears asking, "Reset diagnostics code?"

3. Select OK.

The diagnostics code is reset to 0x0000.

4. When you have finished using diagnostics features, perform step 8 through step 10 on [page 11-17](#).

12

TROUBLESHOOTING

This chapter contains instructions for troubleshooting problems for standard B.A.S.I.S. Locks and EX Series Exit Hardware Trim.

If you need to...	See...
Understand the visual and audible responses	page 12-2
Enable communications without a card or PIN	page 12-3
Open a standard B.A.S.I.S. Lock with dead batteries	page 12-6
Respond to common problems	page 12-7

Note: When servicing components, always test that the lock works properly when you're finished.

VISUAL AND AUDIBLE RESPONSE QUICK REFERENCE

The table below summarizes the visual and audible responses for standard B.A.S.I.S. Locks and for EX Series Exit Hardware Trim. See [page 12-7](#) for complete troubleshooting details.

Green LED	Red LED	Sounder	Meaning
2 flashes	---	---	Prompt to enter the new PIN during PIN programming mode, or prompt to use a second card and/or PIN during two card and/or PIN control.
3 flashes	---	---	Access is granted.
3 slow flashes	---	---	Passage mode is granted.
3 slow flashes	---	3 long tones	Battery is low (warning).
Stays on	---	---	Door is in communication mode.
---	3 flashes	3 short tones	Access is denied.
---	Stays on	---	PIN programming mode is active, or the lock is busy after communication mode has ended.
3 flashes	3 flashes	3 short tones	Battery is very low (alarm).
4 flashes	4 flashes	4 short tones	Lock performed an internal reset.
---	---	3 long tones	Lock timed out and is waiting for an action.
---	---	3 short tones	Bad data was presented to the reader.

ENABLING COMMUNICATIONS WITHOUT A CARD OR PASSWORD

If the card or password is lost or unavailable, you can enable communications by pressing the password override button on the control electronics board, which is located on the inside of the outside escutcheon. This procedure will not affect the user database, history, or lock configuration.



Caution

Before you handle the control electronics board or any component on the control electronics board, make sure that you are properly grounded using an electrostatic discharge (ESD) protection kit. Touching the control electronics board without proper grounding can damage sensitive electronic components—even if you don't notice any static discharge.

1. *For standard locks*, remove the inside and outside escutcheons from the door. For mortise lock instructions, see [page 5-3](#). For cylindrical lock instructions, see [page 7-5](#).

For exit hardware trim, remove the B.A.S.I.S. escutcheon from the door. See [page 8-13](#).

2. *For standard locks*, peel back the lower edge of the gasket from the outside escutcheon to expose the lower portion of the control electronics board.

For exit hardware trim, remove the following parts from the escutcheon to expose the control electronics board:

- mounting standoffs ([page 10-2](#))
- escutcheon gasket ([page 10-3](#))
- lift finger ([page 10-4](#))
- mounting plate ([page 10-6](#)).

3. Connect the PDA to the lock:
 - a. Connect the serial cable to the PDA.
 - b. Connect the serial cable to the programming cable.
 - c. Connect the programming cable to the lock's communication port. The connector snaps into place.

Note 1: For standard locks, the communication port is located in the bottom of the outside escutcheon.

Note 2: When the B.A.S.I.S. escutcheon for exit hardware trim has been removed from the door, the communication port is located on the end of the primary harness.

4. Start B.A.S.I.S. Transport:
 - a. *On the PDA*, tap Start, then Programs, then BAS, then Transport.
 - b. *From the B.A.S.I.S. Transport Main window on the PDA*, tap View, then Transport.

The Transport window shows the Panel/Reader Tree.

Note: When transferring history records from the door, you do not need to highlight a reader in the tree.

5. Using B.A.S.I.S. Transport, select the communications activity you want to perform.
6. When you see the login window, press the password override button on the electronics board.

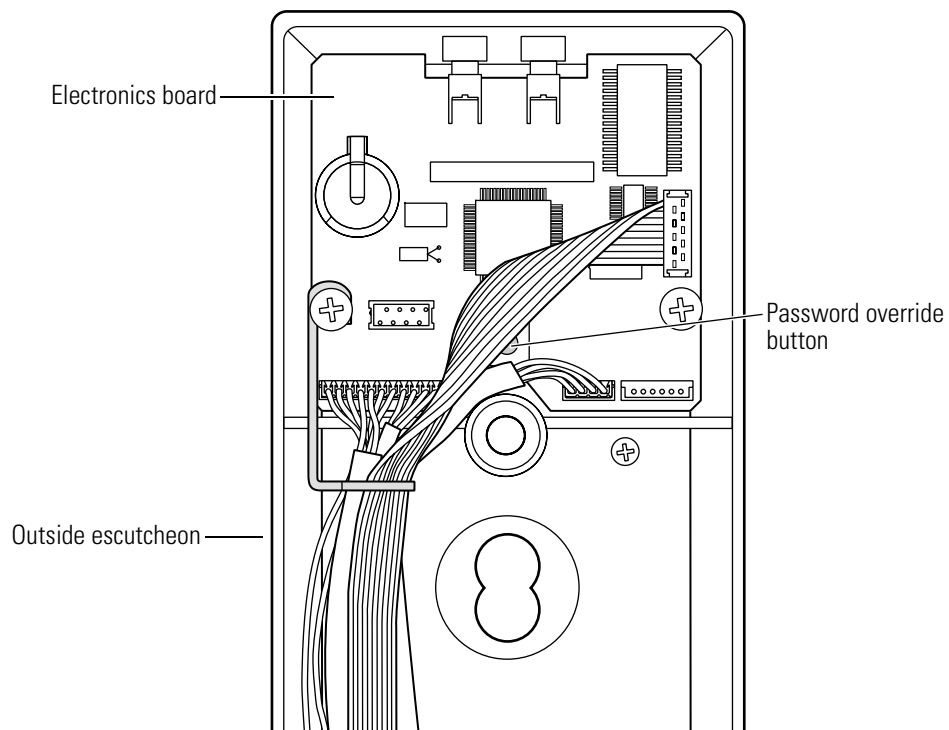


Figure 12.1 Enabling communications with the password override button (escutcheon for standard mortise lock shown)

7. When you have finished performing communications activities, disconnect the PDA from the lock. Press the button on the programming cable connector and unplug the programming cable from the lock's communication port.

8. *For standard locks*, press the escutcheon gasket into place so the electronics board is covered.

For exit hardware trim, reinstall the following parts in the escutcheon:

- mounting plate ([page 10-7](#))
- lift finger ([page 10-5](#))
- escutcheon gasket ([page 10-3](#))
- mounting standoffs ([page 10-2](#)).

9. *For standard locks*, reinstall the inside and outside escutcheons on the door. For mortise lock instructions, see [page 5-6](#). For cylindrical lock instructions, see [page 7-8](#).

For exit hardware trim, reinstall the escutcheon on the door. See [page 8-14](#).

OPENING A STANDARD B.A.S.I.S. LOCK WITH DEAD BATTERIES

If you were not able to replace the batteries before they died in a standard B.A.S.I.S. Lock and you cannot unlock the lock, you can provide temporary power to the lock and use a valid card or PIN to unlock it. Then, you can access the lock's battery compartment to replace the battery pack.

1. To provide temporary power to the lock, connect the programming cable, with an external battery pack connected, to the lock's communication port. Although the serial cable and PDA do not need to be connected to the programming cable, it will not cause a problem if they are connected.

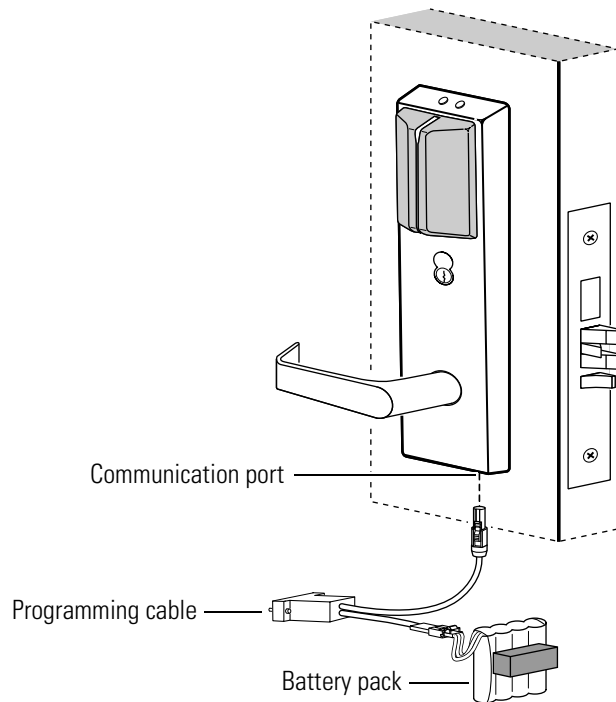


Figure 12.2 Connecting the programming cable to the lock

2. To unlock the lock, use a valid operating card for the lock.
3. Replace the lock's battery pack. See [page 11-4](#).
4. Disconnect the programming cable from the lock.

RESPONDING TO PROBLEMS

The table below summarizes the possible causes for certain problems based on visible and audible signals (LEDs, sounder, and whether access is granted or denied). The causes of failure are listed in the order of likelihood. (The most likely cause is first, and so forth.)

Another helpful tool to use when troubleshooting a standard B.A.S.I.S. Lock or EX Series Exit Hardware Trim is the lock's history of events. Appendix A lists the types of events recorded in the history and their meaning. For information about retrieving and viewing history records, see the *B.A.S.I.S. Transport User's Guide* (T63307).

See [page 12-2](#) for a visual and audible response quick reference.

LEDs	Sounder	Access	Possible causes include...	You should...
Green flashes	---	Granted	Condition is normal for a valid card or PIN.	
---	3 short tones	Denied	<ul style="list-style-type: none"> a. Card was used, but not removed soon enough. b. Variable card format error occurred. 	<ul style="list-style-type: none"> a. Try using the card again. b. Check the variable card format.
Red flashes	3 short tones	Denied	<ul style="list-style-type: none"> a. Card number is invalid. b. Timezone is invalid. c. <i>For a standard mortise lock</i>, card does not have the deadbolt override privilege. d. Card is damaged. e. Facility code is invalid. f. Card has expired. g. Door may be in a lock down mode. 	<ul style="list-style-type: none"> a. Check the access privileges. b. Check the access privileges. c. Either program the deadbolt override privilege for the card, or instruct the user that his or her card cannot access the lock when the deadbolt is thrown. d. Re-encode the operating card. It may be possible to re-encode a damaged card. If not, issue a new operating card. e. Program the correct facility code. f. Re-program the lock or re-encode the card with a valid expiration date. g. Check to see if a door lock mode is active by using the PDA to review the door mode. If desired, set the online mode to Automatic. See page 11-18.

LEDs	Sounder	Access	Possible causes include...	You should...
---	---	Denied	<ul style="list-style-type: none"> a. Card reader needs cleaning. b. Primary wire harness is damaged or disconnected. c. Foreign object is inserted in the card reader. d. Battery pack is faulty. e. Firmware has locked up due to incorrect sequence when connecting the battery pack. f. Primary wire harness is disconnected from the motor or is damaged. g. Smart card reader is not properly aligned in the bezel on the inside of the reader. (Smart card present switch is stuck.) h. For smart card readers, conformal coating has been applied to the flex cable connector. i. Firmware is out-of-date or faulty. j. Control electronics board is malfunctioning. k. Control electronics board failed for an unknown reason. Note: If the above condition exists, the key override may be used to access the door. If the door has no key override, call your local BEST representative. l. Reader has failed. 	<ul style="list-style-type: none"> a. Clean the card reader head using a cleaning card for magnetic stripe card readers. b. Check the primary wire harness. If it's damaged, replace the wire harness. For standard locks, see page 9-7. For exit hardware trim, see page 10-9. c. Remove the object or replace the reader. d. Check the battery pack. Replace it, if necessary. See page 11-4. e. Contact your local BEST Representative. f. Check the primary wire harness. For standard locks, see page 9-7. For exit hardware trim, see page 10-9. g. Pop the smart card reader into place in the bezel. For standard locks, see page 9-24. For exit hardware trim, see page 10-14. h. Remove the flex cable from the connector and apply electrical contact cleaner onto the connector. Reinstall the flex cable. For standard locks, see page 9-24. For exit hardware trim, see page 10-14. i. Update the firmware. Contact your local BEST Representative. j. Replace the control electronics board. For standard locks, see page 9-10. For exit hardware trim, see page 10-10. k. Replace the control electronics board. For standard locks, see page 9-10. For exit hardware trim, see page 10-10. l. Replace the reader. For standard locks, see page 9-19. For exit hardware trim, see page 10-13.
Green flashes	---	Denied	<ul style="list-style-type: none"> a. <i>For a standard mortise lock, self-aligning trim is overtightened.</i> 	<ul style="list-style-type: none"> a. Loosen the escutcheon mounting screws. See page 5-3.

LEDs	Sounder	Access	Possible causes include...	You should...
			<ul style="list-style-type: none"> b. <i>For a standard mortise lock</i>, mounting plates are overtightened. c. <i>For a standard cylindrical lock</i>, chassis type is set to "mortise". d. <i>For a standard cylindrical lock</i>, the spindle may be faulty. e. <i>For exit hardware trim</i>, the locking plate is not properly positioned. f. The trim or latchbolt is not properly aligned. 	<ul style="list-style-type: none"> b. Loosen the mounting plates. See page 5-13. c. Change the programming setting for chassis type to cylindrical. d. If you can hear the chassis cycling, replace the chassis. Contact your local BEST Representative for assistance. e. Reposition the locking plate. See page 10-20. f. Realign the trim or latchbolt.
Green flashes	3 long tones	Granted after delay	Battery is low (warning).	Change the battery pack. See page 11-4 .
Red & green flashes	3 short tones	Denied	Battery is very low (alarm).	Change the battery pack. See page 11-4 .
Green stays on	---	Denied	Communication card was used.	Wait 1 minute for the communications mode to automatically expire, or use any card again to turn off communications.
Red flashes	---	Denied	<ul style="list-style-type: none"> a. Sounder is damaged. b. Control electronics board is malfunctioning. c. Primary harness connection is damaged or loose. 	<ul style="list-style-type: none"> a. Replace the reader. For standard locks, see page 9-19. For exit hardware trim, see page 10-13. b. Replace the control electronics board. For standard locks, see page 9-10. For exit hardware trim, see page 10-10. c. Check the primary harness and replace the harness, if necessary. For standard locks, see page 9-7. For exit hardware trim, see page 10-9.
---	---	Granted	<ul style="list-style-type: none"> a. LEDs are damaged. b. Control electronics board is malfunctioning. c. Smart card flex cable is broken. 	<ul style="list-style-type: none"> a. Replace the reader. For standard locks, see page 9-19. For exit hardware trim, see page 10-13. b. Replace the control electronics board. For standard locks, see page 9-10. For exit hardware trim, see page 10-10. c. Replace the smart card reader. For standard locks, see page 9-22. For exit hardware trim, see page 10-14.

LEDs	Sounder	Access	Possible causes include...	You should...
Green or Red flashes	---	Denied	Smart card flex cable is hitting against the LED.	Install protective tape on the flex cable. For standard locks, see page 9-22 . For exit hardware trim, see page 10-14 .
Red & green flashes repeating	---	Denied	Door failed a diagnostic self-test.	Replace the control electronics. For standard locks, see page 9-10 . For exit hardware trim, see page 10-10 .

The table below summarizes the possible causes for certain problems. The causes of failure are listed in the order of likelihood. (The most likely cause is first, and so forth.)

You notice...	Possible causes include...	You should...
Door is always unlocked.	<ul style="list-style-type: none"> a. Door may be in a unlocked mode or passage mode. Setting the door mode to “Unlocked” means that anyone can access the door in this condition. b. Door may be in a door unlock timezone. 	<ul style="list-style-type: none"> a. Use the PDA to check the online mode. If desired, change the online mode. See page 11-18. b. Use the PDA to check whether the online mode is “Automatic” (timezone control). See page 11-18. Use B.A.S.I.S. to check the reader configuration for the door.
<i>For exit hardware trim, the lever is dangling.</i>	<ul style="list-style-type: none"> a. Shear pin has been broken. b. Lever is not properly installed. 	<ul style="list-style-type: none"> a. Replace the shear pin. See page 10-28. b. Reinstall the lever. See page 10-26.
Cannot plug the PDA connector into the door’s communications port.	<ul style="list-style-type: none"> a. Foreign object is jammed into the communications port. b. Communications port is damaged. c. Programming cable is damaged. 	<ul style="list-style-type: none"> a. Remove the object from the communications port. b. Replace the primary wire harness. For standard locks, see page 9-7. For exit hardware trim, see page 10-9. c. Replace the programming cable. See page 9-5.
Cannot swipe a card.	Foreign object is jammed in the card reader.	<p>Push the object down through the card reader if possible. Unless the object is preventing the card from being swiped, there is no reason to remove the trim.</p> <p>If the object will not push through the card reader, remove the trim and remove the foreign object, and/or replace the reader.</p> <p>For standard locks, see page 9-19. For exit hardware trim, see page 10-13.</p> <p>Note: Use a valid card to verify that the card reader head is not damaged.</p>

<p>When communicating between a PC or PDA, or PDA and lock or exit hardware trim you see a message that communications has failed.</p>	<ul style="list-style-type: none"> a. Communications cable(s) is (are) not connected properly. b. The primary wire harness is damaged or disconnected. c. Communications cable or port is faulty or damaged. 	<ul style="list-style-type: none"> a. Check all cable connections. b. Check the primary wire harness. If it's damaged, replace the wire harness. For standard locks, see page 9-10. For exit hardware trim, see page 10-10. c. Try communicating with another device or PC. If communications works, the communication cable and serial cables are not the problem. If communications does not work, replace the cable(s).
----------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

A

LOCK HISTORY EVENT TYPES

The following table describes in alphabetical order each history event that can be recorded at a B.A.S.I.S. Lock.

Lock history event types

Event	Description
ACCESS GRANTED	The lock granted access to the indicated card or PIN.
ACCESS GRANTED ON FACILITY CODE	The lock granted access to the indicated card during a Facility Code Only mode.
DENIED INVALID TOKEN (BADGE)	The lock denied access to the indicated card and/or PIN because the card and/or PIN was not valid.
DENIED INVALID ISSUE CODE	The lock denied access to the indicated card because the card's issue number was not valid.
DENIED LOW BATTERY	The lock denied access to the indicated card or PIN because the lock's battery was very low.
DENIED INVALID CARD FORMAT	The lock denied access to the card because the format was not valid.
DENIED COUNT EXCEEDED	The lock denied access to the indicated card or PIN because the number of invalid cards or PINs presented to the lock exceeded the programmed threshold.
DENIED INVALID FACILITY CODE	The lock denied access to the card because the card's facility code was incorrect.
DENIED INACTIVE TOKEN	The lock denied access to the indicated card or PIN because the card or PIN is not active in the database.
DENIED USE LIMIT EXCEEDED	The lock denied access to the indicated card because the card exceeded the programmed use limit.
DENIED INVALID ACCESS LEVEL	The lock denied access to the indicated card because the card was not assigned the access level necessary to unlock the lock.
DENIED TIMEOUT EXCEEDED-NO SECOND CARD	The lock denied access to the indicated card during two card control mode because the second card was not presented within the allocated time period.
DENIED INVALID PIN	The lock denied access to the indicated PIN because the PIN was not valid.
MODE FACILITY CODE	The lock's mode changed to facility code only.
MODE CARD ONLY	The lock's mode changed to card only.
MODE FIRST CARD UNLOCKED	The lock's mode changed to first card unlocked.
MODE UNLOCKED	The lock's mode changed to unlocked.
MODE LOCKED	The lock's mode changed to locked.
MODE CARD OR PIN	The lock's mode changed to card or PIN.
MODE CARD AND PIN	The lock's mode changed to card and PIN.

Event	Description
READER RESET	The lock's reader was reset.
KEY OVERRIDE	The lock was unlocked using the key override.
TRANSFER, PDA TO LOCK	Using B.A.S.I.S. Transport, settings were transferred from the PDA to the lock.
TRANSFER, HISTORY	Using B.A.S.I.S. Transport, the lock's history records were retrieved from the lock to the PDA.
TRANSFER, DIAGNOSTICS	Using B.A.S.I.S. Transport, the lock's diagnostics information was retrieved from the lock to the PDA.

B

INSTALLATION INSTRUCTIONS

The following pages contain the *Installation Instructions for B.A.S.I.S. Mortise Locks* (with brass escutcheons), the *Installation Instructions for B.A.S.I.S. Cylindrical Locks* (with brass escutcheons), and the Installation Instructions for B.A.S.I.S. EX Series Exit Hardware Trim.



Installation Instructions for B.A.S.I.S. Mortise Locks

Planning the installation

Contents

These installation instructions describe how to install your B.A.S.I.S.® G (35HG) or B.A.S.I.S. V (35HBV) Mortise Lock. The following topics are covered.[†]

Planning the installation 1
Preparing the door and door jamb 2
Installing the lock 5
Completing the installation 11

Site survey

Use the following survey to record information about the installation site.

Lock information

Lock function:

- ☐ EV–Latch with key override
 - ☐ With key override sensing[‡]
- ☐ FV–Deadbolt with key override
 - ☐ With key override sensing[‡]
- ☐ LV–Deadbolt without key override
- ☐ NV–Latch without key override

Door information

Door handing and bevel:

- ☐ Left hand (LH)
- ☐ Left hand, reverse bevel (LHRB)
- ☐ Right hand (RH)
- ☐ Right hand, reverse bevel (RHRB)

Door thickness: _____ inches (1 3/4" to 3")

Environment information

Ambient temperature:

- ☐ Is within specifications. See the tables below.

This product meets the following Locked Door Outdoor test requirements for ANSI/BHMA 156.25:

Side of door	Range
Inside	+66°F to +74°F (+19°C to +23°C)
Outside	–31°F to +151°F (–35°C to +66°C)

[†] The Best Access Systems logo and B.A.S.I.S. are registered trademarks of Best Lock Corporation.

[‡] Key override sensing is optional for 35HG and standard for 35HBV.

This product meets the following Full Indoor test requirements for ANSI/BHMA 156.25:

Side of door	Range
Inside and outside	+32°F to +120°F (0°C to +42°C)

Components checklist

Use the following checklist to make sure that you have the items necessary to install your B.A.S.I.S. Mortise Lock.

Components provided in the box:

- ☐ Mortise case assembly
- ☐ Mortise case faceplate
- ☐ Inside escutcheon assembly
- ☐ Battery compartment door
- ☐ Battery pack
- ☐ Outside escutcheon assembly
- ☐ Inside and outside mounting plates
- ☐ Inside lever
- ☐ Outside lever & spindle assembly
- ☐ Cylinder assembly (for EV and FV functions only)
- ☐ Screw package
- ☐ Plastic bushing package
- ☐ Trim hole insert package
- ☐ Escutcheon screw package
- ☐ Strike
- ☐ Strike box
- ☐ Bar code ID sticker (for your records)
- ☐ Temporary operator card
- ☐ Installation template and instructions

Other components:

- ☐ Core (for EV and FV functions only)
- ☐ Control key (for EV and FV functions only)

Special tools checklist

Use the following checklist to make sure that you have the special tools necessary to install your B.A.S.I.S. Mortise Lock.

- ☐ T15 TORX® bit driver^{††}
- ☐ ED211 cylinder wrench (for EV and FV functions only)

^{††} TORX is a registered trademark of the Camcar Division of Textron.

Preparing the door and door jamb

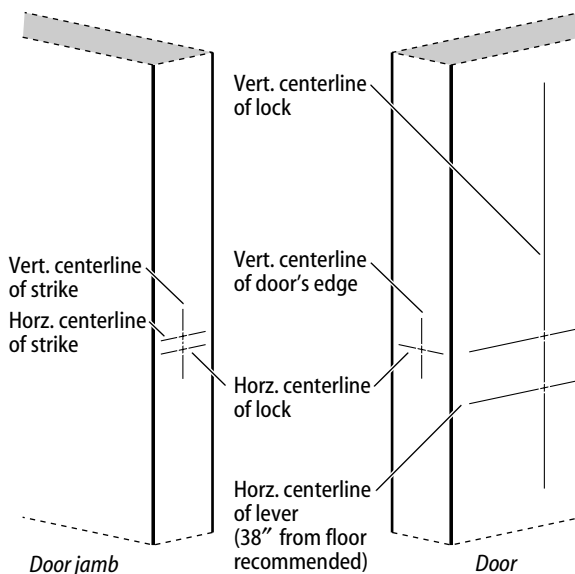


Figure 1 Marking the centerlines

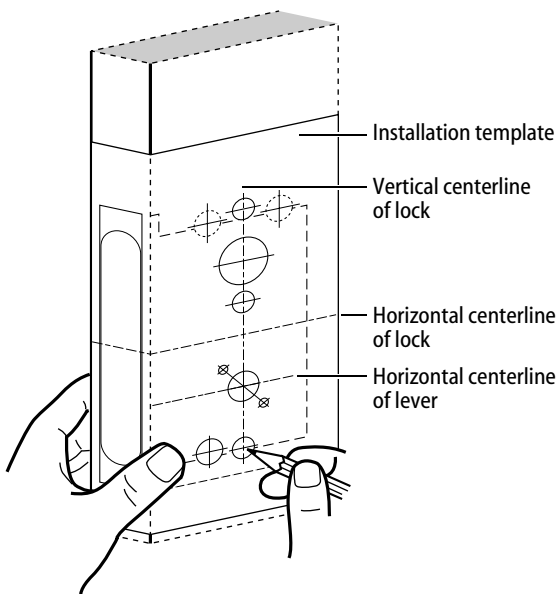


Figure 2 Positioning the template

1 Mark centerlines

Note: If the door is a fabricated hollow metal door, determine whether it is properly reinforced to support the lock. If door reinforcement is not adequate, consult the door manufacturer for information on proper reinforcement. For dimensions for preparing metal doors, see the G03 Template—Installation Specifications for 35HG and 35HBV Mortise Locks.

- 1 On the door, measure and mark the height of the centerline of the lever from the floor (38" recommended). On both sides of the door, on the door's edge, and on the door jamb, mark the horizontal centerline of the lock 1 1/2" above the centerline of the lever.

Note: If the door is a LH or RH door, mark the inside of the door. If the door is a LHRB or RHRB door, mark the outside of the door.

- 2 On the door's edge and door jamb, mark the vertical centerline of the lock.
- 3 Measure and mark the backset (2 3/4" standard) from the vertical centerline on the door's edge. On both sides of the door, mark the vertical centerline of the lock.
- 4 On the door jamb, mark the horizontal centerline of the strike 3/8" above the horizontal centerline of the lock.

2 Position template and mark drill points

- 1 Cut the G06 Template—Installation Template for 35HG and 35HBV Mortise Locks along the dashed lines and align the horizontal and vertical arrows with the marked centerlines on the door.
- 2 Tape the template to the door.
- 3 Center punch the necessary drill points. Refer to the instructions on the template.

Preparing the door and door jamb

3 Mortise for lock case and faceplate

- 1 Mortise the edge of the door for the lock case.
Note: *The mortise cavity depth of 4 5/8" includes clearance for wiring behind the mortise case.*
- 2 Insert the lock in the mortise cavity.
- 3 Mark the outline of the lock faceplate.
- 4 Remove the lock. Mortise to fit the faceplate.

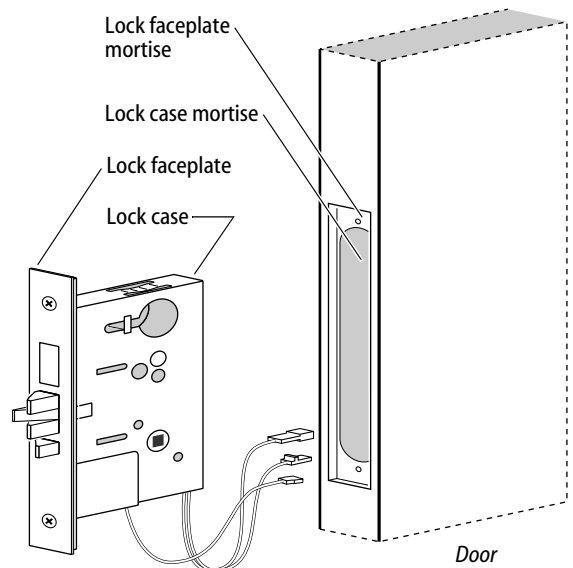


Figure 3 Mortising for the lock case and faceplate

Preparing the door and door jamb

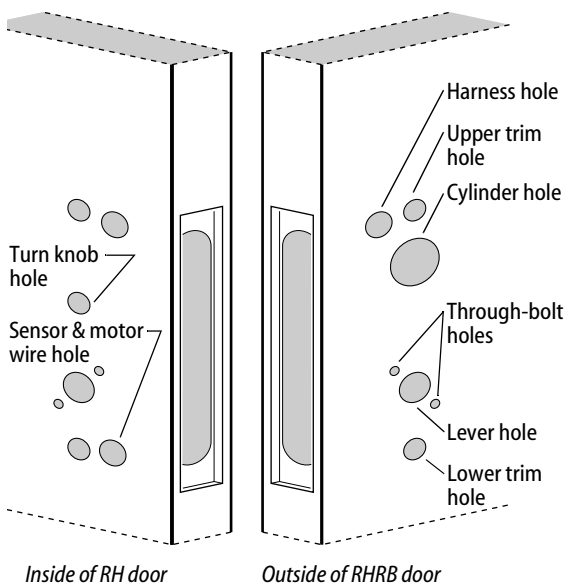


Figure 4a Drilling the RH and RHRB holes

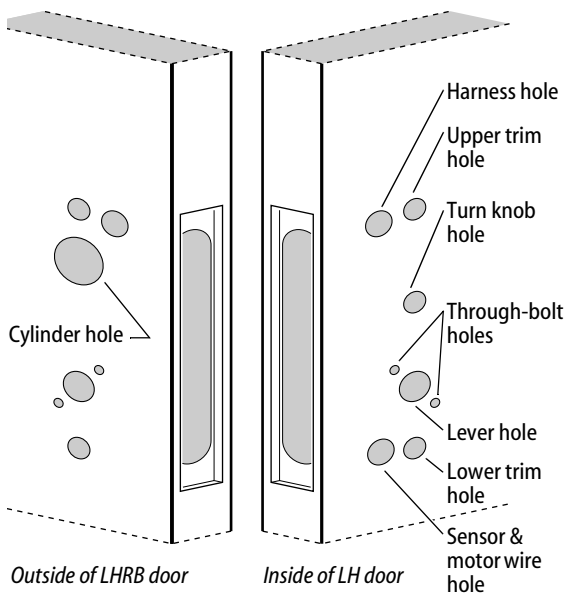


Figure 4b Drilling the LH and LHRB holes

4 Drill holes

Caution: Check for the correct lock function, hand, and bevel before drilling.

Drill the holes listed below:

- upper and lower trim holes
 - 5/8" diameter
 - through door
- harness hole
 - 3/4" diameter
 - through door
 - location based on handing
- cylinder hole
 - 1 3/8" diameter
 - from outside into mortise cavity
 - EV and FV functions only
- turn knob hole
 - 5/8" diameter
 - from inside into mortise cavity
 - FV and NV functions only
- upper and lower through-bolt holes
 - 3/8" diameter
 - through door
- lever hole
 - 7/8" diameter
 - through door
- sensor & motor wire hole
 - 3/4" diameter
 - from inside into mortise cavity, approximately 1" deep

Note 1: To locate the center of a hole on the opposite side of the door, drill a pilot hole completely through the door.

Note 2: For holes through the door, it is best to drill halfway from each side of the door to prevent the door from splintering.

Preparing the door and door jamb

5 Mortise for strike box and strike plate

- 1 On the door jamb, locate the horizontal centerline of the strike ($3/8''$ above the centerline of the lock), as well as the vertical centerline of the strike.
- 2 Mortise the door jamb to fit the strike box and strike plate.
- 3 Drill the holes for the screws used to install the strike box and strike plate.

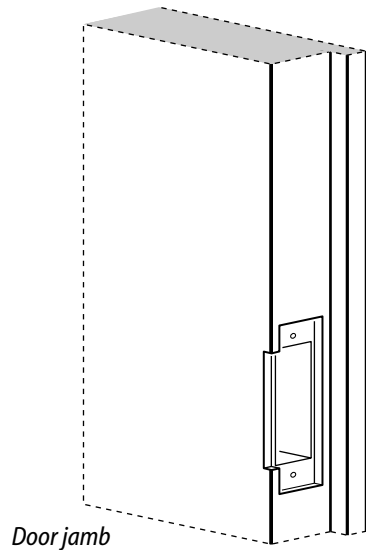


Figure 5 Mortising the door jamb for the strike box and strike plate

6 Install mortise case

- 1 Remove the faceplate from the mortise case.
- 2 Drill the holes for the case mounting screws.
- 3 Insert the mortise case into the mortise cavity, while feeding the sensor and motor wires into the mortise cavity and out the sensor & motor wire hole to the inside of the door.

Note: If the armored front of the mortise case is not flush with the door edge, remove the case and loosen the screws at the top and bottom of the case. Adjust the bevel of the armored front of the mortise case to match the bevel of the door. Tighten the screws and insert the mortise case back into the mortise cavity.

- 4 Secure the mortise case with the case mounting screws.

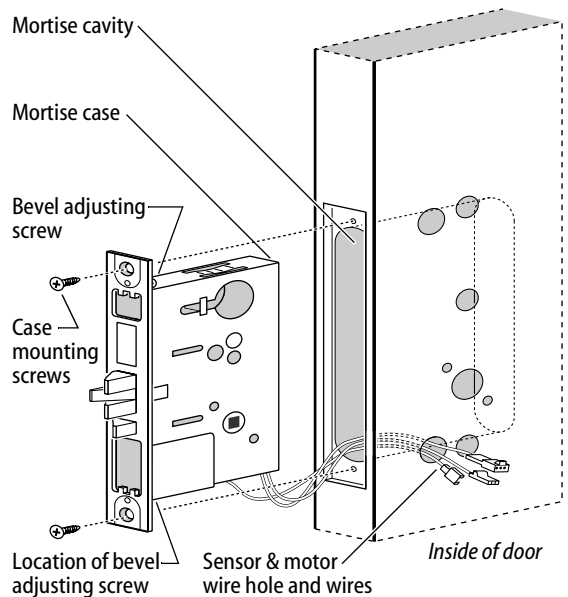


Figure 6 Installing the mortise case

Installing the lock

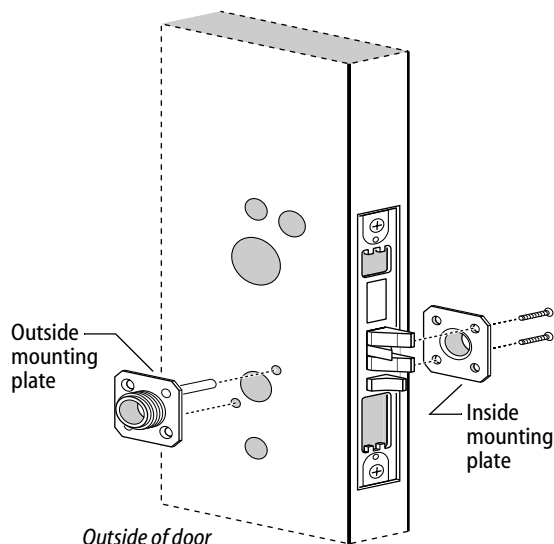


Figure 7 Installing the mounting plates

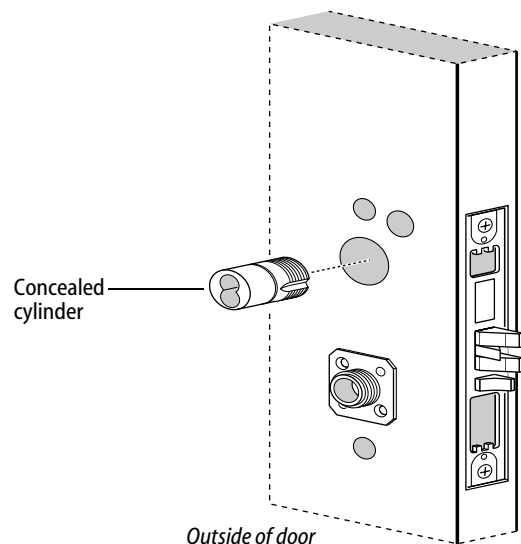


Figure 8 Installing the cylinder

7 Install mounting plates

- 1 Insert the outside mounting plate through the door and mortise case.
- 2 Position the inside mounting plate opposite the outside mounting plate and screw them securely in place.

Caution: Do not overtighten the mounting plate screws. Overtightening may compress the mortise cavity and bind the locking mechanism.

8 Install cylinder (EV and FV only)

Use a cylinder wrench (ED211) to thread the concealed cylinder into the mortise case so that the groove around the cylinder head is even with the door surface.

Note: Do not tighten the cylinder set screw until you perform task 12 on page 8.

Caution: A malfunction can occur if the cylinder is threaded in too far.

Installing the lock

9 Install core (EV and FV only)

- 1 Insert the control key into the core and rotate the key 15 degrees to the right.
- 2 With the control key in the core, insert the core into the cylinder.
- 3 Rotate the control key 15 degrees to the left and withdraw the key.

Caution: The control key can be used to remove cores and to access doors. Provide adequate security for the control key.

10 Remove backup battery tab

Caution 1: For the lock to operate properly, you must remove the backup battery tab.

Caution 2: Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.

- 1 Locate the backup battery tab on the inside of the outside escutcheon.
- 2 Pull down on the tab and remove it from the outside escutcheon to turn on the backup battery.

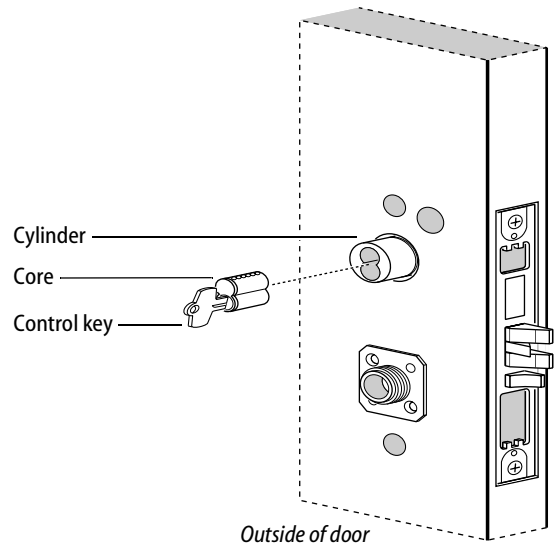


Figure 9 Installing the core

Installing the lock

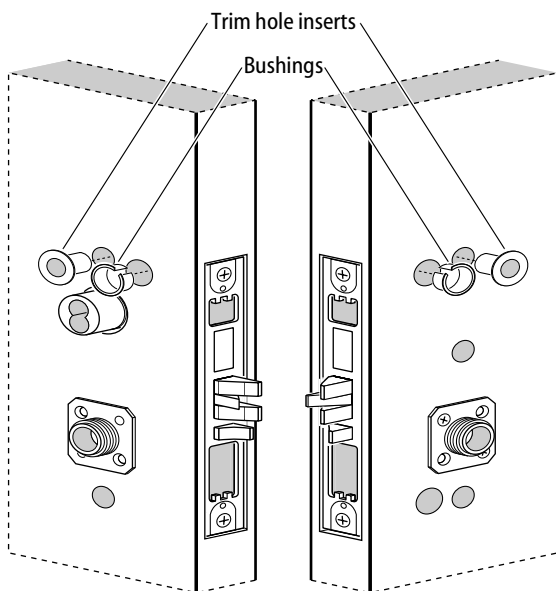


Figure 11 Installing the trim hole inserts and bushings

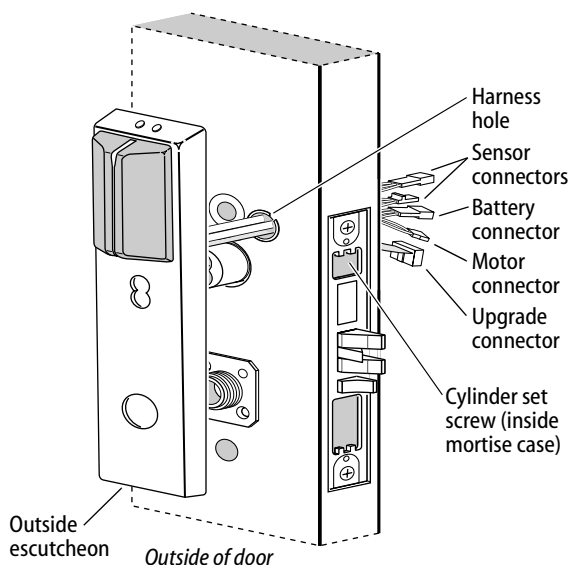


Figure 12 Feeding the wire harness connectors through the harness hole

11 Install trim hole inserts and bushings

- 1 Insert the two trim hole inserts into the upper trim hole on each side of the door, as shown in Figure 11.
- 2 Insert the two bushings into the harness hole on each side of the door, as shown in Figure 11.

12 Route wire harnesses and position outside escutcheon

- 1 From the outside of the door, feed the upgrade connector through the harness hole.
- 2 From the outside of the door, feed the motor connector, battery connector, and sensor connectors through the harness hole.

Note: NV function locks do not have a sensor harness.

Caution: When routing the connectors, make sure the harnesses are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

- 3 For EV and FV function locks, perform these steps:
 - a Firmly press the outside escutcheon in position on the door. The core should be flush with the outer surface of the escutcheon.
 - a If necessary, adjust the cylinder depth plus or minus one turn so that the core is flush with the outer surface of the escutcheon.
 - b Secure the cylinder in the mortise case with the cylinder set screw.
- 4 Rest the outside escutcheon on the door by inserting the trim studs into the trim holes.

Note: You can temporarily install the outside lever to hold the outside escutcheon in place. See task 16 on page 12.

Installing the lock

13 Make motor and sensor connections

From the inside of the door, make the motor connection, the key override sensor connection (EV and FV functions)[†], and the deadbolt sensor connection (FV and LV functions).

Note 1: It is physically possible to connect the key override sensor connector from the mortise case to the battery connector from the wire harness. To avoid this mistake, connect only the connectors with matching wire colors.

Note 2: The upgrade cable is used for reprogramming the lock's firmware without removing the lock from the door. This cable does not connect to a mating lock connector.

Caution: When making the motor connection and sensor connections, make sure:

- there are no loose wire connections where the wires are inserted into the connectors
- the connectors are firmly mated.

Wire connection	Colors	No. of wires	No. of pins
Motor	Yellow Gray	2	2
Key override sensor	Gray	2	3
Deadbolt sensor	Blue	2	3

[†] Key override sensing is optional for 35HG and standard for 35HBV.

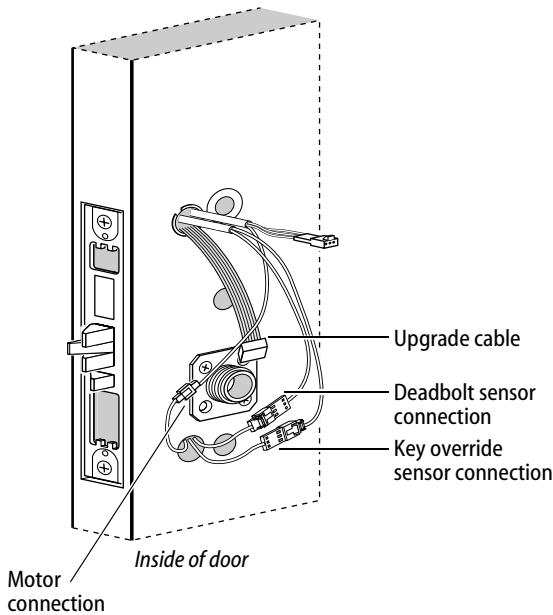


Figure 13 Making the motor connection and sensor connections

Installing the lock

14 Secure escutcheons

- 1 Position the inside and outside escutcheons on the door.
- 2 **Making sure that the escutcheons do not pinch the wires**, secure the escutcheons to the door. Do not tighten the screws completely. Use the combination mounting screw in the upper trim hole and the standard mounting screw in the lower trim hole.

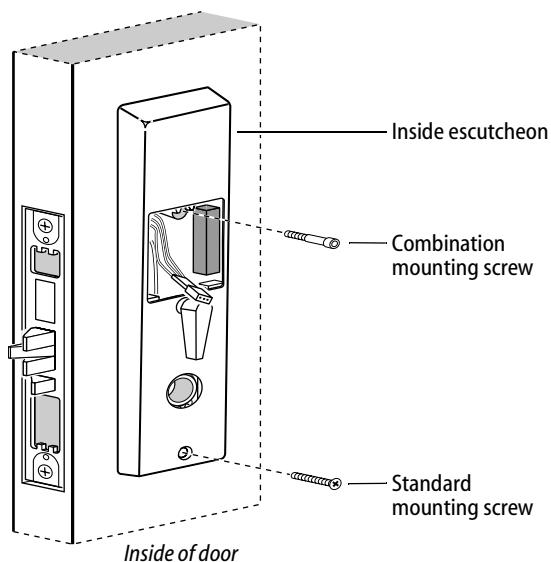


Figure 14 Securing the escutcheons

Installing the lock

15 Install battery pack

- 1 Connect the battery pack to the battery connector on the wire harness inside the battery compartment.

Note: The battery connection has 3 wires and 3 pins. The wire colors are:

- red with white stripe
- white
- black with white stripe.

Caution: When connecting the battery pack, make sure:

- there are no loose wire connections where the wires are inserted into the connectors
 - the connectors are firmly mated.
- 2 Place the battery pack inside the battery compartment so that the foam will face the battery compartment door.

Caution: When routing the battery wires, make sure the wires are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

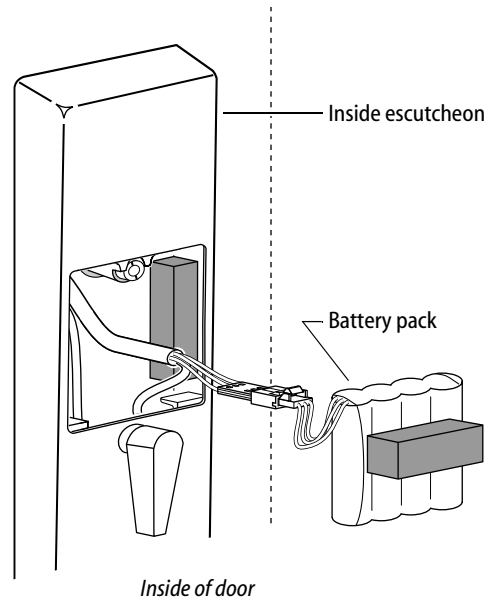


Figure 15 Connecting the battery pack

Completing the installation

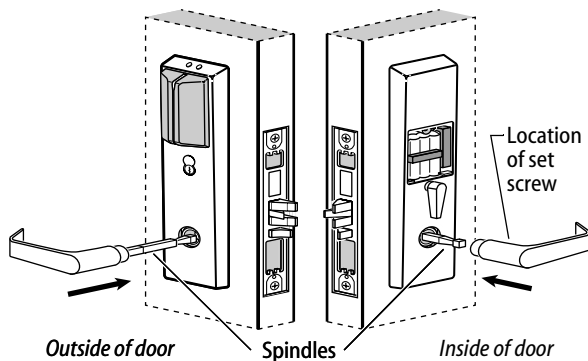


Figure 16 Installing the levers

16 Install inside and outside levers

- 1 Unscrew the inside spindle one full turn to allow the spindles to turn freely.
- 2 With the handle pointing toward the door hinges, insert the outside lever and spindles assembly into the lock from the outside of the door.
- 3 Slide the inside lever onto the inside spindle and secure it with the set screw.
- 4 Making sure that the core is positioned properly in the outside escutcheon (EV and FV only) and the escutcheons are aligned properly on the door, tighten the escutcheon mounting screws.
Note: If a core is not available, you can use the cylinder wrench (ED211) to help you align the core opening in the escutcheon.
- 5 Turn the levers to check that they operate smoothly.

Completing the installation

17 Install battery compartment door

- 1 **Making sure that the battery compartment door does not pinch any wires**, insert the tabs of the battery compartment door into its mating slots and swing the door closed.
- 2 Use a T15 TORX bit driver to secure the battery compartment door with the security screw. Tighten firmly.

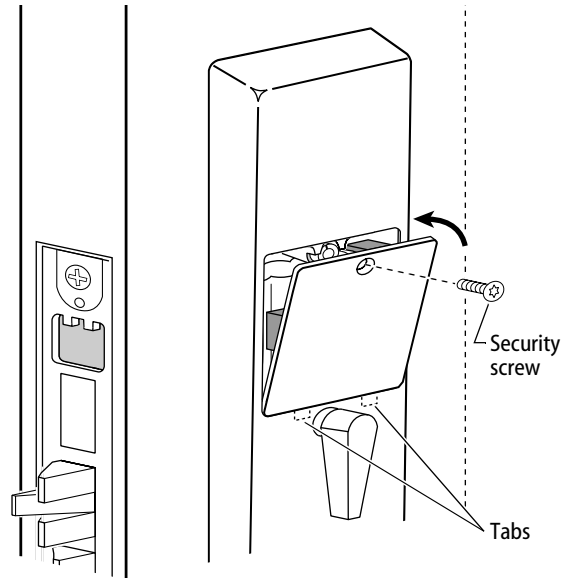


Figure 17 Installing the battery compartment door

18 Install mortise case faceplate

- 1 Secure the mortise case faceplate to the mortise case with the faceplate mounting screws.
- 2 Check the lock for proper operation.

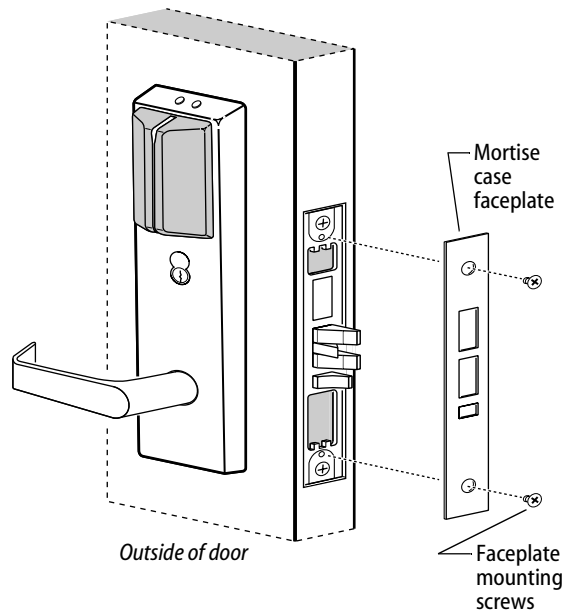


Figure 18 Installing the mortise case faceplate

Completing the installation

19 Install strike box and strike plate

- 1 Insert the strike box into the mortise in the door jamb. Place the strike plate over the strike box and secure the strike with the screws provided.
- 2 Check the position of the auxiliary bolt against the strike plate.

Caution: The auxiliary bolt must make contact with the strike plate. The auxiliary bolt deadlocks the latchbolt and prevents someone from forcing the latch open when the door is closed. If the incorrect strike is installed, a lock-in can occur.

Note: The recommended gap between the door and jamb is 1/8".

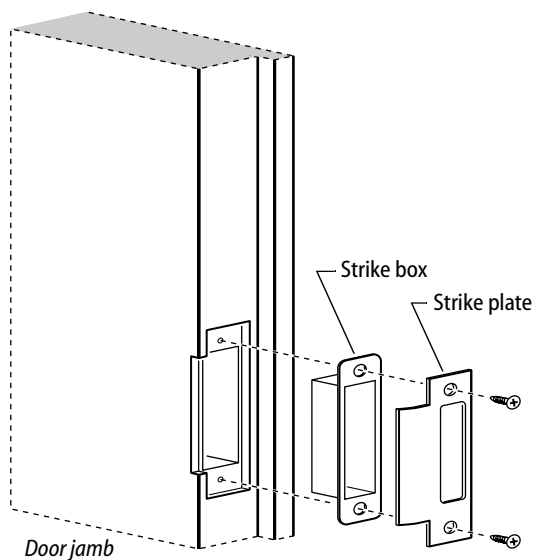


Figure 19a Installing the strike box and strike plate

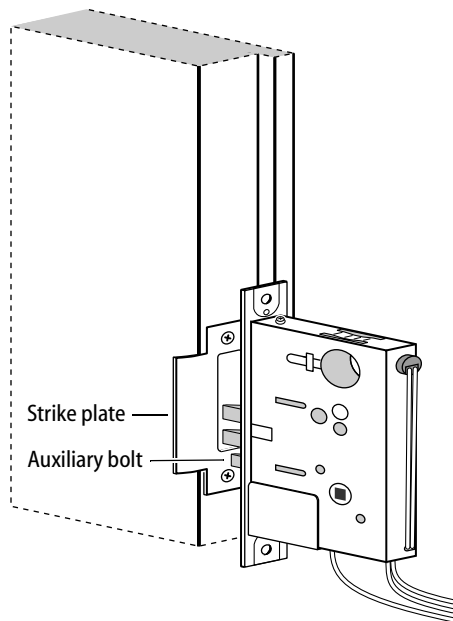


Figure 19b Positioning the strike

Completing the installation

20 Test lock

To test the lock for proper operation before the lock is programmed, use the temporary operator card that came with the lock. This card is for temporary use only. After permanent cards have been programmed for the lock, the temporary card should be deleted.

- 1 Use the temporary operator card to activate the lock.
When the lock detects the presence of a card for the first time, the lock performs a series of diagnostic self-tests. If no problem is detected, the lock responds with 4 red LED flashes, simultaneous with 4 green LED flashes and 4 short tones.

If a problem is detected, the lock's red LED and green LED simultaneously flash in a repeating pattern (and no tones sound). The lock's control electronics board must be replaced. For instructions, see the *B.A.S.I.S. G Service Manual* (T63300) or the *B.A.S.I.S. V Service Manual* (T61805).

Note: *If the lock has a proximity card reader, it may have already been activated by the presence of an object near the card reader.*

- 2 Use the temporary operator card to access the lock.
The green light flashes and the locking mechanism unlocks.
- 3 Turn the lever and open the door.

If the mechanism doesn't unlock, refer to the following table. For additional troubleshooting instructions, see the *B.A.S.I.S. G Service Manual* or the *B.A.S.I.S. V Service Manual*.

LEDs	Sounder	You should
Single red flash	—	Use the card at a moderate speed.
Red flashes	3 short tones	Use the temporary operator card provided with the lock.
Green flashes	—	Check the motor connection.
—	—	Check the battery connection.

For all EV and FV function locks

Insert and turn the key to unlatch the door.

For all FV and LV function locks

From the inside of the door, turn the turn knob and make sure that the deadbolt operates properly.



Installation Instructions for B.A.S.I.S. Cylindrical Locks

Planning the installation

Contents

These installation instructions describe how to install your B.A.S.I.S.® G (93KG–95KG) or B.A.S.I.S. V (93KBV–95KBV) Cylindrical Lock. The following topics are covered.[†]

Planning the installation 1
Preparing the door and door jamb 2
Installing the lock 6
Completing the installation 10

Site survey

Use the following survey to record information about the installation site. You need this information to determine how to prepare the door for the lock.

Door information

Door handing and bevel:

- ☐ Left hand (LH)
- ☐ Left hand, reverse bevel (LHRB)
- ☐ Right hand (RH)
- ☐ Right hand, reverse bevel (RHRB)

Door thickness: _____ inches (1 3/4" to 2 1/4")

Environment information

Ambient temperature:

- ☐ Is within specifications. See the tables below.

This product meets the following Locked Door Outdoor test requirements for ANSI/BHMA 156.25:

Side of door	Range
Inside	+66°F to +74°F (+19°C to +23°C)
Outside	–31°F to +151°F (–35°C to +66°C)

This product meets the following Full Indoor test requirements for ANSI/BHMA 156.25:

Side of door	Range
Inside and outside	+32°F to +120°F (0°C to +42°C)

[†] The Best Access Systems logo and B.A.S.I.S. are registered trademarks of Best Lock Corporation.

Components checklist

Use the following checklist to make sure that you have the items necessary to install your B.A.S.I.S. Cylindrical Lock.

Components provided in the box:

- ☐ Chassis with outside lever and outside rose liner assembly
- ☐ Inside escutcheon assembly
- ☐ Battery compartment door
- ☐ Battery pack
- ☐ Inside rose liner
- ☐ Outside escutcheon assembly
- ☐ Inside lever
- ☐ Throw member package
- ☐ Latch
- ☐ Hub washers
- ☐ Trim hole insert package
- ☐ Plastic bushing package
- ☐ Escutcheon screw package
- ☐ Strike package
- ☐ Bar code ID sticker (for your records)
- ☐ Temporary operator card
- ☐ Installation template and instructions

Other components:

- ☐ Core
- ☐ Control key

Special tools checklist

Use the following checklist to make sure that you have the special tools necessary to install your B.A.S.I.S. Cylindrical Lock.

- ☐ KD303 Drill jig
- ☐ T15 TORX® bit driver[‡]
- ☐ KD325 Strike plate locating pin
- ☐ KD315 Faceplate marking chisel

[‡] TORX is a registered trademark of the Camcar Division of Textron.

Preparing the door and door jamb

1 Position template and mark drill points

Note: If the door is a fabricated hollow metal door, determine whether it is properly reinforced to support the lock. If door reinforcement is not adequate, consult the door manufacturer for information on proper reinforcement. For dimensions for preparing metal doors, see the G01 and G02 Templates—Installation Specifications for 93KG and 93KBV Cylindrical Locks.

Note: If the door is a LH or RH door, mark the inside of the door. If the door is a LHRB or RHRB door, mark the outside of the door.

For uncut doors and frames

- 1 Measure and mark the horizontal centerline of the lever (the centerline for the chassis hole) on the door and door jamb. Mark the vertical centerline of the door edge.

Note: The recommended height from the floor to the centerline of the lock is 38".

- 2 Fold the G05 Template—Installation Template for 93KG and 93KBV Cylindrical Locks on the dashed line and carefully place it in position on the high side of the door bevel.

Note: For steel frame applications, align the template's horizontal centerline for the latch with the horizontal centerline of the frame's strike preparation.

- 3 Tape the template to the door.
- 4 Center punch the necessary drill points. Refer to the instructions on the template.

For doors with standard cylindrical preparation

- 1 Fold the G05 Template—Installation Template for 93KG and 93KBV Cylindrical Locks on the dashed line. Looking through the hole from the opposite side of the door, align the template so that you see the template outline of the 2 1/8" diameter chassis hole.
- 2 Tape the template to the door.
- 3 Center punch the necessary drill points. Refer to the instructions on the template.

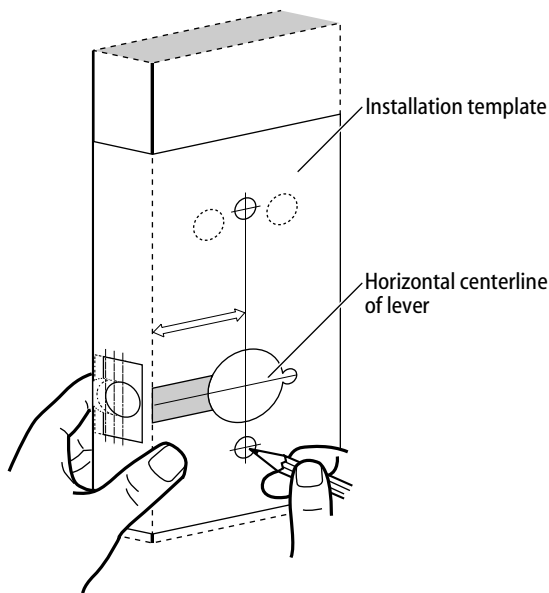


Figure 1 Positioning the template

Preparing the door and door jamb

Components checklist

2 Drill holes and mortise for latch face.

- 1 Drill the holes listed below:
 - upper and lower trim holes
 - 5/8" diameter
 - through door
 - harness hole
 - 3/4" diameter
 - through door
 - location based on handing
 - motor wire hole
 - 7/16" diameter
 - through door
 - **before drilling chassis hole**
 - chassis hole
 - 2 1/8" diameter
 - through door
 - after drilling motor wire hole
 - latch hole
 - 1" diameter
 - meets chassis hole

Note 1: To locate the center of a hole on the opposite side of the door, drill a pilot hole completely through the door.

Note 2: For holes through the door, it is best to drill halfway from each side of the door to prevent the door from splintering.

- 2 Mortise the edge of the door to fit the latch face.
- 3 Drill the holes for the screws used to install the latch.

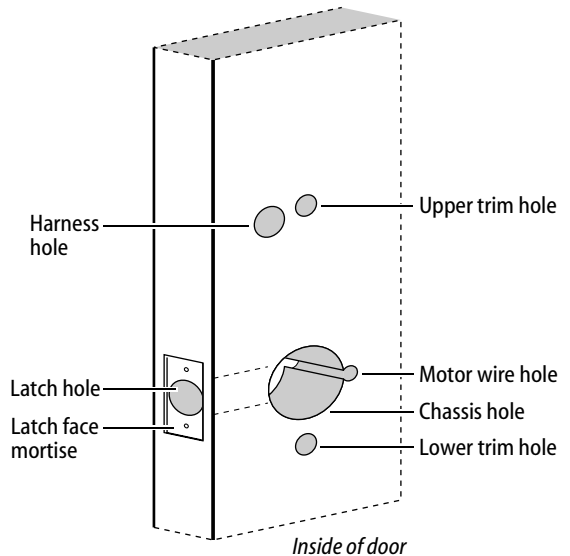


Figure 2 Drilling holes and mortising for the latch face

Preparing the door and door jamb

3 Install latch

- 1 Install the latch in the door.

Note: The latch tube prongs should be centered and should project into the chassis hole.

- 2 Check that the door swings freely.

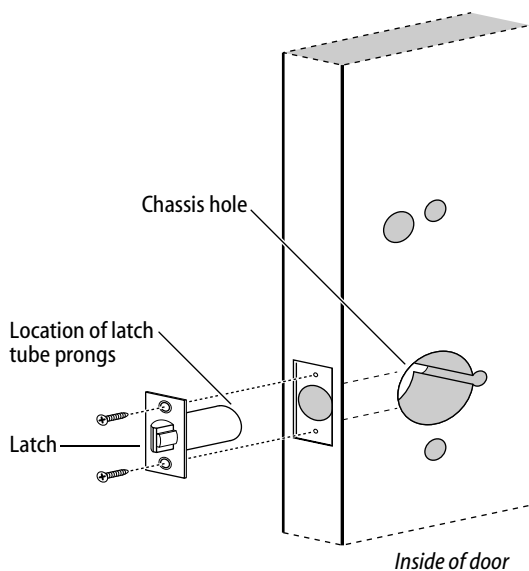


Figure 3 Installing the latch in the door

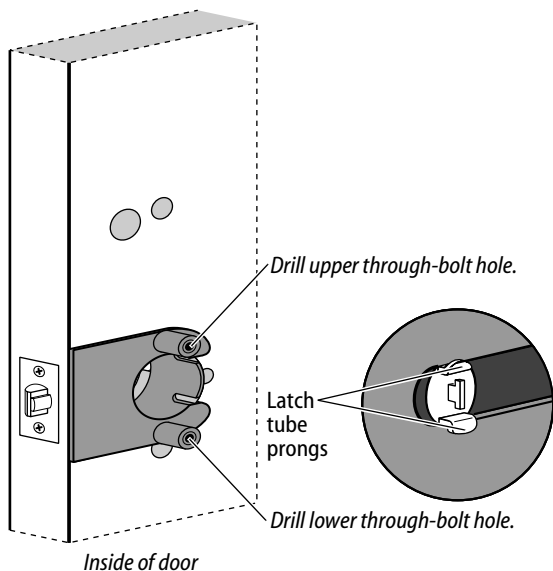


Figure 4 Installing the drill jig and drilling the through-bolt holes

4 Use drill jig to drill through-bolt holes

- 1 Press the drill jig (KD303) onto the door, engaging it with the latch tube prongs (see the close-up in Figure 4). Make sure the front edge of the jig is parallel with the door edge.
- 2 Drill the through-bolt holes (5/16" diameter) halfway into the door.
- 3 Turn over the drill jig and repeat steps 1 and 2 from the opposite side of the door.

Note: Replace the drill jig after 10 door preparations.

Preparing the door and door jamb

5 Install strike box and strike plate

- 1 In alignment with the center of the latchbolt, mortise the door jamb to fit the strike box and strike plate.
- 2 Drill the holes for the screws used to install the strike box and strike plate.
- 3 Insert the strike box and secure the strike with the two screws provided.
- 4 Check the position of the deadlocking plunger against the strike plate.

Caution: The deadlocking plunger of the latchbolt must make contact with the strike plate, as shown in Figure 5b. The plunger deadlocks the latchbolt and prevents someone from forcing the latch open when the door is closed.

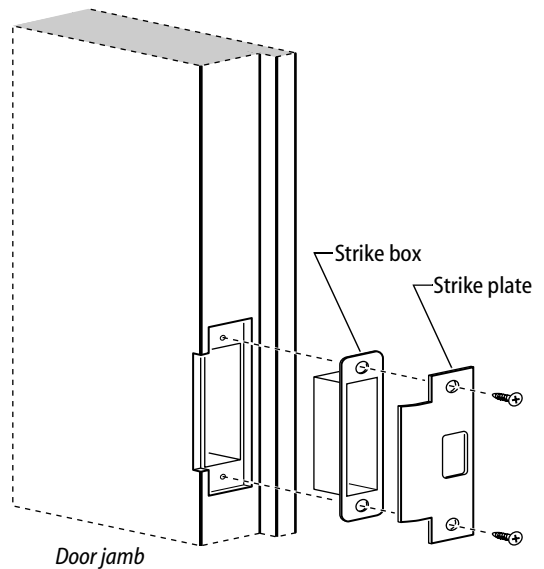


Figure 5a Installing the strike box and strike plate

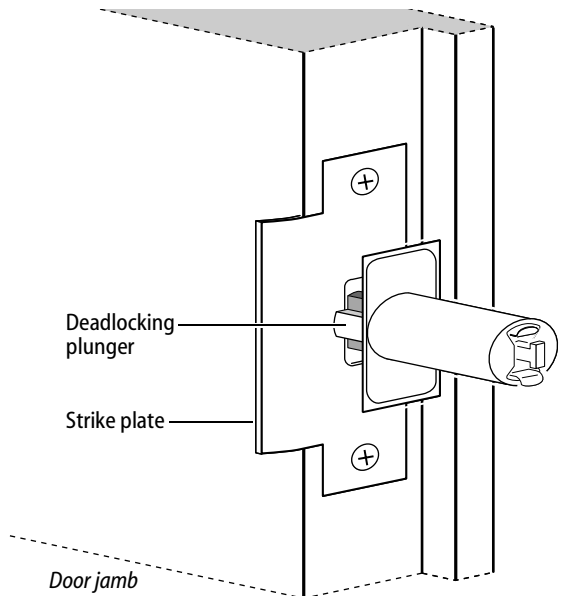


Figure 5b Aligning the deadlocking plunger with the strike plate

Installing the lock

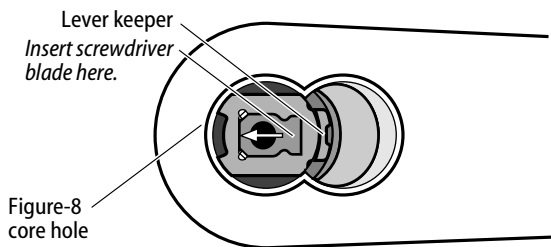


Figure 6 Removing the outside lever

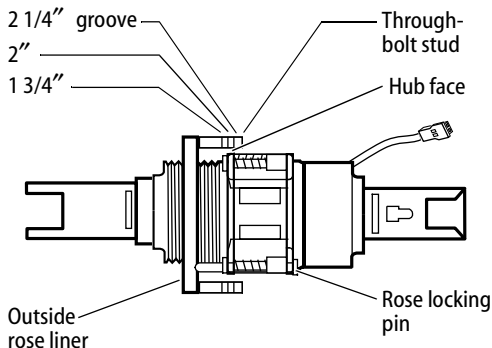


Figure 7 Adjusting the rose liner for the door thickness

6 Remove outside lever

- 1 Insert the control key into the core and rotate the key 15 degrees to the right.
- 2 Insert a flat blade screwdriver into the figure-8 core hole and into the lever.
- 3 Press the screwdriver blade in the direction of the arrow in Figure 6.

Note: You cannot remove the lever if the screwdriver blade is inserted too far past the keeper.

- 4 Slide the lever off of the sleeve.

7 Adjust for door thickness

- 1 Determine the door's thickness.
- 2 Pull the rose locking pin and rotate the outside rose liner until the proper groove on the through-bolt stud lines up with the hub face.

Note 1: Make sure that the locking pin fully locks into the rose liner.

Note 2: The lockset fits doors 1 3/4" to 2 1/4" thick.

Installing the lock

8 Install lock chassis and engage retractor in latch

From the outside of the door, insert the lock chassis into the 2 1/8" chassis hole, routing the motor wire through the notch.

Caution: Make sure that the latch tube prongs engage the chassis frame and that the latch tailpiece engages the retractor.

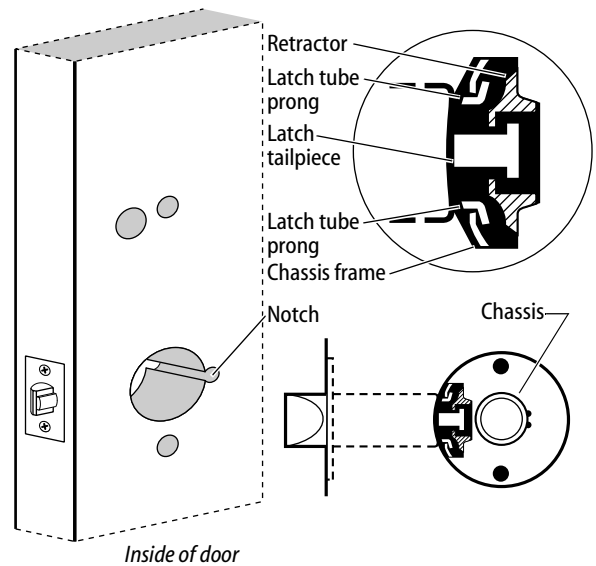


Figure 8 Installing the lock chassis and engaging the retractor in the latch

9 Install through-bolts and inside rose liner

- 1 Place the inside rose liner on the chassis, aligning the holes in the rose liner with the holes prepared in the door.

Caution: Make sure that there is clearance for the motor wire between the rose liner and the door.

- 2 Install the through-bolts through the rose liner and door in the top and bottom holes.
- 3 Tighten the rose liner on the door with the through-bolts.

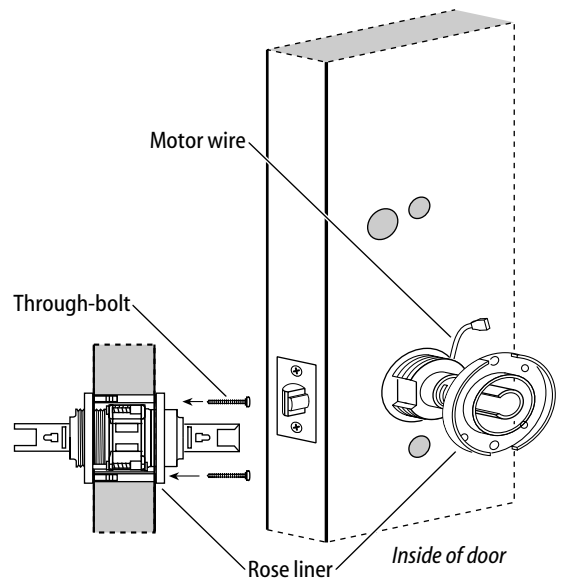


Figure 9 Installing the through-bolts and rose liner

Installing the lock

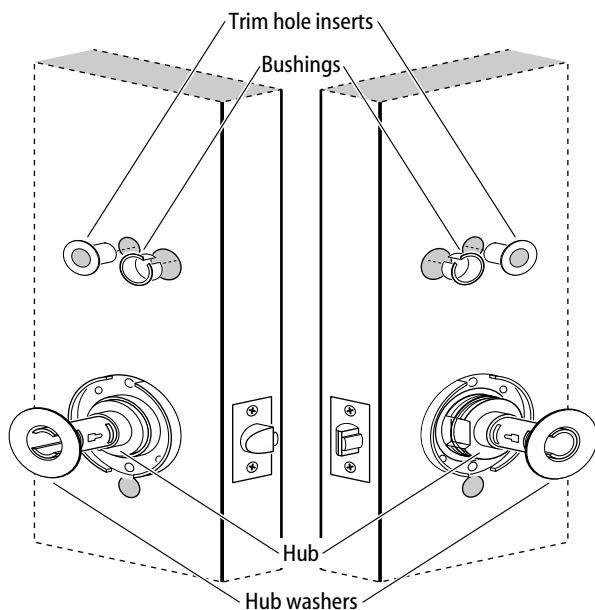


Figure 11 Installing the trim hole inserts, bushings, and hub washers

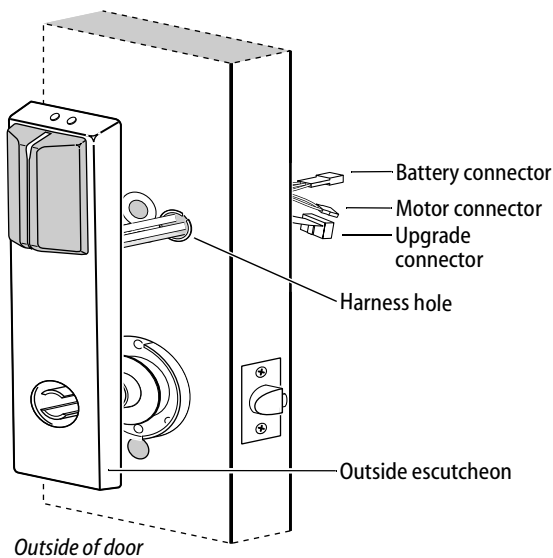


Figure 12 Feeding the wire harness connectors through the harness hole

10 Remove backup battery tab

Caution 1: For the lock to operate properly, you must remove the backup battery tab.

Caution 2: Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.

- 1 Locate the backup battery tab on the inside of the outside escutcheon.
- 2 Pull down on the tab and remove it from the outside escutcheon to turn on the backup battery.

11 Install trim hole inserts, bushings, and hub washers

- 1 Insert the two trim hole inserts into the upper trim hole on each side of the door, as shown in Figure 11.
- 2 Insert the two bushings into the harness hole on each side of the door, as shown in Figure 11.
- 3 On each side of the door, slide a hub washer over the chassis sleeve so it rests on the hub.

12 Route wire harness and position outside escutcheon

- 1 From the outside of the door, feed the upgrade connector, and then the motor connector and battery connector, through the harness hole.

Caution: When routing the connectors, make sure the wire harness is not routed across any sharp edges or over any surface that could damage its sleeving or wire insulation.

- 2 Temporarily rest the outside escutcheon on the door by inserting the trim studs into the trim holes.

Note: You can temporarily install the outside lever to hold the outside escutcheon in place. See task 16 on page 10.

Installing the lock

13 Make motor connection

From the inside of the door, connect the motor connector from the chassis to its mating connector on the wire harness.

Note 1: The upgrade cable is used for reprogramming the lock's firmware without removing the lock from the door.

This cable does not connect to a mating lock connector.

Note 2: The motor connection has 2 wires and 2 pins. The wire colors are yellow and gray.

Caution: When making the motor connection, make sure:

- there are no loose wire connections where the wires are inserted into the connectors
- the connectors are firmly mated.

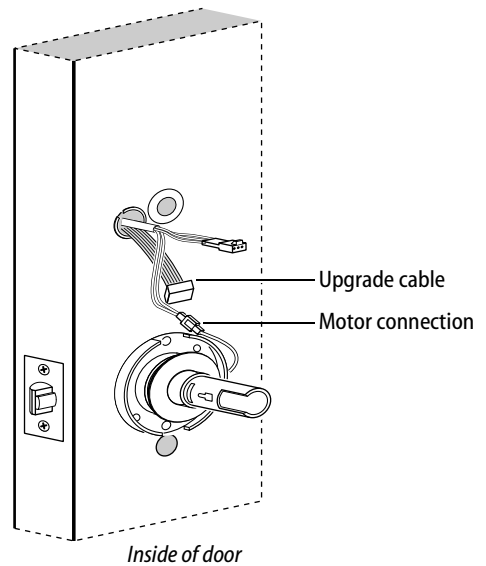


Figure 13 Making the motor connection

14 Secure escutcheons

- 1 Position the inside and outside escutcheons on the door.
- 2 **Making sure that the escutcheons do not pinch the wires**, secure the escutcheons to the door—but do not tighten. Use the combination mounting screw at the upper trim hole and the standard mounting screw at the lower trim hole.

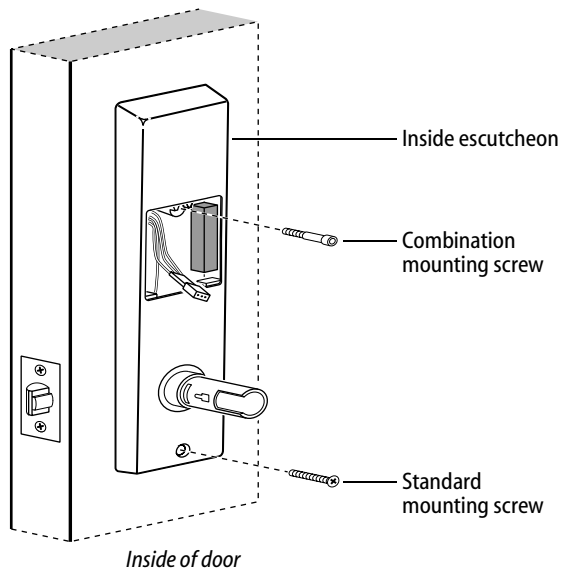


Figure 14 Securing the escutcheons

Completing the installation

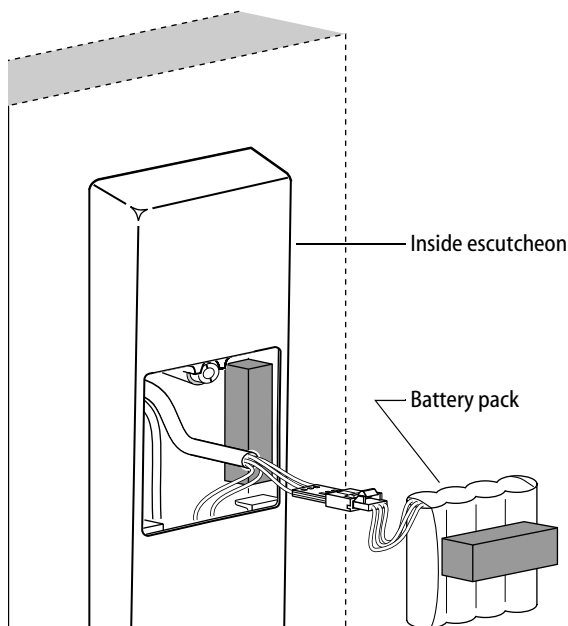


Figure 15 Connecting the battery pack

15 Install battery pack

- 1 Connect the battery pack to the battery connector on the wire harness inside the battery compartment.

Note: The battery connection has 3 wires and 3 pins. The wire colors are:

- red with white stripe
- white
- black with white stripe.

Caution: When connecting the battery pack, make sure:

- there are no loose wire connections where the wires are inserted into the connectors
 - the connectors are firmly mated.
- 2 Place the battery pack inside the battery compartment so that the foam will face the battery compartment door.

Caution: When routing the battery wires, make sure the wires are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

16 Install inside and outside levers

Note: To use a core and throw member from a manufacturer other than BEST with a B.A.S.I.S. Lock, see the Installation Instructions for 9K Non-interchangeable Cores & Throw Members (T56093). Skip task 16 and task 17.

For the inside and outside levers

- 1 With the handle pointing toward the door hinges, position a lever on the outside sleeve and push firmly on the lever until it is seated. Repeat, placing the other lever on the inside sleeve.
- 2 Tighten the escutcheon mounting screws.
- 3 Turn the levers to check that they operate smoothly.

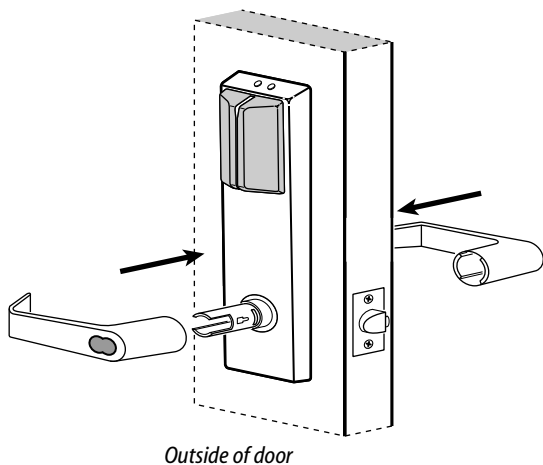


Figure 16 Installing the levers

Completing the installation

17 Install core and throw member

- 1 Install the blocking plate onto the throw member.
Caution: You must use the blocking plate to prevent unauthorized access.
- 2 Insert the control key into the core and rotate the key 15 degrees to the right.
- 3 Insert the throw member into the core.
- 4 Insert the core and throw member into the lever with the control key.
- 5 Rotate the control key 15 degrees to the left and withdraw the key.

Caution: The control key can be used to remove cores and to access doors. Provide adequate security for the control key.

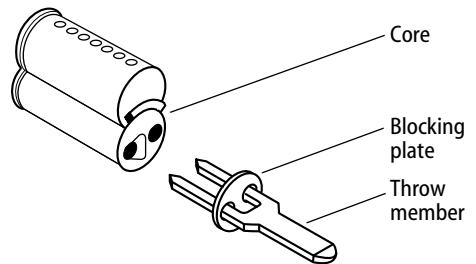


Figure 17a Installing the blocking plate and throw member

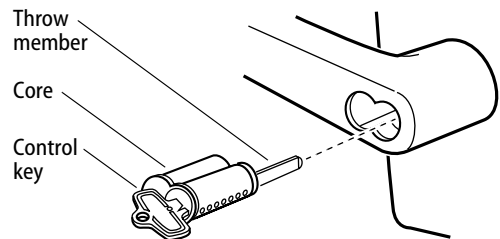


Figure 17b Installing the core

18 Install battery compartment door

- 1 **Making sure that the battery compartment door does not pinch any wires**, insert the tabs of the battery compartment door into its mating slots and swing the door closed.
- 2 Use a T15 TORX bit driver to secure the battery compartment door with the security screw. Tighten firmly.

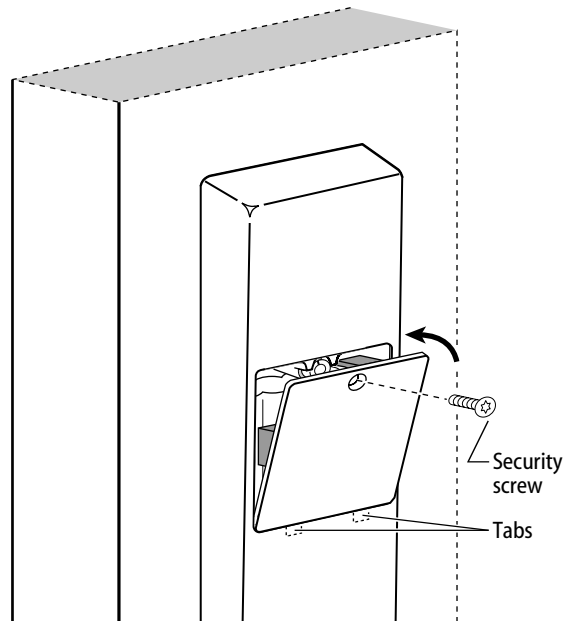


Figure 18 Installing the battery compartment door

Completing the installation

19 Test lock

To test the lock for proper operation before the lock is programmed, use the temporary operator card that came with the lock. This card is for temporary use only. After permanent cards have been programmed for the lock, the temporary card should be deleted.

- 1 Use the temporary operator card to activate the lock.
When the lock detect the presence of a card for the first time, it performs a series of diagnostic self-tests. If no problem is detected, the lock responds with 4 red LED flashes, simultaneous with 4 green LED flashes and 4 short tones.
If a problem is detected, the lock's red LED and green LED simultaneously flash in a repeating pattern (and no tones sound). The lock's control electronics board must be replaced. For instructions, see the *B.A.S.I.S. G Service Manual* (T63300) or the *B.A.S.I.S. V Service Manual* (T61805).

Note: *If the lock has a proximity card reader, it may have already been activated by the presence of an object near the card reader.*

- 2 Use the temporary operator card to access the lock.
The green light flashes and the locking mechanism unlocks.
- 3 Turn the lever and open the door.
- 4 With the door closed, insert and turn the key to unlatch the door.

If the mechanism doesn't unlock, refer to the following table. For additional troubleshooting instructions, see the *B.A.S.I.S. G Service Manual* or the *B.A.S.I.S. V Service Manual*.

LEDs	Sounder	You should
Single red flash	—	Use the card at a moderate speed.
Red flashes	3 short tones	Use the temporary operator card provided with the lock.
Green flashes	—	Check the motor connection.
—	—	Check the battery connection.



Installation Instructions for B.A.S.I.S. EX Series Exit Hardware Trim

Planning the installation

Contents

These installation instructions describe how to install your B.A.S.I.S.® G EX Series (EXG) or B.A.S.I.S. V EX Series (EXBV) Exit Hardware Trim.[†] B.A.S.I.S. EX Series Exit Hardware Trim is available for use with the following types of exit devices manufactured by Precision Hardware (1000 Series and 2000 Series) and Von Duprin® (98/99 Series):[‡]

- rim
- surface vertical rod
- mortise
- concealed vertical rod.

These instructions cover the following topics:

<i>Planning the installation</i>	1
<i>Preparing the door</i>	2
<i>Installing the exit hardware and trim</i>	6
<i>Completing the installation</i>	10

Site survey

Use the following survey to record information about the installation site.

Lock information

Exit hardware type:

- ☐ Rim
- ☐ Mortise
- ☐ Surface vertical rod
- ☐ Concealed vertical rod

Lock function:

- ☐ EV—With key override
- ☐ NV—Without key override

Door information

Door handing and bevel:

- ☐ Left-hand reverse bevel (LHRB)
- ☐ Right-hand reverse bevel (RHRB)

Door type:

- ☐ Wood
- ☐ Metal

Door thickness: _____ inches (1 3/4" to 2 1/4")

[†] The Best Access Systems logo and B.A.S.I.S. are registered trademarks of Best Lock Corporation.

[‡] Von Duprin is a registered trademark of Von Duprin, Inc.

Components checklist

Use the following checklist to make sure that you have the items necessary to install your B.A.S.I.S. Exit Hardware Trim.

Components provided in the box:

- ☐ B.A.S.I.S. escutcheon and lever assembly
- ☐ Battery bracket
- ☐ Battery cover
- ☐ Battery pack
- ☐ Battery screw package
- ☐ Cylinder assembly and related components (for EV function only)
- ☐ Cylinder mounting sleeve (for Von Duprin EV functions only)
- ☐ Bar code ID sticker (for your records)
- ☐ Temporary operator card
- ☐ Installation template and instructions

Other components (for EV function only):

- ☐ 7-pin core
- ☐ Control key

Special tools checklist

Use the following checklist to make sure that you have the special tools necessary to install your B.A.S.I.S. Exit Hardware Trim.

- ☐ T15 TORX® bit driver^{††}
- ☐ ED211 cylinder wrench (for EV function only)

^{††} TORX is a registered trademark of the Camcar Division of Textron.

Preparing the door

1 Mark centerlines

Note 1: If retrofitting the B.A.S.I.S. trim to an existing exit hardware installation, skip this task. Instead, remove the exit hardware from the door.

Note 2: If the door is a fabricated hollow metal door, determine whether it is properly reinforced to support the lock. If door reinforcement is not adequate, consult the door manufacturer for information on proper reinforcement. For dimensions for preparing metal doors, see the G10 Template—Installation Specifications for EXG & EXBV Exit Hardware Trim for use with Precision Hardware 1000/2000 Series Locks or G09 Template—Installation Specifications for EXG & EXBV Exit Hardware Trim for use with Von Duprin 98/99 Series Locks.

- 1 On the door, measure and mark the height of the centerline of the lock from the finished floor as specified by the exit hardware manufacturer.
On both sides of the door, on the door's edge, and on the door frame (if required for strike installation), mark the horizontal centerline of the lock.
- 2 On both sides of the door, on the door's edge, and on the door frame (if required for strike installation), mark the vertical centerline of the lock stile case as specified by the exit hardware manufacturer.

Note: The vertical centerline for the B.A.S.I.S. trim on the outside of the door should correspond exactly to the vertical centerline for the lock stile case on the inside of the door. When measuring from the edge of the door, take into account the door bevel (if any).

2 Position exit hardware template(s) and mark drill points

Note: If retrofitting the B.A.S.I.S. trim to an existing exit hardware installation, skip this task.

- 1 Position the Precision Hardware or Von Duprin exit hardware template on the inside of the door; follow the instructions provided by the exit hardware manufacturer.
- 2 Tape the template to the door.
- 3 Center punch the necessary drill points. Refer to the instructions on the template and to the hole schedule provided by the exit hardware manufacturer.
- 4 If necessary, repeat step 1 through step 3 to prepare the door frame or door stop for strike installation.

Preparing the door

3 Position trim template and mark drill points

1 For new installations

- a Cut the G08 Template—*Installation Template for EXG & EXBV Exit Hardware Trim for Use with Precision Hardware 1000/2000 Series Locks or G07 Template—Installation Template for EXG & EXBV Exit Hardware Trim for Use with Von Duprin 98/99 Series Locks* along the dashed lines.
- b Align the horizontal and vertical arrows marked on the template with the centerlines marked on the door. See Figure 1.

For retrofit installations

Align the mounting holes for the escutcheon and lock stile case marked on the template with the mounting holes in the door. See Figure 1.

Note: *The B.A.S.I.S. outside escutcheon is mounted using the four lock stile case mounting holes ('A' holes); these holes must be 7/16" in diameter and drilled completely through the door.*

- 2 Tape the template to the door.
- 3 Center punch the necessary drill points. Refer to the instructions on the template.

4 Mortise for mortise case and faceplate (mortise exit devices only)

Note: *If retrofitting the B.A.S.I.S. trim to an existing exit hardware installation, skip this task.*

Mortise the edge of the door for the mortise case and faceplate; follow the instructions provided by the exit hardware manufacturer.

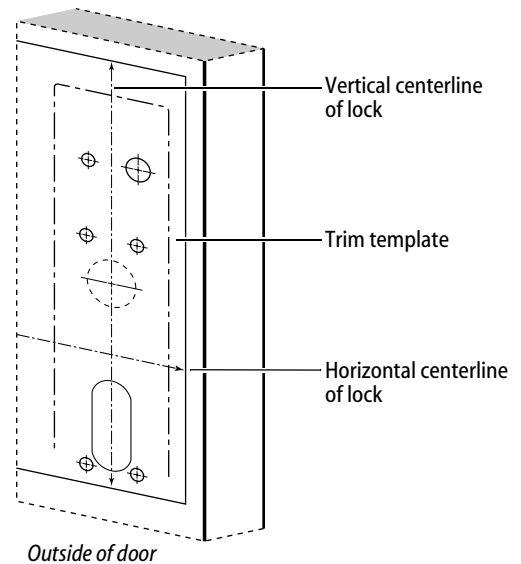


Figure 1 Positioning the B.A.S.I.S. trim template

Preparing the door

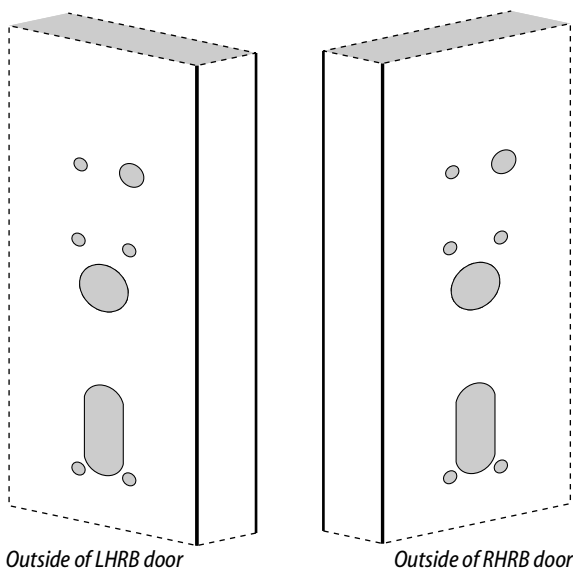


Figure 2 Drilling the trim holes for use with Precision Hardware exit hardware

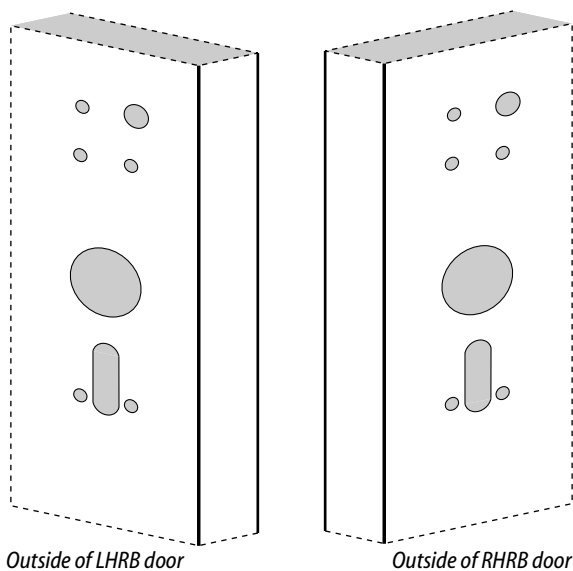


Figure 3 Drilling the trim holes for use with Von Duprin exit hardware

5 Drill holes and mortise door surface

Caution: Check for the correct lock function, hand, and bevel before drilling.

- 1 Drill the trim holes listed below; follow the instructions on the trim template. See Figure 2 or Figure 3, and Figure 4.
 - battery bracket hole
 - 7/16" diameter
 - through door
 - battery bracket/harness hole
 - 7/8" diameter
 - through door
 - escutcheon mounting holes
 - 7/16" diameter
 - through door
 - optional cylinder hole
 - 1 3/8" diameter for use with Precision Hardware exit devices;
 - 2" diameter for use with Von Duprin exit devices
 - for rim and vertical rod exit devices, through door; for mortise exit devices, from outside into mortise cavity
 - drill for EV function only
 - lift finger slot
 - for Precision Hardware exit devices, 1 1/8" diameter slot
 - for Von Duprin exit devices, 3/4" diameter slot
 - through door

Note 1: To locate the center of a hole on the opposite side of the door, drill a pilot hole through the door.

Note 2: For holes through the door, drill halfway from each side of the door to keep the door from splintering.

- 2 **For new installations**, drill the exit hardware holes and mortise the inside surface of the door according to the instructions provided by the exit hardware manufacturer.

Note: The B.A.S.I.S. outside escutcheon is mounted using the four lock stile case mounting holes, labeled 'A' on the exit hardware template.

Preparing the door

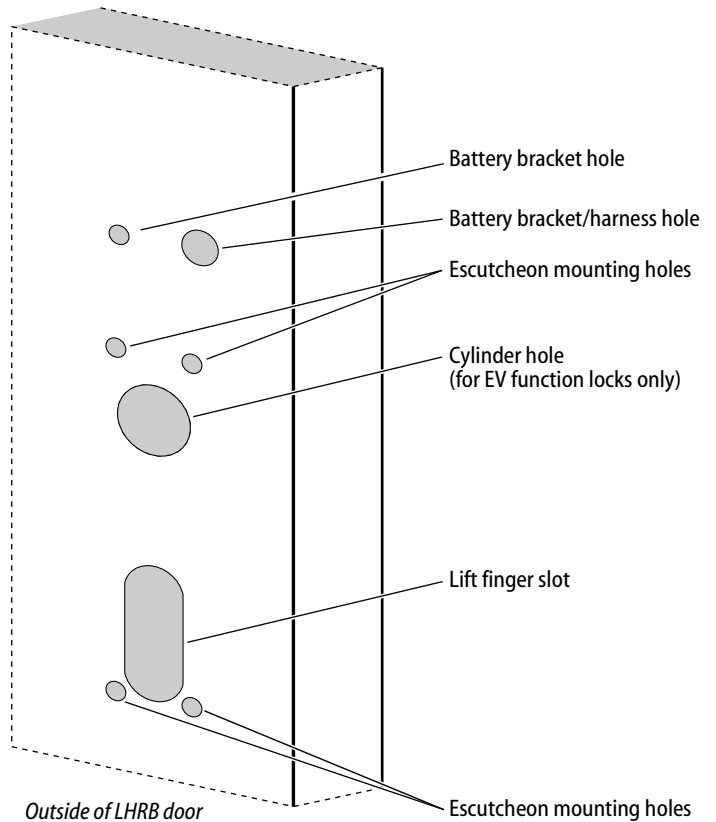


Figure 4 Trim hole guide—Precision Hardware door preparation shown

Installing the exit hardware and trim

6 Install mortise case (mortise exit devices only)

Install the mortise case in the door; follow the instructions provided by the exit hardware manufacturer.

7 Install cylinder (Von Duprin EV function rim and rod exit devices only)

- 1 To determine the correct spindle length, try the cylinder in the door while holding the B.A.S.I.S. escutcheon and lock stile case in place.
Then break off the spindle at the groove where it will engage correctly with the latching mechanism.
Break off the mounting screws as shown in Figure 5.
- 2 From the front of the escutcheon, insert the cylinder into the cylinder opening.
- 3 Holding the cylinder in position in the escutcheon, insert the cylinder mounting sleeve through the back of the escutcheon, over the cylinder.
- 4 Orient the cylinder and clamp plate as shown in Figure 5. From the back of the escutcheon, secure the cylinder and mounting sleeve using the clamp plate and mounting screws.

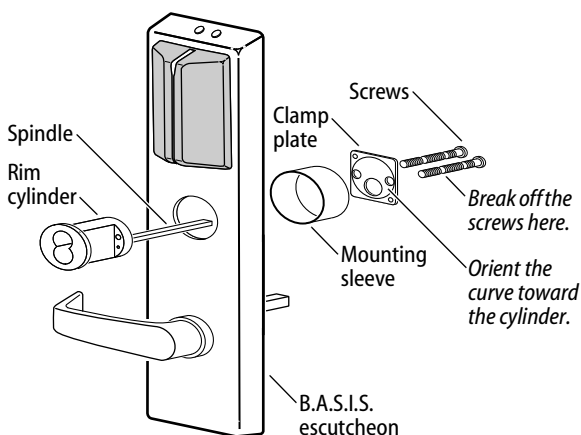


Figure 5 Installing the cylinder for Von Duprin rim and rod exit devices

8 Remove backup battery tab

Caution 1: For the lock to operate properly, you must remove the backup battery tab.

Caution 2: Do not connect the battery pack before you have removed the backup battery tab. Doing so may cause the lock to malfunction.

- 1 Locate the backup battery tab on the inside of the B.A.S.I.S. escutcheon.
- 2 Pull down on the tab and remove it from the B.A.S.I.S. escutcheon to turn on the backup battery.

Installing the exit hardware and trim

9 Route wire harnesses and position B.A.S.I.S. escutcheon

- 1 From the outside of the door, feed the com port and battery connector through the battery bracket/harness hole as shown in Figure 6.

Caution 1: When routing the connectors, make sure the harnesses are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

Caution 2: Do not put too much strain on the wire harness either by pulling too hard on it or by dangling the escutcheon from it.

- 2 Rest the B.A.S.I.S. escutcheon on the door by inserting the trim studs into the mounting holes.

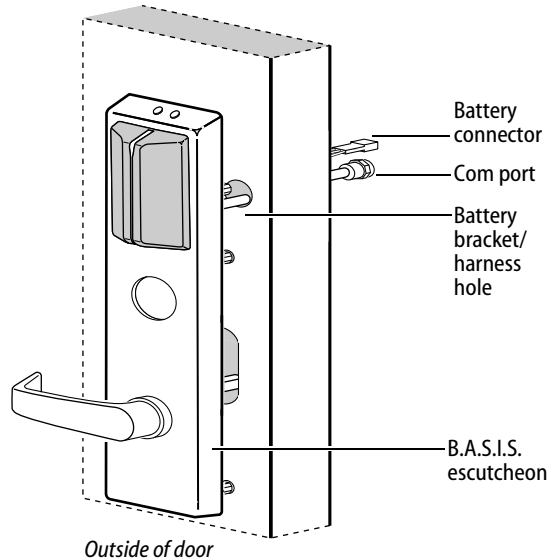


Figure 6 Feeding the wire harness connectors through the battery bracket/harness hole

Installing the exit hardware and trim

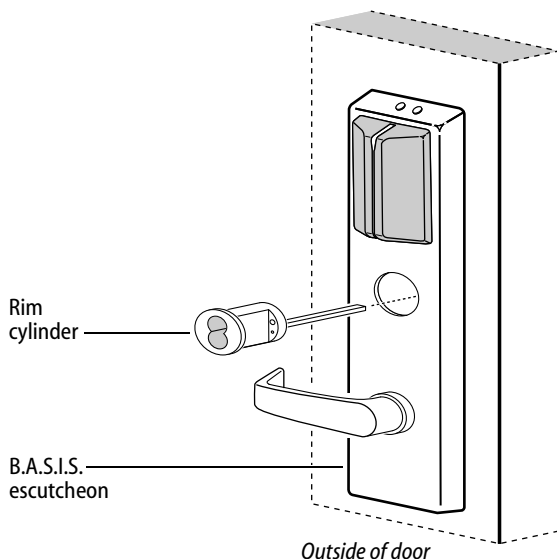


Figure 7 Installing the cylinder

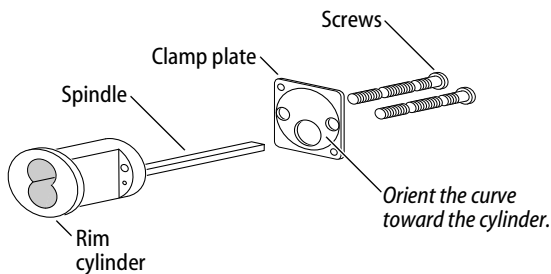


Figure 8 Rim cylinder components

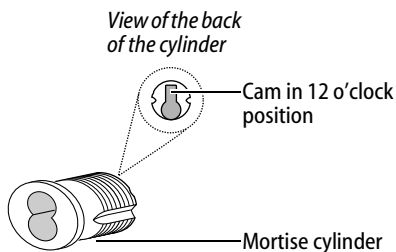


Figure 9 Mortise cylinder components

10 Install cylinder (EV function only)

For Precision hardware rim and rod exit device installations

- 1 To determine the correct spindle length, try the cylinder in the door while holding the B.A.S.I.S. escutcheon and lock stile case in place.
Then break off the spindle at the groove where it will engage correctly with the latching mechanism.
Break off the mounting screws at the groove where they will secure the clamp plate to the cylinder.
- 2 Insert the cylinder through the cylinder opening in the B.A.S.I.S. escutcheon and into the door as shown in Figure 7.
- 3 Orient the cylinder and clamp plate as shown in Figure 8. From the inside of the door, secure the cylinder using the clamp plate and mounting screws.

For all mortise exit device installations

- 1 **For doors less than 2" in thickness**, place the cylinder ring provided on the cylinder.
- 2 Rotate the cylinder cam to the 12 o'clock position, as shown in Figure 9.
- 3 Using a cylinder wrench (ED211), insert the cylinder through the cylinder opening in the B.A.S.I.S. escutcheon and screw the cylinder into the mortise case. Make sure that the figure-8 hole is in the 12 o'clock position.

Caution: Do not screw the cylinder in too tightly. Doing so may cause you or someone else to be locked out.

Installing the exit hardware and trim

11 Install exit hardware and secure B.A.S.I.S. escutcheon

Install the exit hardware (lock stile case, case cover, touch bar assembly and mounting bracket, latches and rods [if applicable], and related hardware); follow the instructions provided by the exit hardware manufacturer.

Note: Make any adjustments to the exit hardware necessary for compatibility with lever function outside trim.

The B.A.S.I.S. escutcheon is secured on the outside of the door by the screws used to mount the lock stile case on the inside of the door.

Caution: When securing the escutcheon, make sure that it does not pinch the wire harness.

12 Install core (EV function only)

- 1 Insert the control key into the core and rotate the key 15 degrees to the right.
- 2 With the control key in the core, insert the core into the cylinder as shown in Figure 10.
- 3 Rotate the control key 15 degrees to the left and withdraw the key.

Caution: The control key can be used to remove cores and to access doors. Provide adequate security for the control key.

13 Install mortise case faceplate (mortise exit devices only)

- 1 Secure the mortise case faceplate to the mortise case; follow the instructions provided by the exit hardware manufacturer.
- 2 Check the lock for proper operation.

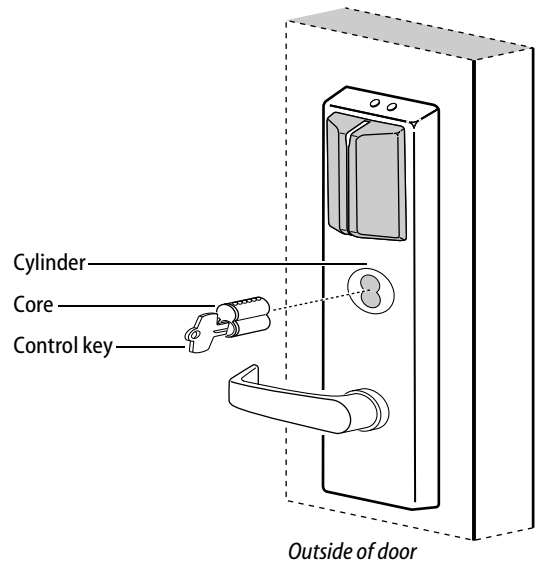


Figure 10 Installing the core

Completing the installation

14 Install strike(s)

Note: If retrofitting the B.A.S.I.S. trim to an existing exit hardware installation, skip this task.

- 1 Install the strike(s) in the door frame or door stop; follow the instructions provided by the exit hardware manufacturer.
- 2 Check the lock for proper alignment between the strike(s) and latch(es).

15 Install com port in battery bracket

- 1 Routing the wire harness into the bottom of the battery bracket, slide the com port into its mounting slot inside the battery bracket as shown in Figure 11.

Note: The com port is used when programming the control electronics for the lock.

- 2 Tighten the nut to secure the com port to the bracket.

16 Install battery bracket on door

- 1 Position the battery bracket on the inside of the door as shown in Figure 12.

Note: If installing with a surface rod exit device, the battery bracket is mounted over the upper rod.

- 2 Secure the battery bracket to the door using two of the mounting screws provided.

Note: For doors less than 2" in thickness, use the 1 1/4" screws. For doors 2" or greater, use the 1 3/4" screws.

Caution: When routing the wire harness, make sure the wires are not routed across any sharp edges or over any surface that could damage their sleeving or wire insulation.

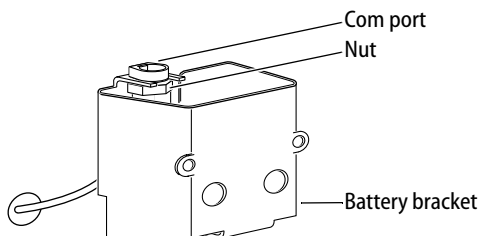


Figure 11 Installing the com port in the battery bracket

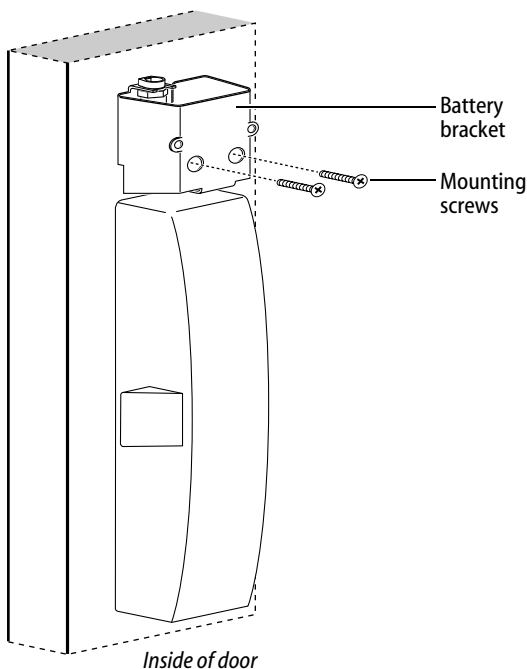


Figure 12 Installing the battery bracket on the door

Completing the installation

17 Install battery pack in bracket

- 1 Connect the battery pack to the battery connector on the wire harness as shown in Figure 13.

Note: The battery connection has 3 wires and 3 pins.
The wire colors are:

- red with white stripe
- white
- black with white stripe.

Caution: When connecting the battery pack, make sure:

- there are no loose wire connections where the wires are inserted into the connectors
 - the connectors are firmly mated.
- 2 Place the battery pack in the holder inside the battery bracket and dress the wire harness inside the bracket.
- Caution:** Make sure you do not damage the sleeving on the battery pack. Doing so may cause the batteries to drain.

- 3 **If installing with a surface rod device**, dress the wire harness inside the bracket to the left of the rod so that the harness will not interfere with the movement of the rods.

We recommend that you loosely coil the harness and use a cable tie to secure the coil. To avoid damaging the harness, do not put any sharp bends in it or flex it close to the connectors.

Caution: Failure to dress the wire harness away from the rod could damage the wire harness, causing the lock's electronics to not work properly.

18 Install battery cover on bracket

- 1 **If installing with a surface rod exit device**, remove the knockouts for the rod from the battery cover. See Figure 14.
- 2 Making sure that the battery cover does not pinch any wires, place the cover over the bracket.
- 3 Use a T15 TORX bit driver to secure the battery compartment cover with the security screws. Tighten firmly. See Figure 14.

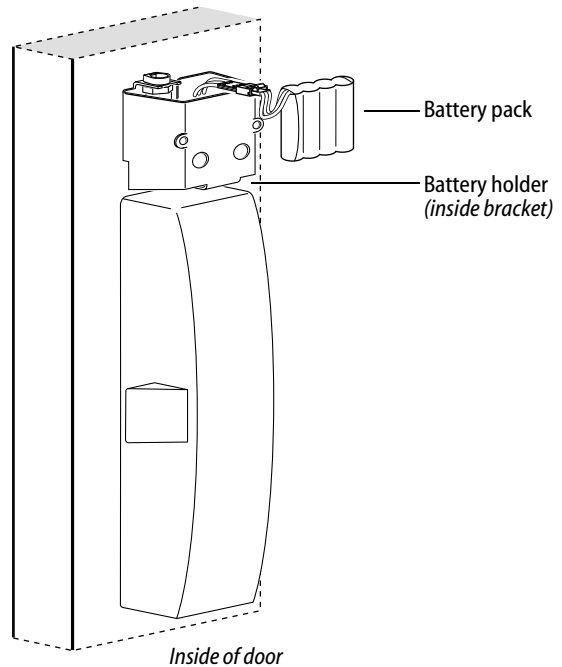


Figure 13 Connecting the battery pack

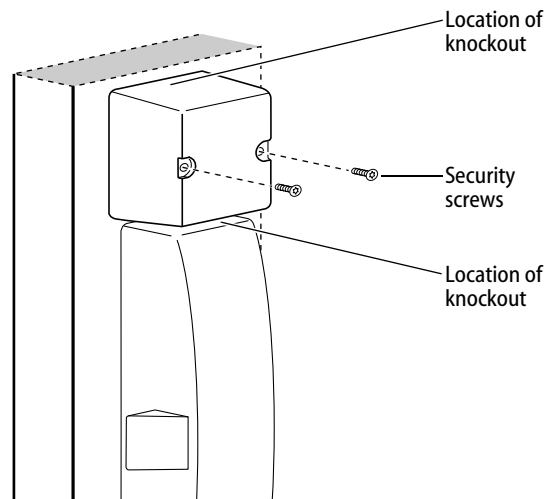


Figure 14 Installing the battery cover on the bracket

Completing the installation

19 Test lock

To test the lock for proper operation before the lock is programmed, use the temporary operator card that came with the lock. This card is for temporary use only. After permanent cards have been programmed for the lock, the temporary card should be deleted.

- 1 Use the temporary operator card to activate the lock.
When the lock detects the presence of a card for the first time, the lock performs a series of diagnostic self-tests. If no problem is detected, the lock responds with 4 red LED flashes, simultaneous with 4 green LED flashes and 4 short tones.
If a problem is detected, the lock's red LED and green LED simultaneously flash in a repeating pattern (and no tones sound). The lock's control electronics board must be replaced. For instructions, see the *B.A.S.I.S. G Service Manual* (T63300) or the *B.A.S.I.S. V Service Manual* (T61805).

Note: *If the lock has a proximity card reader, it may have already been activated by the presence of an object near the card reader.*

- 2 Use the temporary operator card to access the lock.
The green light flashes and the locking mechanism unlocks.
- 3 Turn the lever and open the door.

If the mechanism doesn't unlock, refer to the following table. For additional troubleshooting instructions, see the *B.A.S.I.S. G Service Manual* or the *B.A.S.I.S. V Service Manual*.

LEDs	Sounder	You should
Single red flash	—	Use the card at a moderate speed.
Red flashes	3 short tones	Use the temporary operator card provided with the lock.
—	—	Check the battery connection.

For EV function locks

Insert and turn the key to unlatch the door.

Important: When the trim and exit hardware installation is complete, perform all testing specified by the exit hardware manufacturer.

C

INDEX

A

- adding key override sensing 11-10
- armored front
 - part drawings for 2-17
 - part numbers for 2-18
- audible responses 12-2
- auxiliary bolt
 - part drawings for 2-17
 - part numbers for 2-18
 - removing and turning over 6-8
- auxiliary bolt spring
 - part drawings for 2-17
 - part numbers for 2-18
- auxiliary return levers
 - part drawings for 2-17
 - part numbers for 2-18

B

- B.A.S.I.S. Transport 11-13
- backup battery for EX trim
 - part drawings for 3-3
 - part numbers for 4-5
 - removing and reinstalling 11-2
- backup battery for standard B.A.S.I.S. Locks
 - part drawings for 2-5
 - part numbers for 4-5
 - removing and reinstalling 11-2
- battery bracket
 - part drawings for 3-3
 - part numbers for 3-5
 - removing and reinstalling 8-6
- battery bracket screws
 - part drawings for 3-3
 - part numbers for 4-9

- battery cover
 - part drawings for 3-3
 - part numbers for 3-5
 - removing and reinstalling 8-2
- battery cover screws
 - part drawings for 3-3
 - part numbers for 4-9
- battery door
 - part drawings for 2-5
 - part numbers for 2-7
- battery door screw
 - part drawings for 2-5
 - part numbers for 4-9
- battery pack for EX trim
 - part drawings for 3-3
 - part numbers for 3-5
 - removing and reinstalling 8-4
- battery pack for standard B.A.S.I.S. Locks
 - part drawings for 2-5
 - part numbers for 2-7
 - removing and reinstalling 5-3
 - upgrading 11-4
- beam
 - part drawings for 3-3
 - part numbers for 3-4
 - removing and reinstalling 10-24
- beam roller
 - part drawings for 3-3
 - part numbers for 3-4
 - removing and reinstalling 10-24
- bevel, changing 6-5
- bushings
 - part drawings for 2-5
 - part numbers for 2-6

C

card 4-11

case assembly

- part drawings for 2-17
- part numbers for 2-18

case cover

- part drawings for 2-17
- part numbers for 2-18

case cover mounting screws

- part drawings for 2-17
- part numbers for 2-18

case mounting screws

- part drawings for 2-17
- part numbers for 2-18

c-clip

- part drawings for 3-3
- part numbers for 3-4

certifications and standards 1-5

changing lock's online mode 11-18

changing mortise lock's hand and bevel 6-3

clearing lock's diagnostics code 11-20

control electronics boards for EX trim

- part drawings for 3-3
- part numbers for 4-5
- removing and reinstalling 10-10

control electronics boards for standard B.A.S.I.S. Locks

- part drawings for 2-5
- part numbers for 4-5
- removing and reinstalling 9-10

conversion harness

- part numbers for 4-6

core for EX trim

- removing and reinstalling 8-9

core for standard B.A.S.I.S. Locks

- removing and reinstalling 5-14, 7-2

cylinder clamp plate

- part drawings for 2-17
- part numbers for 2-18
- removing and reinstalling 6-19
- removing and turning over 6-7

cylinder, mortise for EX trim

- part numbers and drawings for 3-15
- removing and reinstalling 8-10

cylinder, mortise for standard B.A.S.I.S. Locks

- part drawings for 2-19
- part numbers for 2-20
- removing and reinstalling 5-16

cylinder, rim for EX trim

- part numbers and drawings for 3-16
- removing and reinstalling 8-11

cylindrical chassis

- part drawings for 2-21
- part numbers for 2-22
- removing and reinstalling 7-18

D

deadbolt

- part drawings for 2-17
- part numbers for 2-18
- removing and reinstalling 6-17

deadlocking lever

- part drawings for 2-17
- part numbers for 2-18

deadlocking spring

- part drawings for 2-17
- part numbers for 2-18

documentation package 1-6

dual validation reader for EX trim

- part drawings for 3-9
- part numbers for 4-4

dual validation reader for standard B.A.S.I.S. Locks

- part drawings for 2-11
- part numbers for 4-4

dual validation reader trim for EX trim

- part drawings for 3-9
- part numbers for 3-10

dual validation reader trim for standard B.A.S.I.S. Locks

- part drawings for 2-11
- part numbers for 2-12

DV function cylindrical lock

- function description 2-4

E

electronics board mounting screw for EX trim

- part drawings for 3-3
- part numbers for 4-7

electronics board mounting screw for standard B.A.S.I.S. Locks

- part drawings for 2-5
- part numbers for 4-7

enabling communications without a card or password 12-3

escutcheon for EX trim

- part drawings for 3-3
- part numbers for 3-4
- removing and reinstalling 8-13

escutcheon gasket for EX trim

- part drawings for 3-3
- part numbers for 3-5
- removing and reinstalling 10-3

escutcheon gasket for standard B.A.S.I.S. Locks

- part drawings for 2-5
- part numbers for 2-6
- removing and reinstalling 9-2

escutcheons for standard B.A.S.I.S. Locks

- part drawings for 2-5
- part numbers for 2-6
- removing and reinstalling 5-3, 7-5

EV function for EX trim

- function description 3-2

EV function mortise lock

- function conversion 6-10
- function description 2-2

exit hardware

- removing and reinstalling 8-8

F

faceplate

- part drawings for 2-19
- part numbers for 2-20
- removing and reinstalling 5-15

faceplate screw 2-19

function conversion 6-10

function descriptions for EX trim 3-2

function descriptions for standard B.A.S.I.S. Locks 2-2, 2-4

FV function for EX trim

- function description 3-2

FV function mortise lock

- function conversion 6-10
- function description 2-2

H

hand, changing for EX trim 10-30

hand, changing for standard B.A.S.I.S. Locks 6-5

harness clamp

- part drawings for 2-5
- part numbers for 2-6
- removing and reinstalling 9-4

HID proximity reader for EX trim

- part drawings for 3-12
- part numbers for 4-4

HID proximity reader for standard B.A.S.I.S. Locks

- part drawings for 2-14
- part numbers for 4-4

HID proximity reader trim for EX trim

part drawings for 3-12

part numbers for 3-13

HID proximity reader trim for standard B.A.S.I.S. Locks

part drawings for 2-14

part numbers for 2-15

history event types A-1

hub lever spring

part drawings for 2-17

part numbers for 2-18

hubs

part drawings for 2-17

part numbers for 2-18

L

latch 2-23

latch lever

part drawings for 2-17

part numbers for 2-18

latch screw 2-23

latchbolt

part drawings for 2-17

part numbers for 2-18

removing and turning over 6-9

lens covers for EX trim

part drawings for 3-3

part numbers for 4-6

removing and reinstalling 10-9

lens covers for standard B.A.S.I.S. Locks

part drawings for 2-5

part numbers for 4-6

removing and reinstalling 9-3

lever return springs

part drawings for 3-3

part numbers for 4-9

removing and reinstalling 10-8

levers for EX trim

part drawings for 3-3, 3-17

part numbers for 3-17

removing and reinstalling 10-26

levers for standard B.A.S.I.S. Locks

part drawings for 2-5

part numbers for 2-6

removing and reinstalling 5-2, 7-3

lift finger

part drawings for 3-3

part numbers for 3-4

removing and reinstalling 10-4

lift finger screw

part drawings for 3-3

part numbers for 4-9

lock history event types A-1

locking bar

part drawings for 2-17

part numbers for 2-18

locking plate

part drawings for 3-3, 3-6

part numbers for 3-4

removing and reinstalling 10-20

long hub lever

part drawings for 2-17

part numbers for 2-18

lower auxiliary spring

part drawings for 2-17

part numbers for 2-18

lower escutcheon screws

part drawings for 2-5

part numbers for 4-8

LV function mortise lock

function conversion 6-10

function description 2-3

M

magnetic stripe card reader for EX trim

part drawings for 3-3

part numbers for 4-4

magnetic stripe card reader for standard B.A.S.I.S. Locks

part drawings for 2-5

part numbers for 4-4

magnetic stripe card reader trim for EX trim

part drawings for 3-3

part numbers for 3-4

magnetic stripe card reader trim for standard B.A.S.I.S. Locks

part drawings for 2-5

part numbers for 2-6

mortise case

part drawings for 2-17

part numbers for 2-18

removing and reinstalling 6-2

mortise case spacer

part drawings for 2-17

part numbers for 2-18

motor assembly

part drawings for 3-3

part numbers for 4-10

removing and reinstalling 10-16

motor module

part drawings for 2-17

part numbers for 2-18

removing and reinstalling 6-14

Motorola proximity reader for EX trim

part numbers for 4-4

Motorola proximity reader for standard B.A.S.I.S. Locks

part numbers for 4-4

Motorola proximity reader trim for EX trim

part drawings for 3-12

part numbers for 3-13

Motorola proximity reader trim for standard B.A.S.I.S. Locks

part drawings for 2-14

part numbers for 2-15

mounting plate for EX trim

part drawings for 3-3

part numbers for 3-5

removing and reinstalling 10-6

mounting plate screws for EX trim

part drawings for 3-3

part numbers for 4-9

mounting plate screws for standard B.A.S.I.S. Locks

part drawings for 2-19

part numbers for 2-20

mounting plates for standard B.A.S.I.S. Locks

part drawings for 2-19

part numbers for 2-20

removing and reinstalling 5-13

mounting standoffs

part drawings for 3-3

part numbers for 4-9

removing and reinstalling 10-2

N

NV function mortise lock

function conversion 6-10

function description 2-3

O

opening a lock with dead batteries 12-6

overview

B.A.S.I.S. system 1-2

B.A.S.I.S. locks 1-4

P

part drawings for EX trim

dual validation reader trim 3-9

HID proximity reader trim 3-12

magnetic stripe card reader trim 3-3

- Motorola proximity reader trim 3-12
- smart card reader trim 3-6
- part drawings for standard B.A.S.I.S. Locks
 - cylindrical chassis 2-21
 - dual validation reader trim 2-11
- HID proximity reader trim 2-14
- magnetic stripe card reader trim 2-5
- mortise case 2-17
- Motorola proximity reader trim 2-14
- other cylindrical lock components 2-23
- other mortise lock components 2-19
- smart card reader trim 2-8
- part numbers for EX trim
 - dual validation reader trim 3-10
- HID proximity reader trim 3-13
- magnetic stripe card reader trim 3-4
- Motorola proximity reader trim 3-13
- smart card reader trim 3-7
- part numbers for standard B.A.S.I.S. Locks
 - cylindrical chassis 2-22
 - dual validation reader trim 2-12
- HID proximity reader trim 2-15
- magnetic stripe card reader trim 2-6
- mortise case 2-18
- Motorola proximity reader trim 2-15
- other cylindrical lock components 2-23
- other mortise lock components 2-19
- smart card reader trim 2-9
- PDA 11-13
- primary harness for EX trim
 - part drawings for 3-3
 - part numbers for 4-10
 - removing and reinstalling 10-9 to 10-10

- primary harness for standard B.A.S.I.S. Locks
 - part drawings for 2-5
 - part numbers for 4-6
 - removing and reinstalling 9-7
- programming cable 4-11

R

- reader assemblies for EX trim
 - removing and reinstalling 10-13
- reader assemblies for standard B.A.S.I.S. Locks
 - removing and reinstalling 9-19
- reader assembly mounting screws for EX trim
 - part drawings for 3-3
 - part numbers for 4-7
- reader assembly mounting screws for standard B.A.S.I.S. Locks
 - part drawings for 2-5
 - part numbers for 4-7
- reader gasket for EX trim
 - part drawings for 3-3
 - part numbers for 3-4
- reader gasket for standard B.A.S.I.S. Locks
 - part drawings for 2-5
 - part numbers for 2-6
- removing and reinstalling EX trim parts
 - backup battery 11-2
 - battery bracket 8-6
 - battery cover 8-2
 - battery pack 8-4
 - beam and beam roller 10-24
 - control electronics boards 10-10
 - core 8-9
 - cylinder, mortise 8-10
 - cylinder, rim 8-11
 - escutcheon 8-13
 - escutcheon gasket 10-3
 - exit hardware 8-8
 - lens covers 10-9
 - lever return springs 10-8
 - levers 10-26
 - lift finger 10-4
 - locking plate 10-20
 - motor assembly 10-16
 - mounting plate 10-6
 - mounting standoffs 10-2
 - primary harness 10-9 to 10-10
 - reader assemblies 10-13
 - shear pin 10-28
 - yoke 10-22

- removing and reinstalling standard B.A.S.I.S. parts
 - backup battery 11-2
 - battery pack 5-3
 - control electronics boards 9-10
 - core 5-14, 7-2
 - cylinder 5-16
 - cylinder clamp plate 6-19
 - cylindrical chassis 7-18
 - deadbolt 6-17
 - escutcheon gasket 9-2
 - escutcheons 5-3, 7-5
 - faceplate 5-15
 - harness clamp 9-4
 - lens covers 9-3
 - levers 5-2, 7-3
 - mortise case 6-2
 - motor module 6-14
 - mounting plates 5-13
 - primary harness 9-7
 - reader assemblies 9-19
 - rose liners 7-15
 - sensor harness 9-6
 - sensor module 6-16
 - throw member 7-2
 - turn knob hub 6-17
 - turn knob spacer 6-17
 - upgrade cable 9-5
- replacement kits
 - batteries 4-5
 - cable and harness 4-6
 - control electronics boards 4-5
 - lens cover 4-6
 - readers 4-4
 - screws 4-7
 - sensor modules 4-10
- replacing the battery pack 11-4
- resetting lock's use count 11-19
- retaining ring
 - part drawings for 2-17
 - part numbers for 2-18
- rose liners
 - part numbers and drawings for 2-23
 - removing and reinstalling 7-15

S

- sensor harness
 - part drawings for 2-5
 - part numbers for 4-6
 - removing and reinstalling 9-6
- sensor module
 - part drawings for 2-17
 - part numbers for 2-18, 4-10
 - removing and reinstalling 6-16

shear pin
 part drawings for 3-3
 part numbers for 4-10
 removing and reinstalling 10-28

shoulder screws
 part drawings for 3-6
 part numbers for 4-9

smart card reader for EX trim
 part numbers for 4-4

smart card reader for standard B.A.S.I.S. Locks
 part numbers for 4-4

smart card reader trim for EX trim
 part drawing for 3-6
 part numbers for 3-7

smart card reader trim for standard B.A.S.I.S. Locks
 part drawing for 2-8
 part numbers for 2-9

stop pin
 part drawings for 2-17
 part numbers for 2-18

strain relief
 part drawings for 2-17
 part numbers for 2-18

strike box
 Cylindrical Locks 2-23
 Mortise Locks 2-19

strike plate
 Cylindrical Locks 2-23
 Mortise Locks 2-19

strike screw
 Cylindrical Locks 2-23
 Mortise Locks 2-19

support, technical 1-8

T

tape for mounting the sounder for EX trim
 part drawings for 3-3
 part numbers for 4-6

tape for mounting the sounder for standard B.A.S.I.S. Locks
 part drawings for 2-5
 part numbers for 4-6

technical documentation package 1-6

technical support 1-8

through-bolt screw 2-23

throw member 7-2

trim hole inserts
 part drawings for 2-5
 part numbers for 2-7

troubleshooting 12-7

turn knob hub
 part drawings for 2-17
 part numbers for 2-18
 removing and reinstalling 6-17

turn knob hub spacer
 part drawings for 2-17
 part numbers for 2-18
 removing and reinstalling 6-17

U

unlocking door temporarily 11-19

upgrade cable
 part drawings for 2-5
 part numbers for 4-6
 removing and reinstalling 9-5

upgrading the battery pack 11-4

upper auxiliary spring
 part drawings for 2-17
 part numbers for 2-18

upper escutcheon screws for EX trim
 part drawings for 3-3
 part numbers for 4-7

upper escutcheon screws for standard B.A.S.I.S. Locks
 part drawings for 2-5
 part numbers for 4-7

V

viewing diagnostics information 11-14

visual responses 12-2

W

washer
 part drawings for 3-6
 part numbers for 3-5

Y

yoke
 part drawings for 3-6
 part numbers for 3-4
 removing and reinstalling 10-22

